



Asus X540S notebook PC Hard drive Replacement

This guide will show you how to remove the hard drive on an Asus X540S notebook.

Written By: Padraic Hoselton



INTRODUCTION

This guide will show you how to remove the hard drive on an Asus X540S notebook.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)



PARTS:

- [1 TB SSD / Upgrade Bundle](#) (1)
- [250 GB SSD / Upgrade Bundle](#) (1)
- [500 GB SSD / Upgrade Bundle](#) (1)
- [2 TB SSD](#) (1)

Step 1 — Optical Drive




- Open the Optical Drive to allow removal of keyboard before powering down computer.

Step 2



- Remove the two 15mm Philips #1 screws.
- Remove the two 12mm Philips #1 screws.
- Remove the six 9mm Philips #1 screws.

Step 3

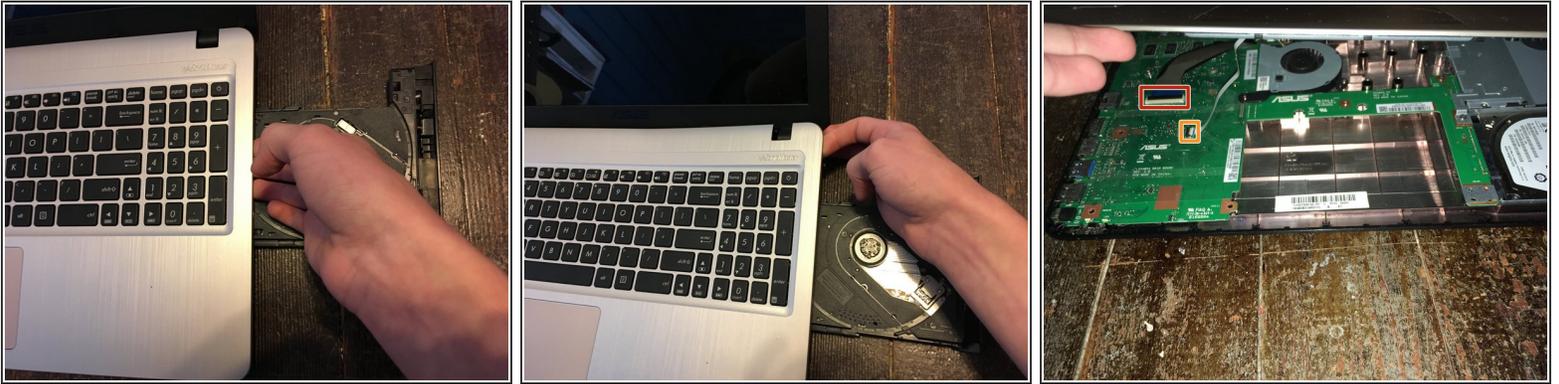



- Lift the side of the top.
- Remove the keyboard cable.
- Remove the trackpad cable.
- ⓘ Lift the release tabs on the keyboard/trackpad connectors

Step 4 — Hard drive



- Remove the one Philips #1 screw.
- Slide the hard drive out.

Step 5

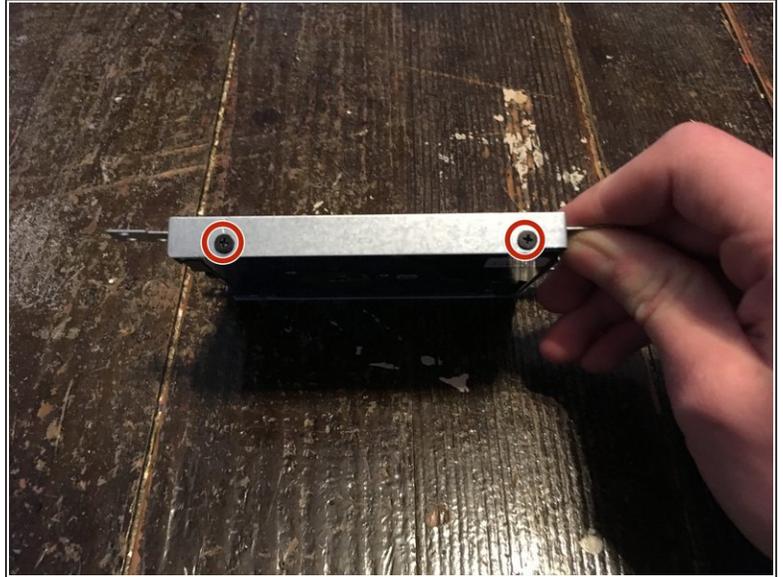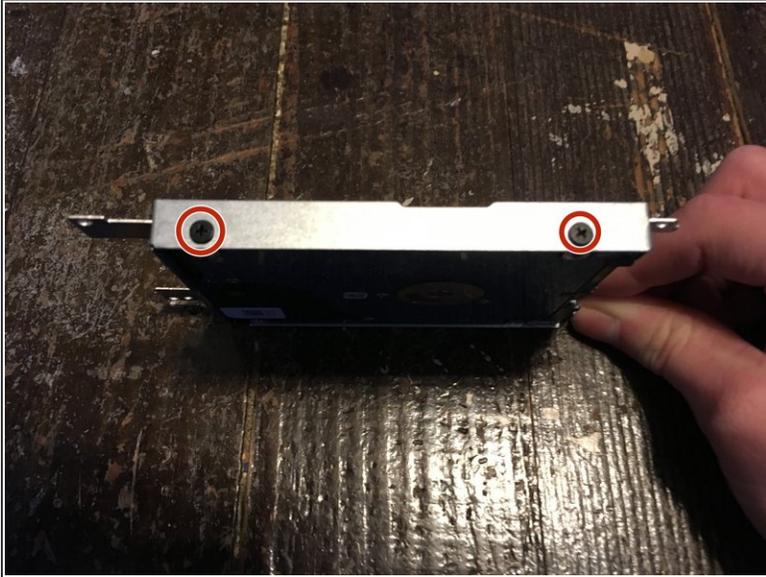

- Remove the four Philips #1 screws.

To reassemble your device, follow these instructions in reverse order.