

Huawei P10 Lite Battery Replacement

This guide shows how to replace the battery in your Huawei P10 Lite.

Written By: Dominik Schnabelrauch





INTRODUCTION

Use this guide to replace the battery in your Huawei P10 Lite smartphone.

TOOLS:

- Phillips #00 Screwdriver (1)
- Spudger (1)
- Tweezers (1)
- iFixit Opening Picks set of 6 (1)
- iOpener (1)

PARTS:
Huawei P10 Lite, P9, P9 Lite, and Honor 8 Replacement Battery (1)

Step 1 — Back cover



- Insert the tip of an opening pick between the back cover and the mid frame and slide it around the phone, to cut the adhesive.
 - Using a suction handle to lift the back cover may help to get an initial gap for the opening pick to put in.

(i) If the adhesive is hard to cut, <u>use an iOpener</u> to loosen it.


Step 2



- After you cut the adhesive on every edge, twist your opening pick, to separate the rear cover from the phone.
- Flip the rear cover over to the right side of the phone.


This document was generated on 2021-01-15 09:08:23 AM (MST).

Step 3

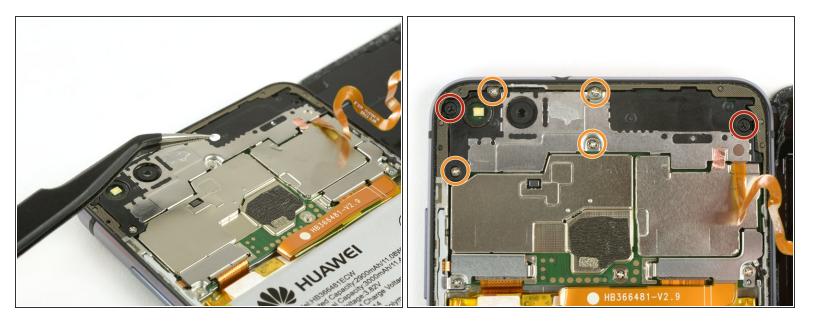

- Use a pair of tweezers to remove the sticker.
- Remove the two Phillips #00 screws.
- Remove the four 2.5 mm Phillips #00 screws.

Step 4

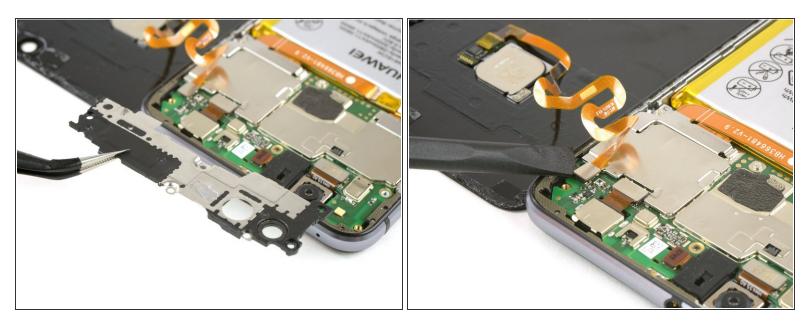


- Use tweezers to remove the mainboard shield.
- Use the flat end of a spudger to disconnect the finger print sensor flex cable.
 When reassembling apply new adhesive where it is necessary.

Step 5 — Battery Disconnection




- Remove the Phillips screw holding the battery connector plate in place.
- Remove the battery connector plate.
- Use the flat end of a spudger to disconnect the battery flex cable.

Step 6 — Battery

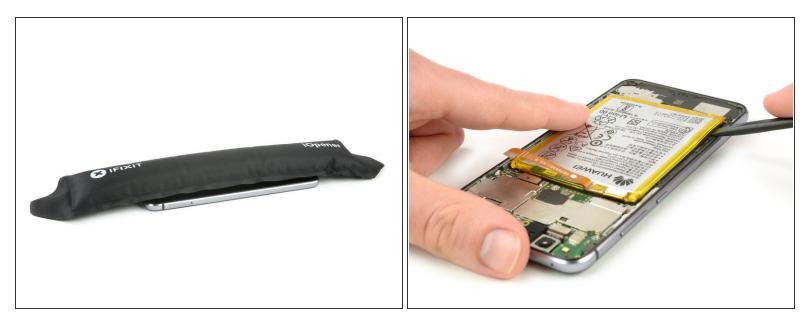

- <u>Use an iOpener</u> to loosen the adhesive beneath the battery.
- Insert a spudger between the battery and the mid frame to create a gap.
 A Be careful not to puncture or crease the battery.
- Insert an opening pick or use the spuder in the gap to cut the adhesive beneath the battery.
 There are flex cables running under the battery. Don't damage them with your tools.

Step 7

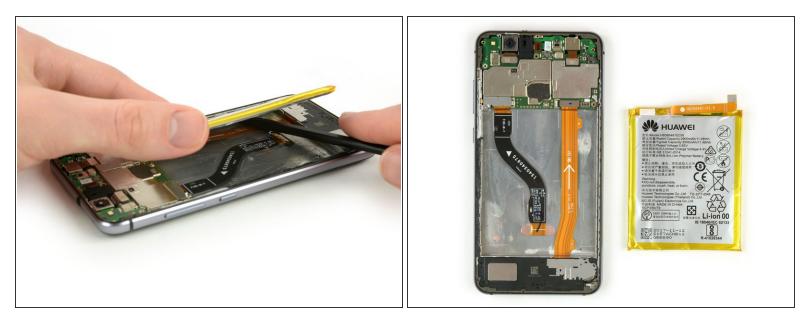

- Use a spudger to cut the rest of the adhesive and lever the battery out of the phone.
- Remove the battery.
 - When reassembling your phone replace old adhesive with <u>double-sided tape</u> or <u>pre-cut</u> <u>adhesive strips</u>.
 - Never reinstall a battery that has been bent or damaged during removal.

To reassemble your device, follow these instructions in reverse order. When reassembling your phone apply new adhesive where it is necessary.