

Dell Vostro 1520 Memory Module Replacement

Written By: Johnathan Hammond





• Phillips #0 Screwdriver (1)

Step 1 — Battery




 Slide the battery lock latch on the left away from the battery.

Step 2



 Slide the battery latch at the center toward the right..

Step 3

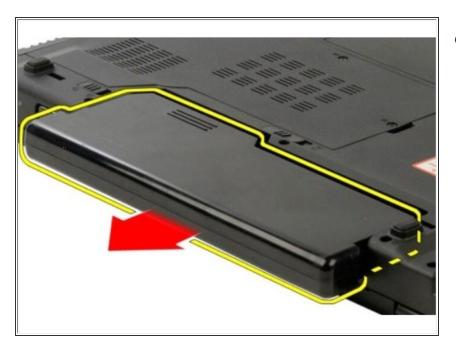

 Slide the battery itself toward the back of the computer and remove

Step 4 — **Processor and Memory Access Panel**



 Loosen the two captive screws on the access panel.

Step 5



- Lift the right side of the access panel.
- Remove the access panel.

Step 6 — Memory Module



 Using your fingertips, carefully spread apart the securing clips on each end of the memory module

connector until the memory module pops up.

Step 7



 Remove the memory module from the socket

To reassemble your device, follow these instructions in reverse order.