



Huawei M750 Camera Replacement

Use this guide to reconnect the camera module, or replace the camera lens.

Written By: Stuart Smith



INTRODUCTION

This guide will show how to replace the camera on a Huawei M750 smartphone.



TOOLS:

- [T5 Torx Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Tweezers - Pro/ESD/Angled](#) (1)
-

Step 1 — Battery



- Depress the top of the battery cover, and pull downwards towards the base of the phone.

Step 2



- Remove the battery by levering the battery out, using the cut just below the camera.

Step 3 — Back Panel



- Use the opening tool to start prying the camera and speaker cover, starting from the battery side.
- Work the opening tool around the border of the camera and speaker cover, until it comes loose.

Step 4



- Using the T5 Torx screwdriver, remove the six 6mm screws.

Step 5




- Using the opening tool, pry the back panel from the front panel.
 - Work your way around the phone until the panels separate evenly.
- i** This step may require a substantial amount of leverage.

Step 6 — Camera



- The camera's connection to the motherboard is shown here.
- Using the tweezers, disconnect the port, shown here in the picture.

Step 7

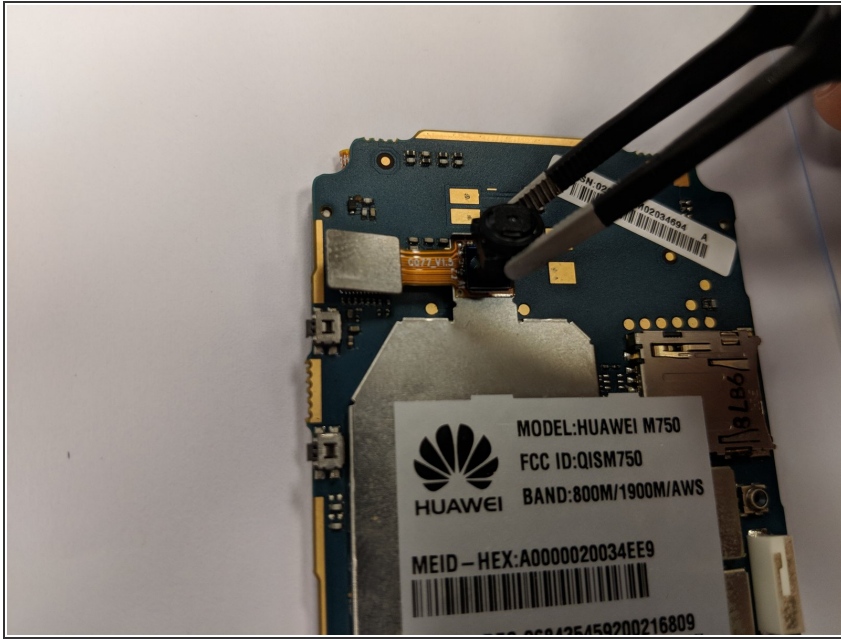

- Using the tweezers, carefully remove the lens and lens casing.
- ⓘ It should be held in by a simple tight fit. The front panel is what keeps the lens secured.
- ⚠ Do not touch the camera lens, or the digital camera component, if possible. This will prevent scratching, or damage.

To reassemble your device, follow these instructions in reverse order.