




Sanitaire SC684 Back Wheels Replacement

This guide will give step by step instructions to replace the back wheels of a Sanitaire SC684.

Written By: Caycie Pascual

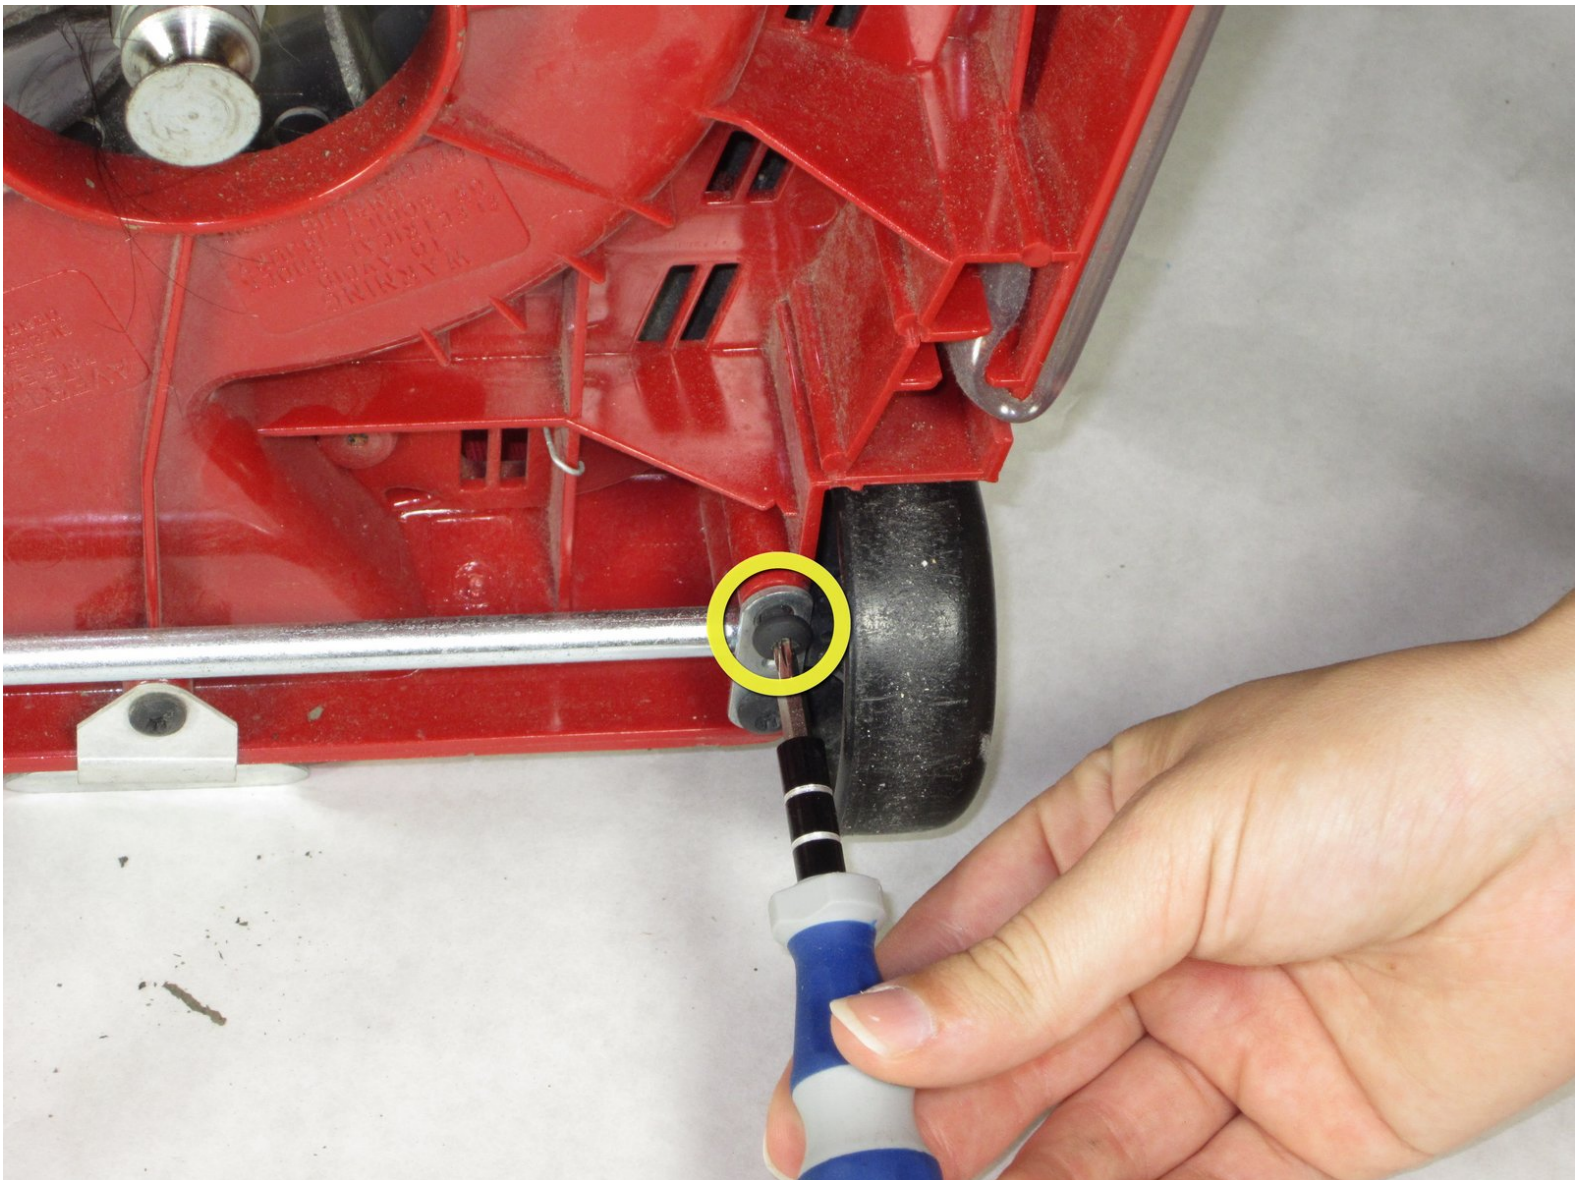

INTRODUCTION


This guide will show you how to remove the back wheels and axle of a Sanitaire SC684 Vacuum and replace them. For this you will need a replacement back wheel and axle part for a Sanitaire SC684. The wheels come attached with the axle and are removed and replaced together.




TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-


Step 1 — Back Wheels

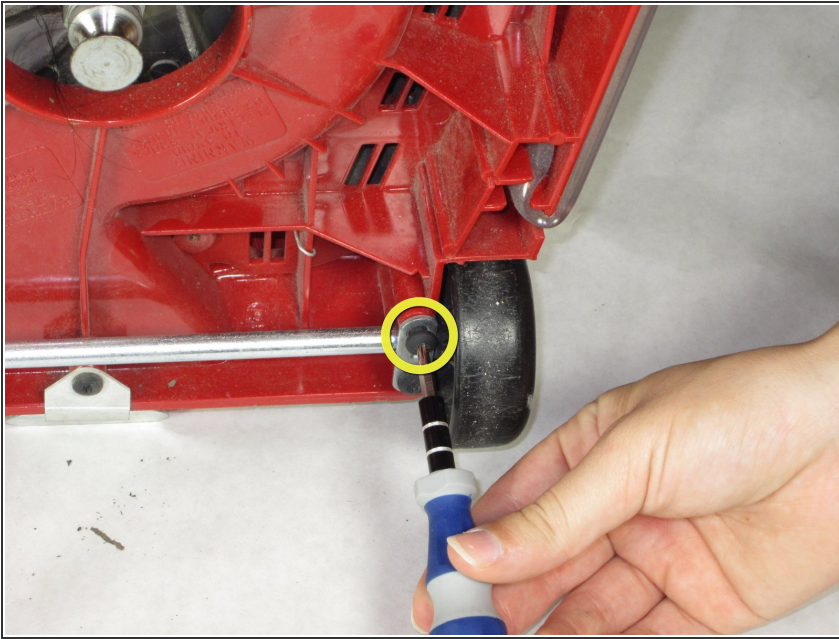


 Be sure to unplug the vacuum before disassembling to prevent electric shock.

- Lay the vacuum on its side.
- Remove the two screws with the Phillips #1 screwdriver that are securing the axle of the back wheels.
- Repeat for the other wheel.

Step 2

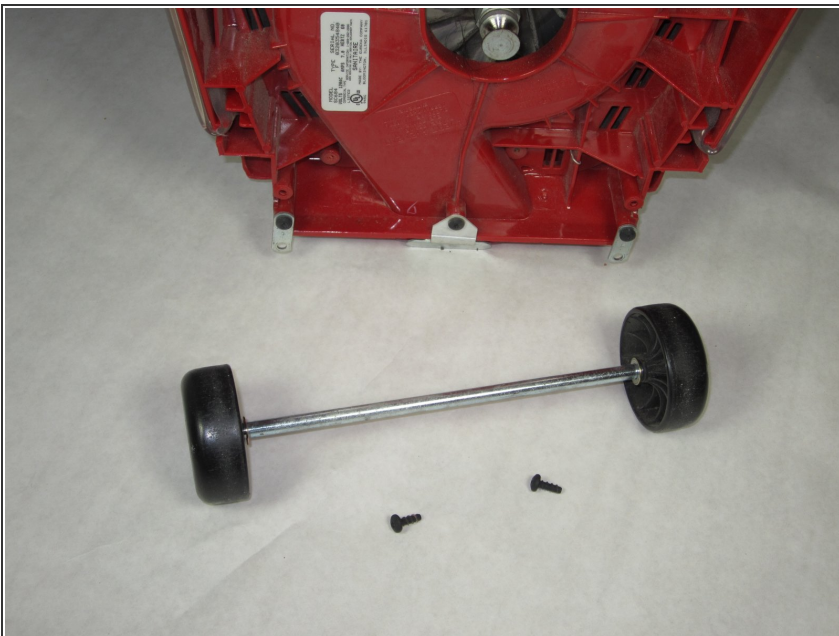

- Pull the wheel's axle towards you and replace back wheels.
-  The wheels come as a unit with the wheel's axle.

To reassemble your device, follow these instructions in reverse order.