




Panasonic KX-T4000R Cordless Phone

Antenna Replacement

This guide instructs you how to replace a broken antenna.

Written By: Elizabeth Kelly

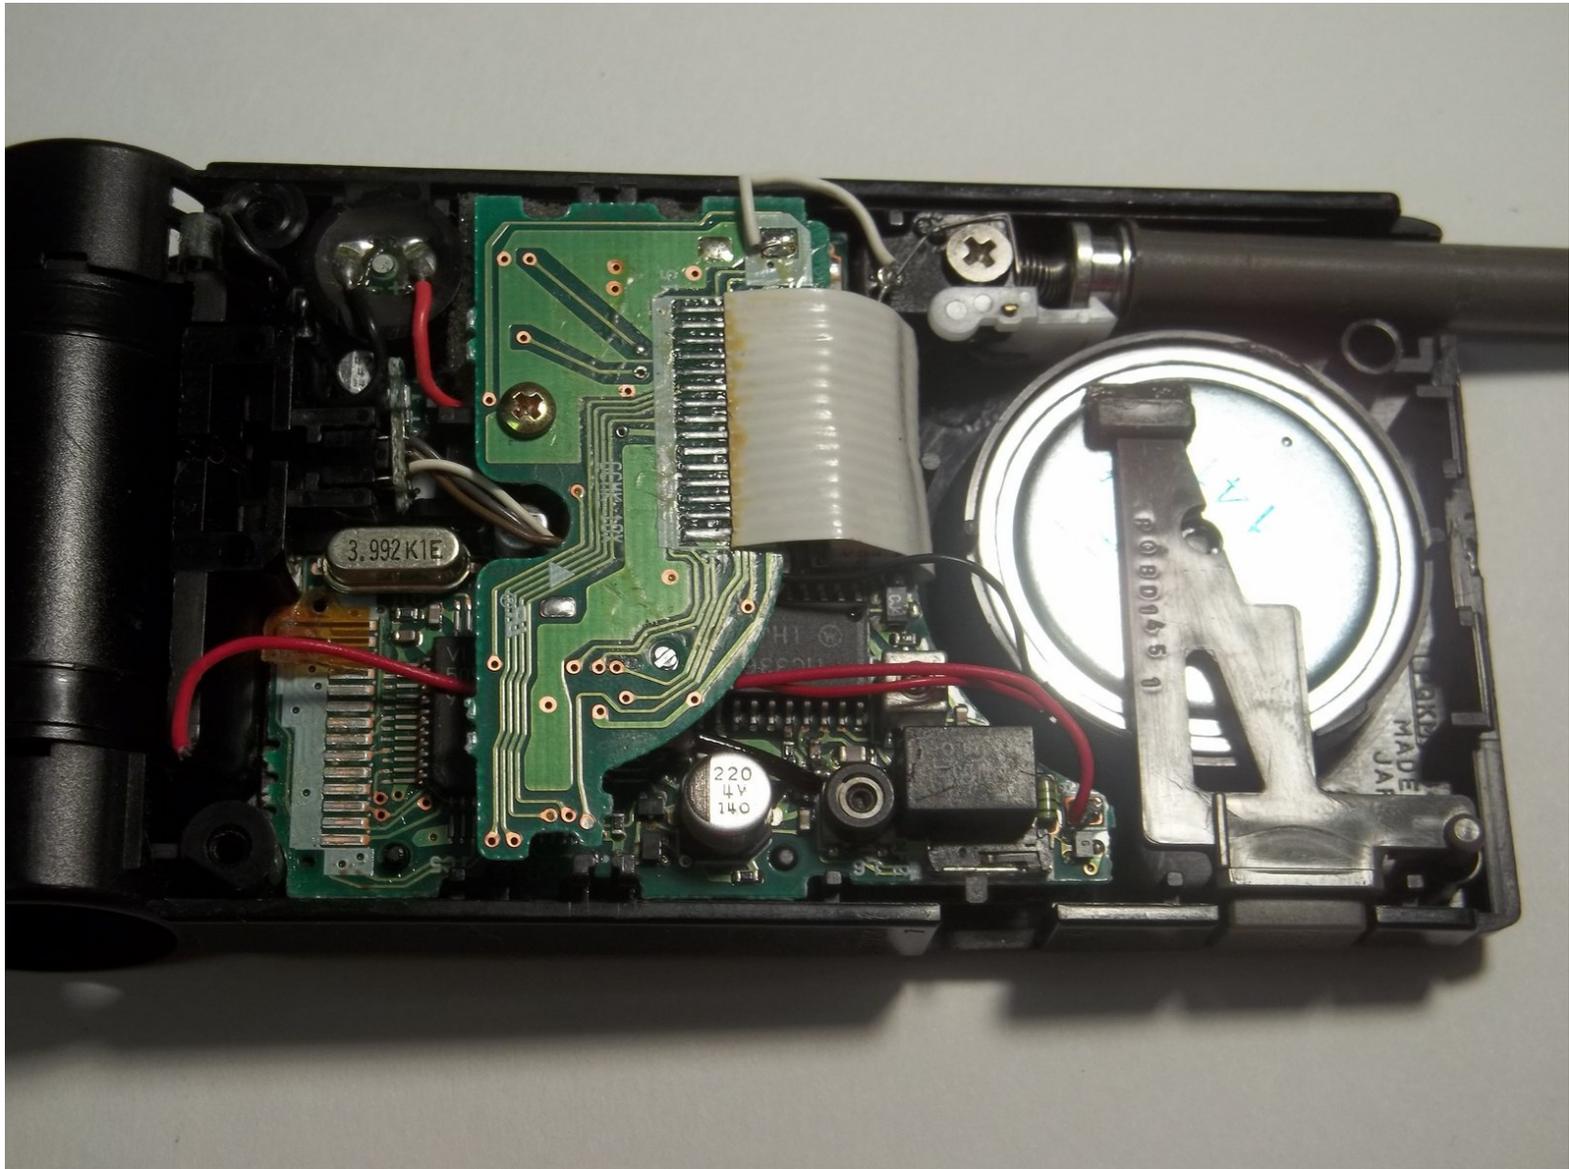

INTRODUCTION

Once the back cover has been removed, removing the antenna is as simple as unscrewing one screw.

TOOLS:



- [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Removing the Back Panel




- Orient the phone so that the phone model and other descriptive information is facing upward.
- Locate the two silver screws near the hinge where the battery is housed.
- Remove the silver screws using a Phillips head #2 screwdriver.

Step 2

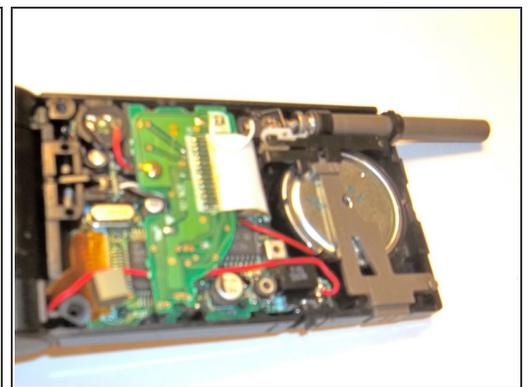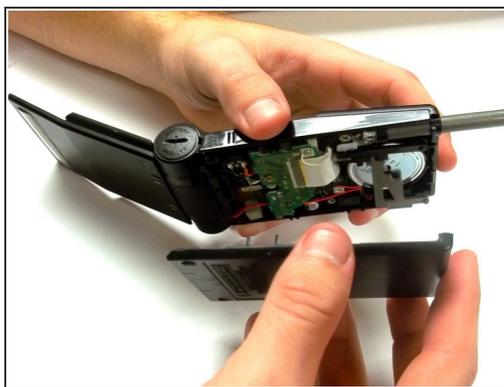



- ⚠ Pull off the back panel of the phone.
- Make sure you pull the cover off carefully in order to prevent damage to the back cover.

Step 3 — Antenna

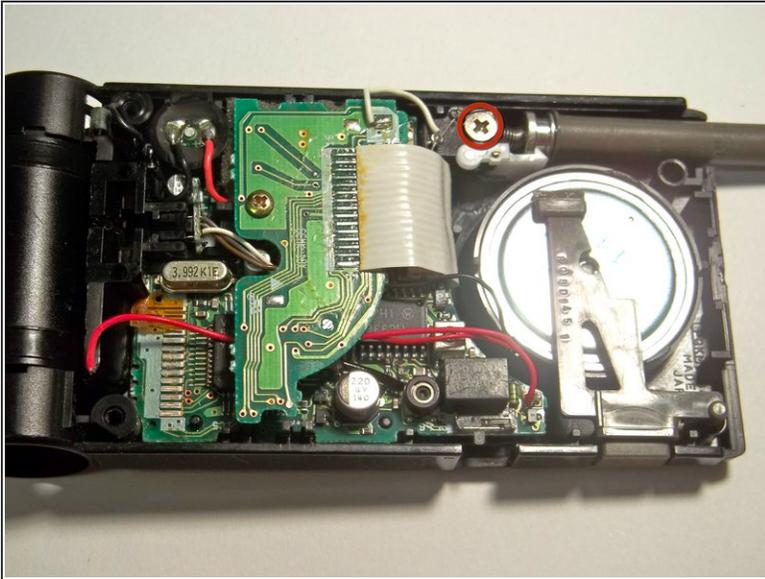

- Find the silver screw located in the red circle.
- Using a Philips head #2 screwdriver, remove the screw holding the antenna in place.

Step 4

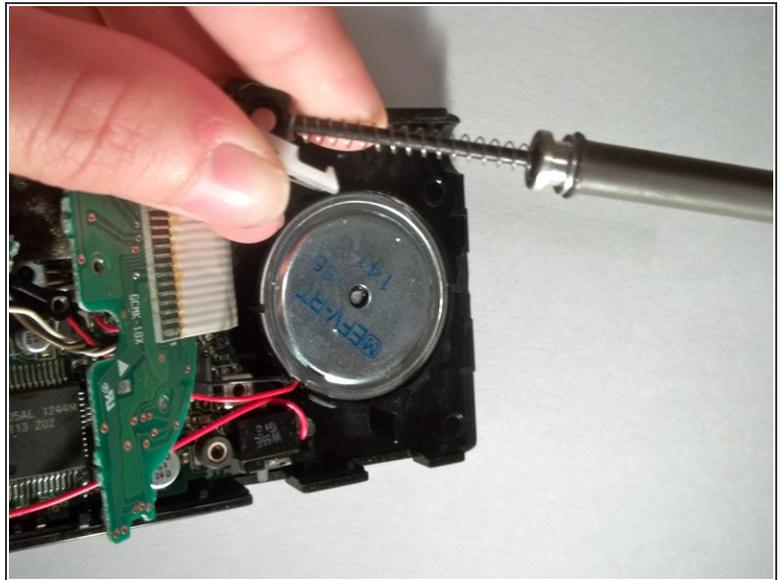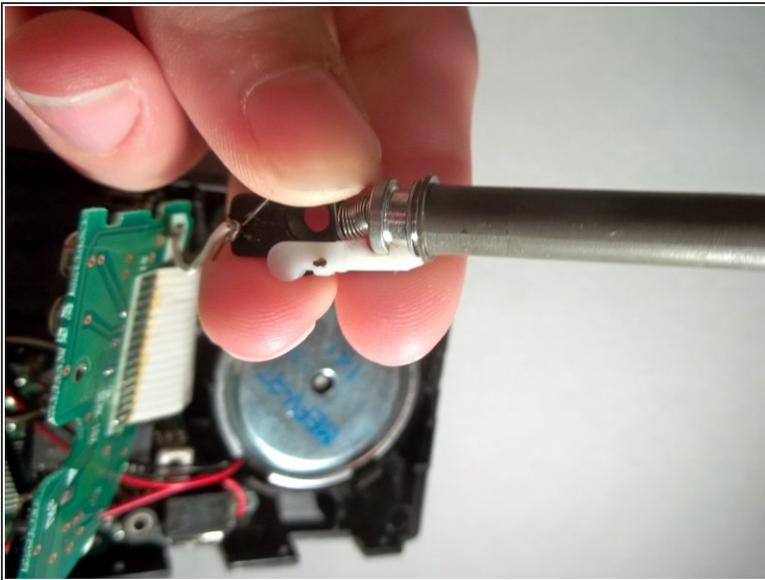

- Press the release button.
- The release button is located in the red circle in the image to the left.

To reassemble your device, follow these instructions in reverse order.