



HP Pavilion TouchSmart 14z-n100 Keyboard Replacement

How to replace an HP Pavilion TouchSmart 14z-n100 keyboard.

Written By: Antonio DiMattia



INTRODUCTION

Follow this guide to replace the keyboard on a HP Pavilion TouchSmart 14z-n100. You will need a number 1 Phillips screwdriver, a plastic spudger and a replacement keyboard.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Keyboard




- Remove these two, 4 mm long number 1 Phillips screws from the device.

Step 2



- Gently pull the keyboard up with a small plastic opening tool, beginning toward the front right corner. Just pull the keyboard up enough to fit your fingers under.

Step 3

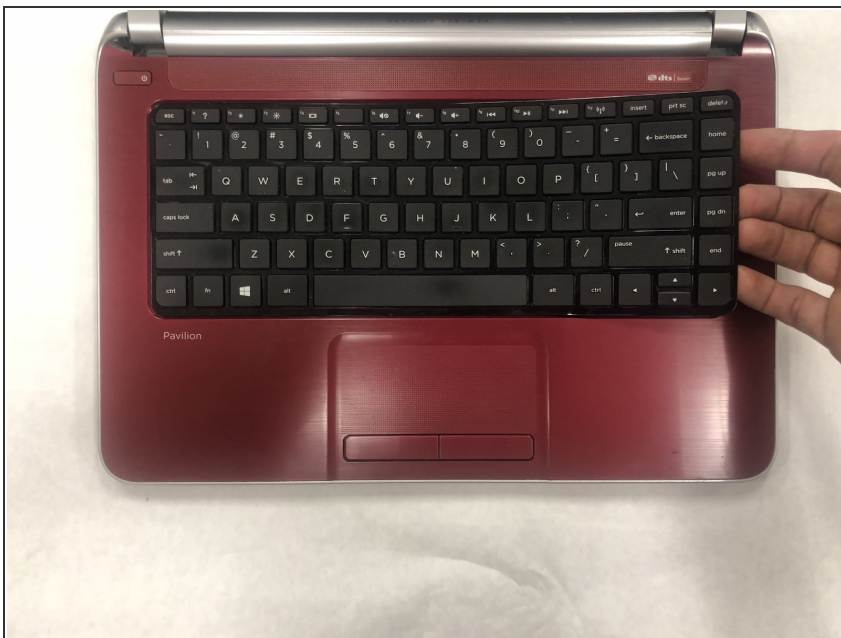

- Gently pull the keyboard up with your fingers. Do not pull the keyboard too far from the computer.

Step 4



- Lift the plastic retaining tab with a small plastic opening tool. The tab will rotate to the side but not remove from the laptop. After this gently pull the wire ribbon to remove it. The old keyboard is now completely removed.

To reassemble your device, follow these instructions in reverse order.