



Petnet SmartFeeder SF10E Battery Replacement

Replace the internal battery of the Petnet SmartFeeder SF10E to charge your SmartFeeder or get rid of low battery warnings.

Written By: Kristin Villanueva



INTRODUCTION

Use this guide to replace the battery for your SmartFeeder to get your device up and running again. This guide is also a prerequisite to access and replace the motherboard and charging assembly.

TOOLS:

- [Tweezers](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery




- Eject the SmartBowl by pressing the button located at the front of the SmartFeeder base.
- Remove the metal tray by using both hands and pulling out the bowl towards you.

Step 2




- Turn the bowl tray side down by using both hands.
- Remove seven 11 mm screws by using the Phillips #1 screwdriver.

Step 3

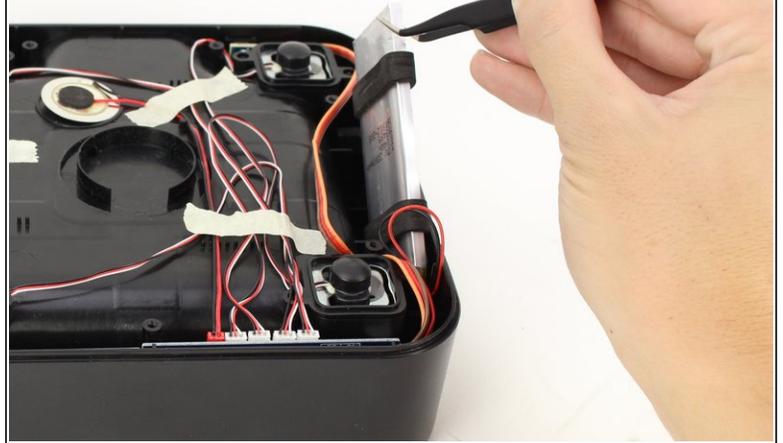

- Take the battery out of the SmartBowl with tweezers, avoid pulling on any wires.
- ⓘ Hold the SmartBowl down using one hand while using the other hand to remove the battery.

Step 4

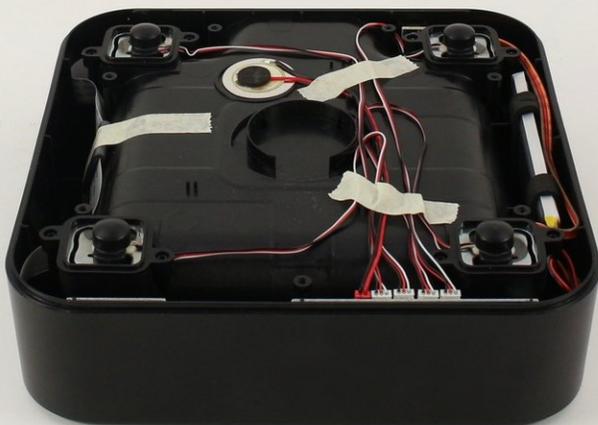

- Remove the tape, closest to the four white connectors, with your hands.
- ☑ Keep the wires attached to the tape for easy reassembly.

Step 5



- Trace the wires with your hands from the battery to the motherboard.
 - Detach the three-prong connector between the battery and the motherboard by pulling the white connectors with your hands.
-  Hold on to the sockets on the motherboard or you could accidentally pull off the entire assembly.

To reassemble your device, follow these instructions in reverse order.