




MSI GT62VR 6RD Dominator Cooling Fan Replacement

This guide will show how to remove the cooling fan on the MSI GT62VR 6RD Dominator.

Written By: Adrian Nelson

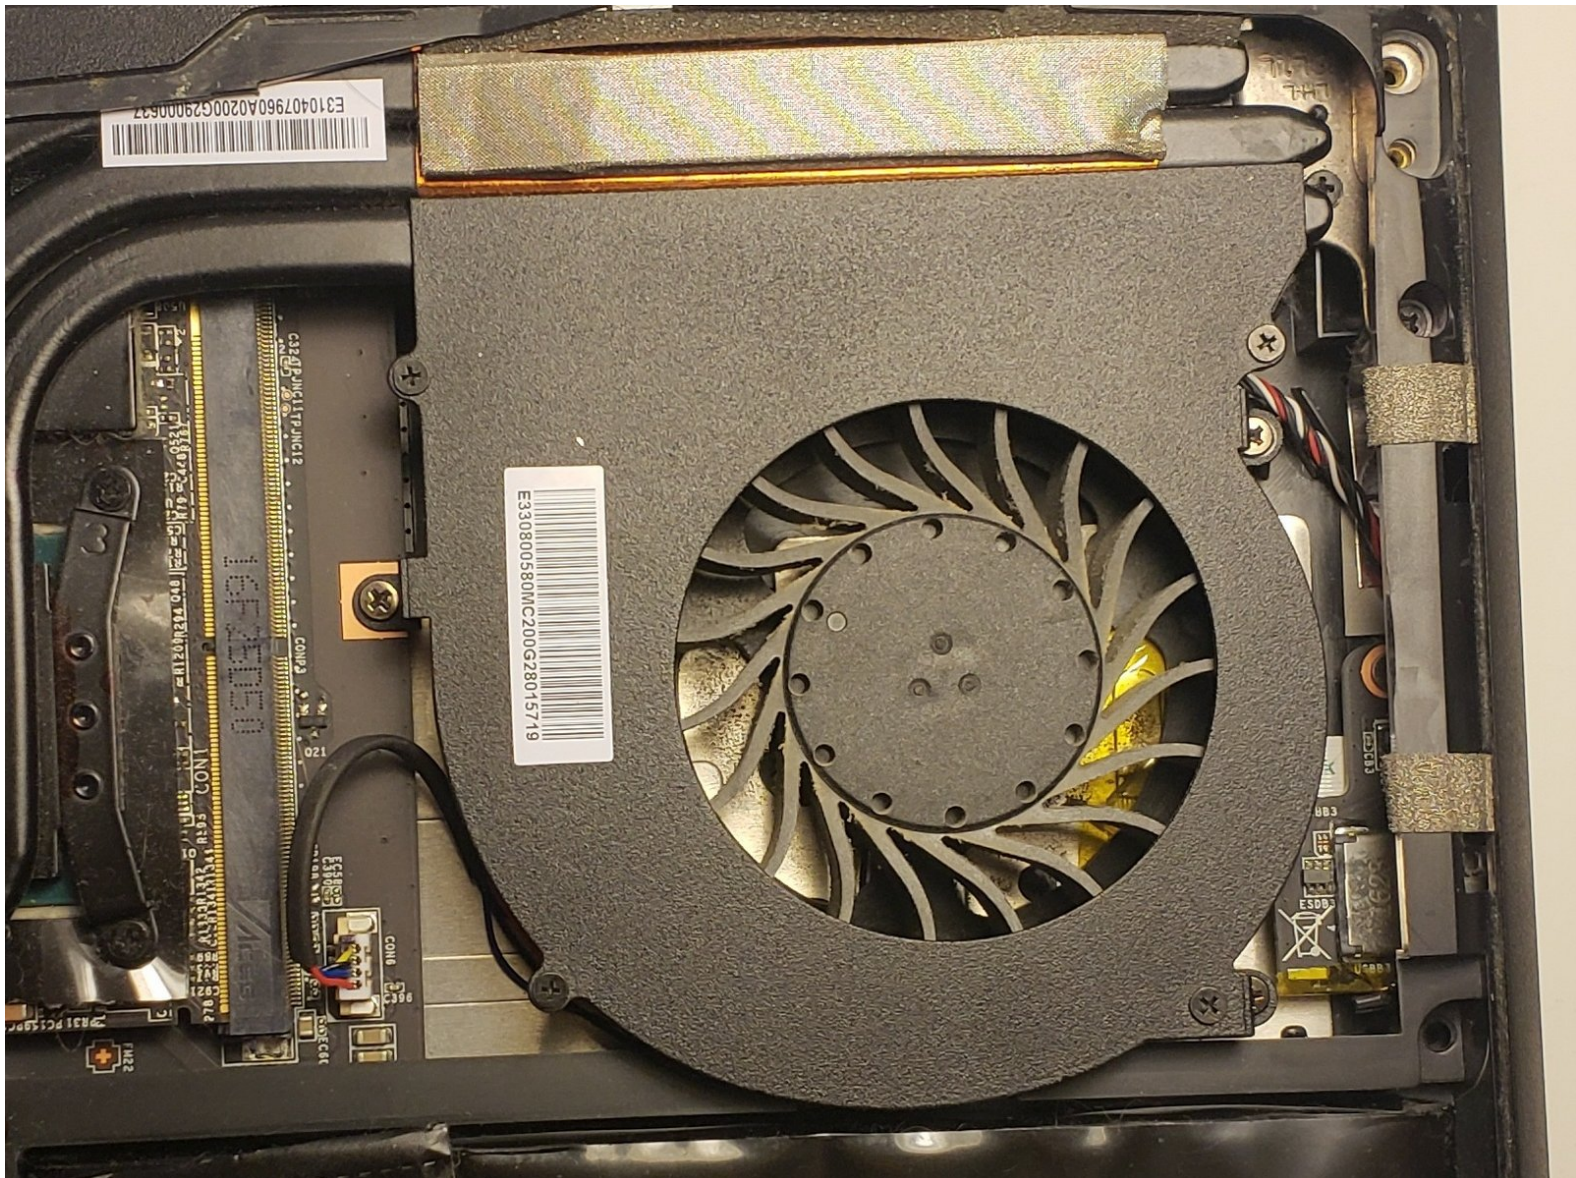


INTRODUCTION

This guide will help you replace your cooling fan. Throughout this troubleshooting guide there are no special requirements or hazards present. There is little to no risk of injury involved to complete these guide steps. Read thoroughly through all guide steps before starting the action.

TOOLS:


- [iFixit Opening Tools](#) (1)
 - [JIS #0 Screwdriver](#) (1)
-

Step 1 — Cooling Fan

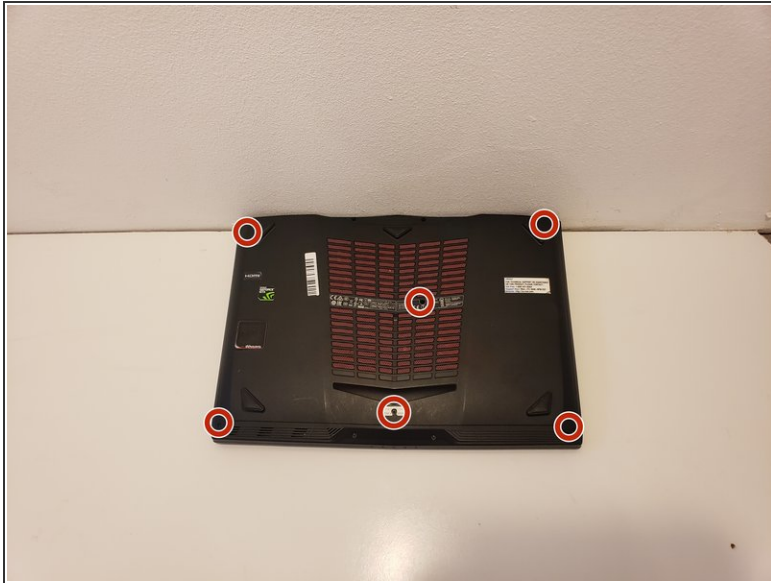



- Remove the six 1.2mm screws on the bottom plate of the laptop using a JIS #0 screwdriver.

Step 2

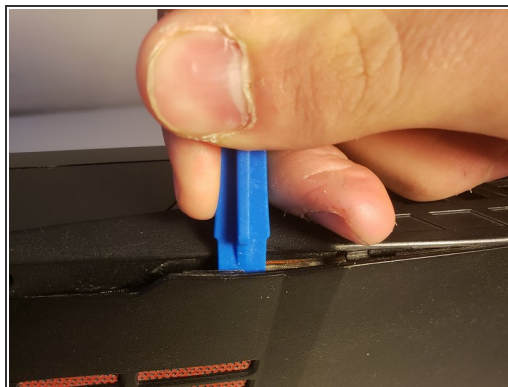


- Insert the plastic opening tools into the seam on the back plate of the laptop.
- ⚠ A popping sound may come from your device while you remove the backplate.
- Pry the back plate up.
- Slide the plastic opening tool around the laptop's edge slowly until the backplate is completely removed.

Step 3

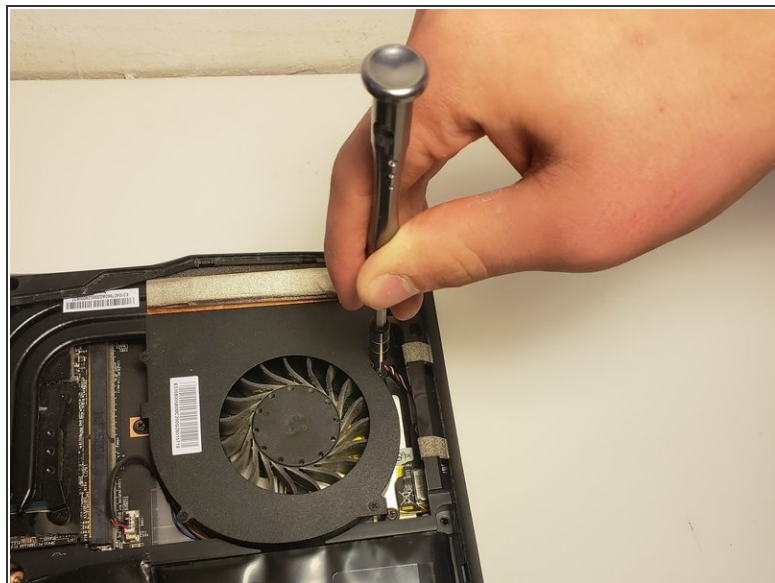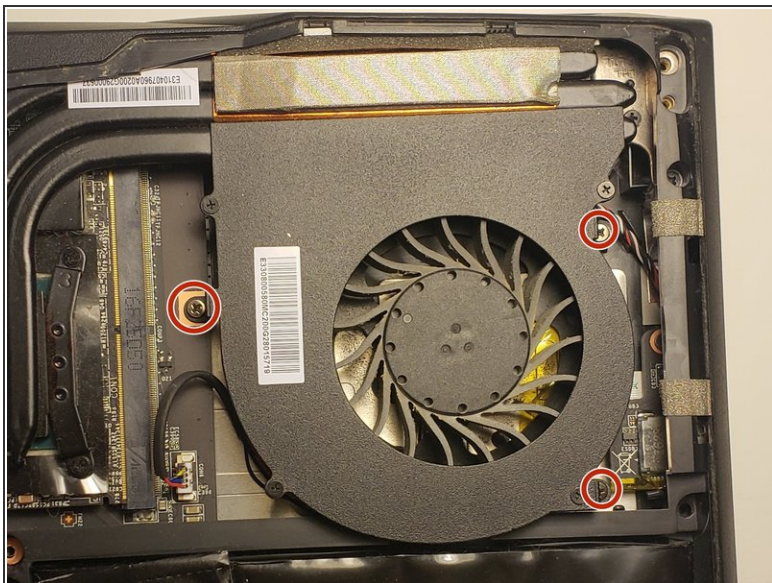

- Remove the three 2.0mm screws using the JIS #0 screwdriver.

Step 4

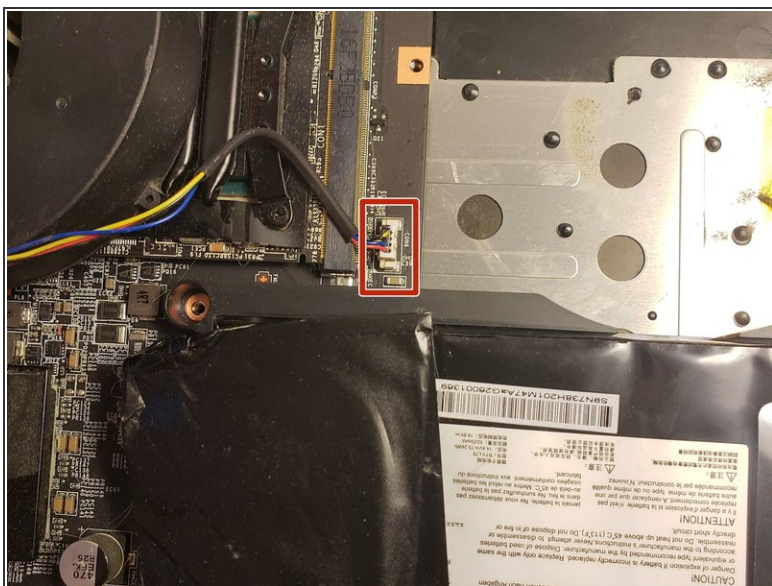

- i** The white plastic clip secures the fan wires to the laptop.
- Unplug the white clip by grasping it and wiggling it back and forth .
- i** Do not pull the clip out by the wires themselves.

To reassemble your device, follow these instructions in reverse order.