



Asus K55N-DS81 Battery Replacement

This guide shows how to remove and replace the battery of the ASUS K55N-DS81.

Written By: Elliott Beckner



INTRODUCTION

If the battery is discharging quickly, or will not charge, it may need replaced. This guide details how to remove the battery of the ASUS K55N-DS81 and replace it with a new one.

Prior to following this guide, please ensure that the laptop is powered off.


Step 1 — Battery



- Flip the laptop over, such that the bottom of the laptop is facing upwards.


⚠ Ensure that the laptop is powered off prior to following this guide.

Step 2

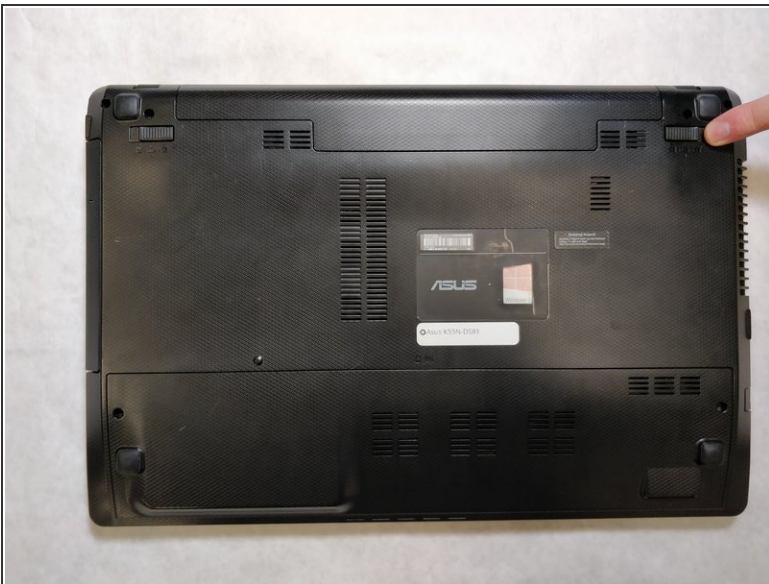


- Pull the latch to the right of the battery to the right.

Step 3

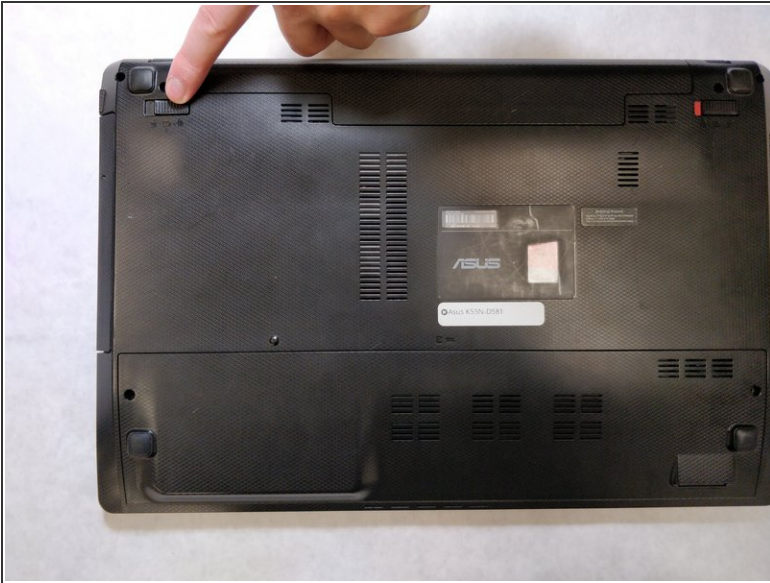

- Pull the latch to the left of the battery to the left. Hold the latch open with a finger to prevent it from closing.

Step 4

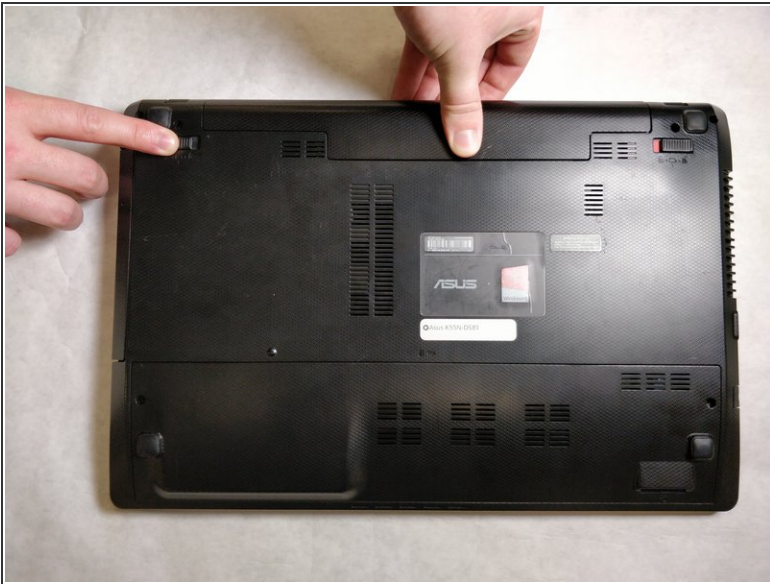

- While holding the second latch from the previous step, use another hand to reach underneath the battery.
- Pull the battery upwards and away from the laptop to remove it.

To reassemble your device, follow these instructions in reverse order.