

INTRODUCTION

Use this guide to replace your PSP Go's headphone jack!



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)



PARTS:

- [Sony PSP Go Headphone Jack](#) (1)

Step 1 — Back Cover



- Unscrew the four Phillips screws on the back of the PSP Go.
- Rotate the PSP so you can see the top of the device.
- Unscrew the two Phillips screws next to the volume buttons.

Step 2




- Use a plastic opening tool around the perimeter of the back cover to loosen it on all sides.
 - Open the back cover by gently lifting the right side, and rotating it to the left side (as if you were opening a book).
- ⚠** Be careful not to rotate the back cover from the bottom, as you will break the plastic screw holes on top of the device.

Step 3 — Top Cover



- Pull the top cover upwards gently from its housing.

Step 4 — Bottom Plate

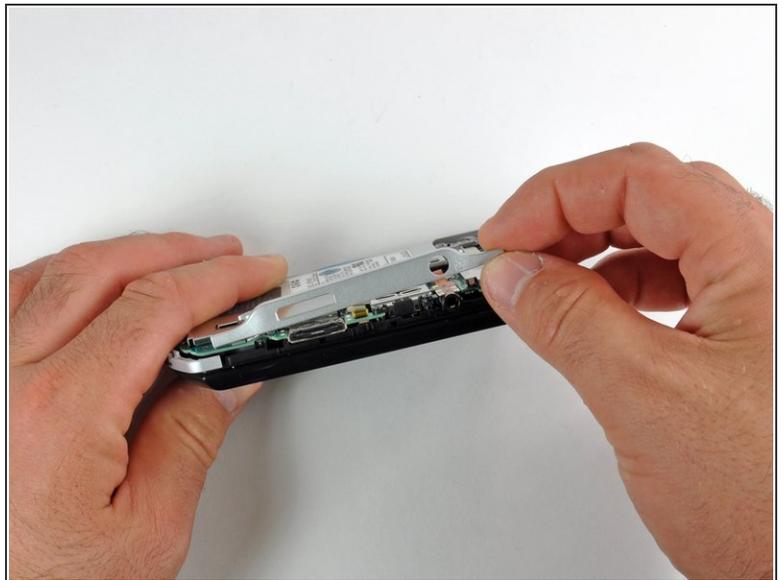

- Remove the two Phillips screws holding the bottom plate.
- Gently lift the bottom plate away from the device.

Step 5 — Headphone Jack



- Remove the black Phillips screw holding the headphone jack in place.

Step 6



- Use a pair of tweezers and grasp the black plastic portion of the headphone jack cable.
- Slowly pull out the cable. If it's hard to pull, wiggle it slightly side-to-side while pulling it.
- ☑ Plugging the new headphone jack into place will require some force. Make sure not to break the connector while performing this procedure. Grasp the black plastic portion of the cable and wiggle it into the logic board connector.

To reassemble your device, follow these instructions in reverse order.

