



Acer Aspire 5251-1513 Battery Replacement

Use this guide to replace the battery in your Acer Aspire 5251-1513.

Written By: Gicely Rodriguez



INTRODUCTION


Batteries provide power to the laptop to help it run. If you are having battery issues, follow these steps to replace the battery. Make sure the laptop is unplugged and turned off before attempting to remove the battery.

Step 1 — Battery



- Turn over the laptop so the back is facing up.

Step 2

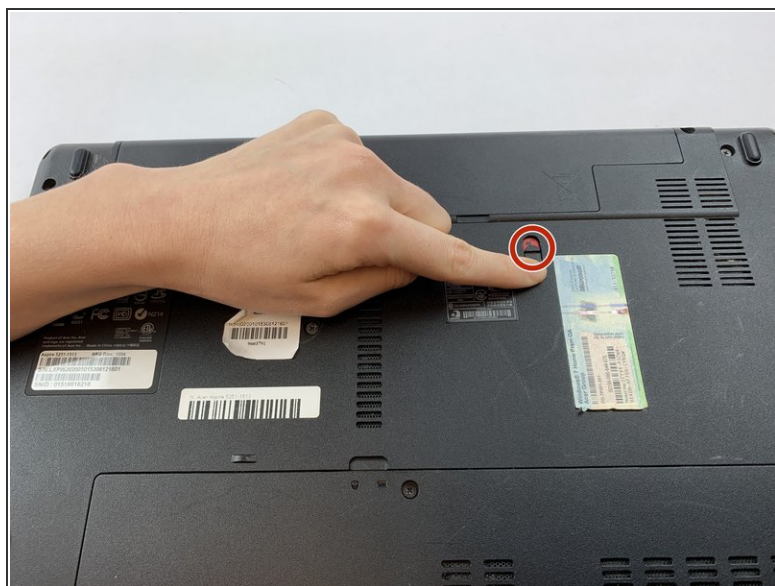

- Next to the battery is a switch with a lock symbol on it.
- Unlock the switch by sliding it to reveal a red unlock symbol.

Step 3



- Pull the other switch completely while the red unlock symbol is still present. The battery pack should pop up a bit.

Step 4



- Remove the battery pack via the indentation at the top of the battery in between the two switches.

To reassemble your device, follow these instructions in reverse order.