

Sony VAIO VPCEE26FX Battery Replacement

This guide shows how to remove/replace the...

Written By: Christopher Hover



INTRODUCTION

This guide shows how to remove/replace the battery on the Sony VAIO VPCEE26FX laptop computer.

Step 1 — Battery






♠ Ensure that the laptop is powered off before disconnecting the battery.

• Flip the laptop over so the underside of the laptop is facing up.

Step 2



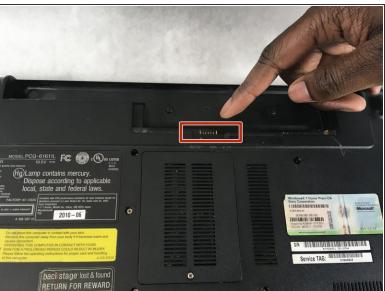

- Slide the two tabs towards each other until the battery disconnects slightly from its position.
- Carefully lift the battery out of its position away from the laptop.
- (i) The battery is not pictured here, since it is missing from this particular device.

To reassemble your device, follow these instructions in reverse order.