



# HP Z1 RAM Replacement

Upgrade RAM into your HP Z1 to a maximum of 32 GB.

Written By: Ronnie





## Step 1 — RAM



- Release the thumb tabs.

## Step 2

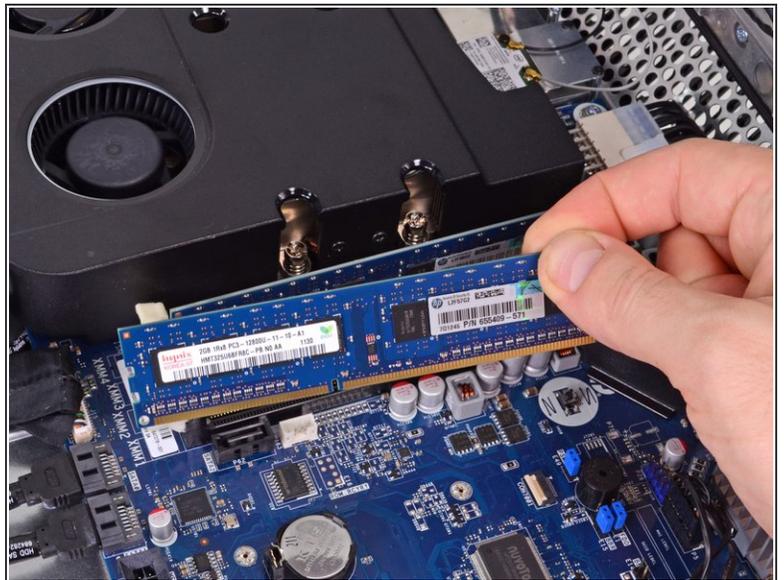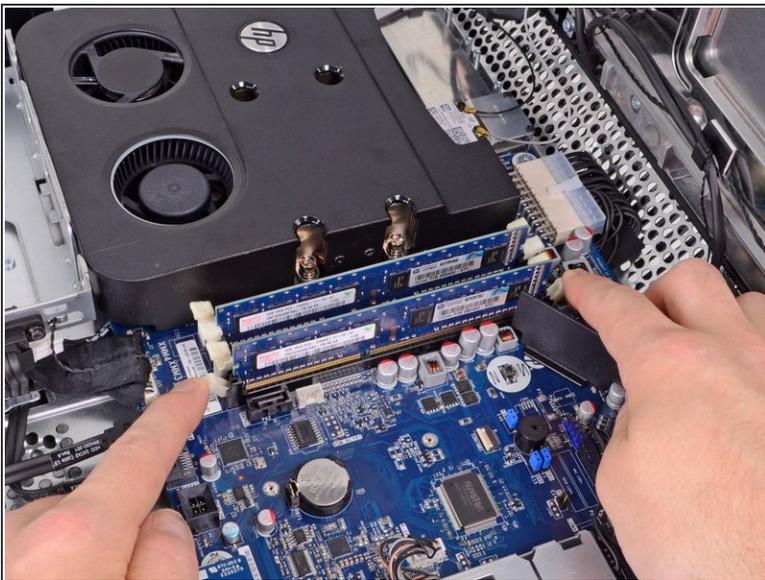

- Replace the RAM.

To reassemble your device, follow these instructions in reverse order.