



Honda CR-V Touring 2016 Cabin Air Filter Replacement

Replace a Cabin Air Filter for a Honda CR-V Touring 2016 in a few simple steps.

Written By: Oliver Du Bois



INTRODUCTION

Replacing an air filter is a common task every car owner will likely need to complete at some point in their lives. If you haven't replaced your air filter in quite some time, or if a mechanic tells you that your air filter is in need of replacement, don't fret! This is a repair you can easily complete yourself. Replacing the air filter will improve the air quality inside your cabin.



PARTS:

- [Cabin Air Filter](#) (1)
-

Step 1 — Cabin Air Filter



- Ensure that your 2016 Honda CR-V Touring Edition is off.
- Open the glovebox and remove all of its contents.

Step 2





- Unfasten the hinge on the right side of your glovebox so the hook-part of the hinge is free and clear.
- ⓘ You may have to close the glovebox slightly, then open it fully while holding the hook to clear it.

Step 3



- Push both sides of the glovebox together while lowering until the glovebox hangs at its lowest point.
- ⓘ This should allow access to the interior and give a clear line of sight to the cabin air filter holder.

Step 4

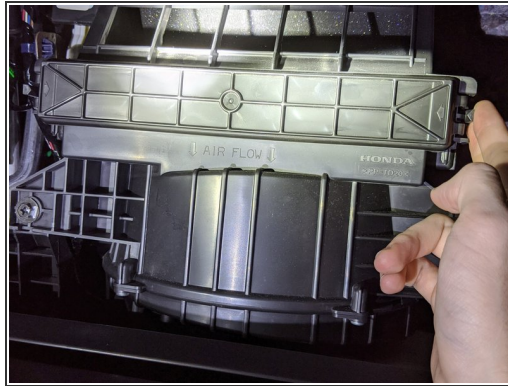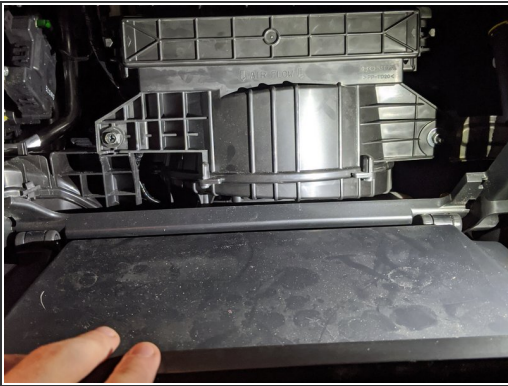



- Grasp both clasps on either side of the rectangular cabin air filter protective cover and pull to release the cover.
- ⓘ **You should see a white filter.**

Step 5




- Pull the filter straight out until it is free and clear.
- ❗ Be sure not to shake it to prevent any excess dust from falling.

Step 6

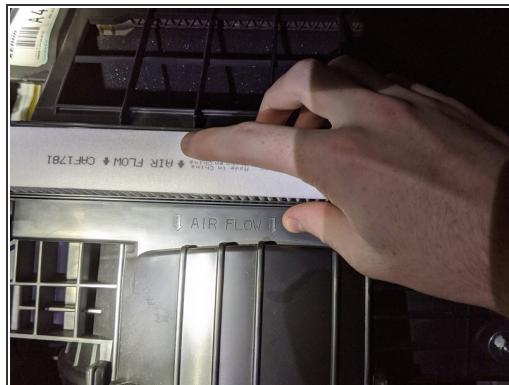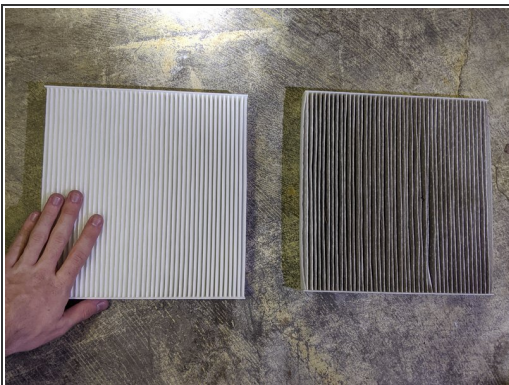

- Insert the new filter, taking care to orient the filter in the correct direction for airflow.
- ❗ It will be marked with arrows both on the filter and below the location for the filter.

Step 7

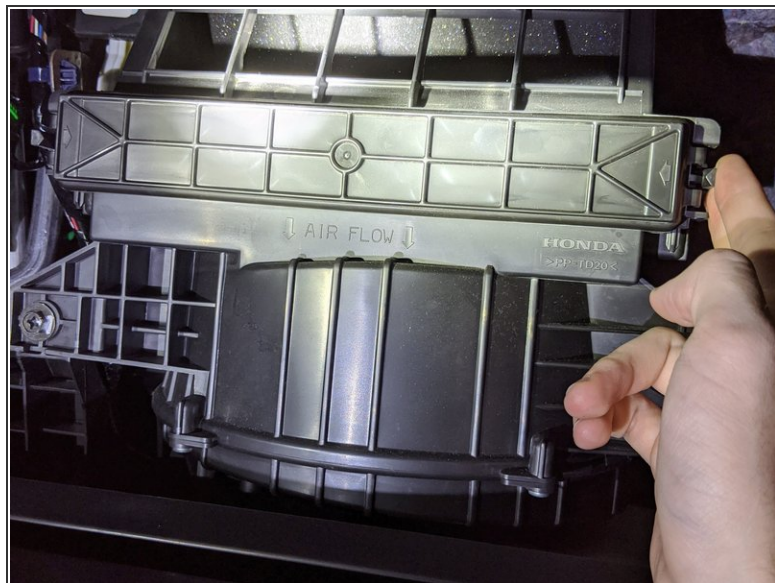

- Place the cabin air filter protective cover over top of the filter until you hear audible clicks from the clasps engaging.

Step 8



- Push the glovebox up until you feel a detent where it is self supported but is not fully in the up-position.

Step 9



- Re-clip the hook on the right side of the glovebox until it is fully engaged.

Step 10



- Close the glovebox and you're all set!

To reassemble your device, follow these instructions in reverse order.