



HP Deskjet 2624 Ink Cartridges Replacement

This guide will show you how to replace ink cartridges in a HP Deskjet 2624.

Written By: Ryan Doyle



INTRODUCTION

If the prints produced by your HP Deskjet 2624 are faded, use this guide to replace the ink cartridges.


Ink cartridges store a printer's ink. Low levels of ink cause prints to be lighter than normal.

Step 1 — Ink Cartridges




- Unplug all of the cords from the printer and put paper into the input tray.

Step 2

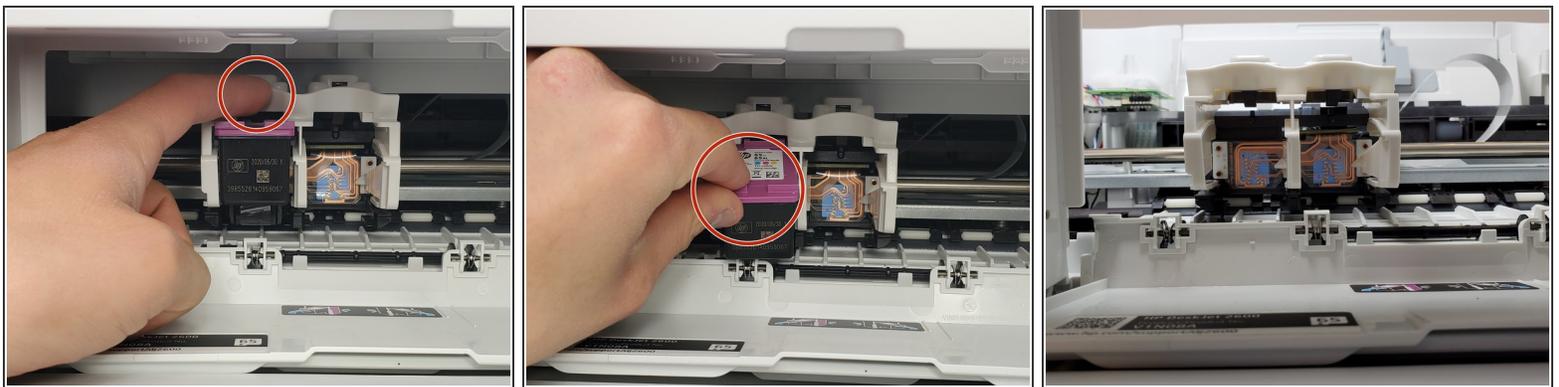

- Lower the output tray and the ink cartridge access door.
- Lightly press forward on the cartridge to release it and then pull the cartridge straight out.
- ⓘ The slot on the left is the tri-color cartridge while the black cartridge is on the right.

Step 3

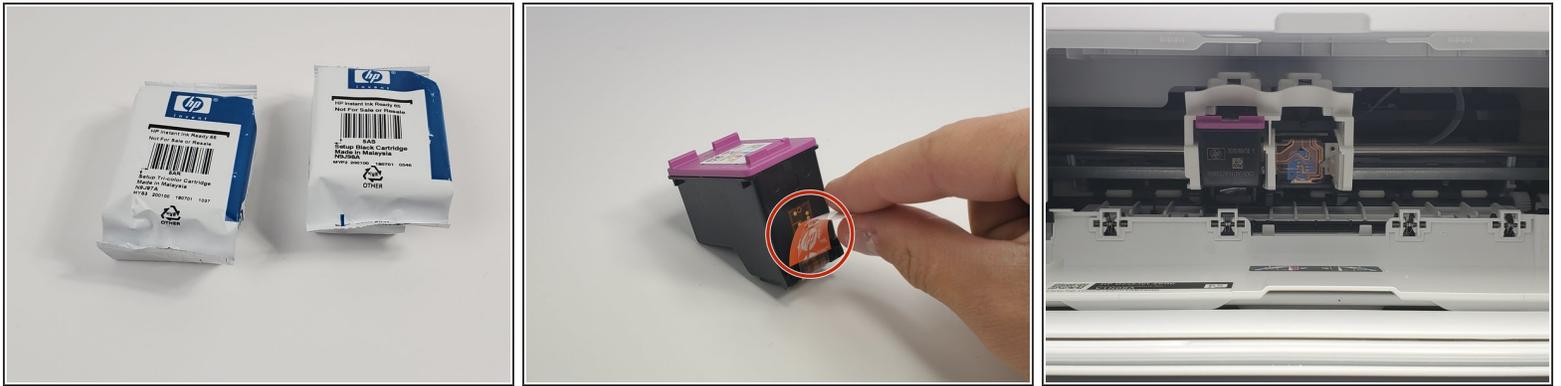

- On the new cartridge, pull the colored tab to remove the plastic.
- Hold the replacement with the nozzles toward the printer and insert it at an upward angle.
- Push the cartridge forward until it snaps into place.
- ⓘ Repeat steps two and three if necessary.

After completing this guide, don't forget to plug in your HP Deskjet 2624 .