



Mk Diamond Wet Saws MK660 2010 Blade Cover Replacement

How to remove the cutting head's blade cover for replacement or further device service for the Mk Diamond Wet Saw MK660 2010.

Written By: Carsten Frauenheim



This document was generated on 2020-11-28 08:04:58 AM (MST).

INTRODUCTION

How to remove the cutting head's blade cover for replacement or further device service for the Mk Diamond Wet Saw MK660 2010.





PARTS:

- [Mk Diamond GUARD, 7BLADE 151731](#) (1)
-

Step 1 — Blade Cover



 Before you begin, make sure to power off and unplug the device from the outlet.

 If the clear water pump hose is connected, remove it now.

- Loosen the plastic knob holding the saw's cutting head in place.
- Lower the cutting head while keeping it steady.

Step 2





- Unscrew the knob.
- Remove it from the cutting head.

Step 3



- Loosen the plastic knob holding the blade cover in place.

Step 4

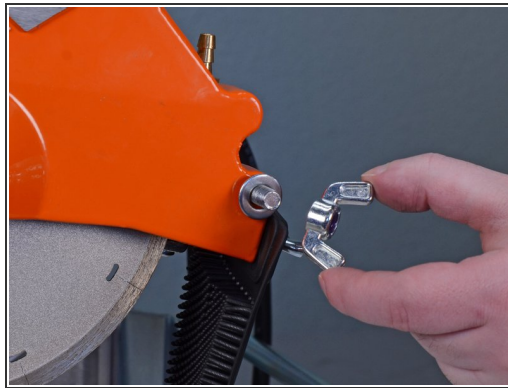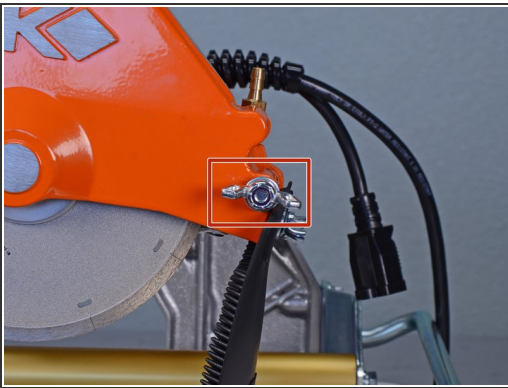

- Loosen the wing nut on the blade cover pivot shaft.
- Remove the wing nut and accompanying washer.

Step 5



- Pivot the blade cover up and pull it off the shaft.

To reassemble your device, follow these instructions in reverse order.