



# iMac Intel 27" Retina 5K Display 2019 Adhesive Strips Replacement

Removing the display on an iMac Intel 27" Retina 5K Display 2019...

Written By: Adam O'Camb



# INTRODUCTION

Removing the display on an iMac Intel 27" Retina 5K requires cutting through the adhesive around the perimeter of the screen. After the adhesive is cut, it cannot be used to re-seal the display in place, so you'll need to apply a new set of adhesive strips.


## TOOLS:

[iMac Intel 27" Cardboard Service Wedge](#) (1)  
[Spudger](#) (1)  
[Tweezers](#) (1)  
[Painter's Tape](#) (1)  
[Microfiber Cleaning Cloths](#) (1)  
[Isopropyl Alcohol](#) (1)

## PARTS:

[iMac Intel 27" \(2012-2019\) Adhesive Strips](#) (1)

## Step 1 — Determine which adhesives you have

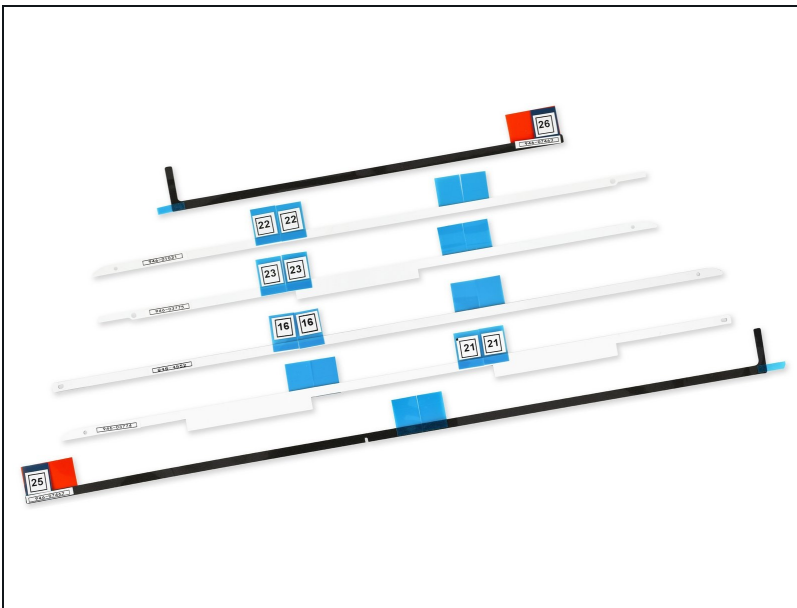

- ① Before you begin, make sure you have the right adhesive strips:
- ① The 2012-2019 iMac adhesive strips have a microphone cutout and are numbered 16, 21, 22, 23, 25, and 26. They can be used on 27" iMacs from 2012-2019.
- ① If your strips are numbered 11-16, follow the [2012-2015 iMac adhesive guide](#) instead.

## Step 2 — Stabilize the iMac



ⓘ With the hinge free to move, the iMac will be unbalanced and hard to work on. Repairs can be completed as shown, but are faster and easier with an [iFixit cardboard service wedge](#).

ⓘ Follow [these assembly directions](#) to put the service wedge together.


⚠ If you are not using an iMac service wedge, be very careful when installing and working behind the display—it can easily fall out and break if the iMac moves unexpectedly.

### Step 3 — Remove the old adhesive



- ⓘ Before you install new adhesive strips, remove all of the old adhesive from the perimeter of the rear enclosure.
- If you are re-using your existing display, you must also remove the old adhesive from the back of the display.
  - Peel off the adhesive strips using tweezers or your fingers. Start at the bottom and peel *upward* towards the top of the device.
  - After all the old adhesive is removed, carefully clean the surface with 90% (or greater) isopropyl alcohol and a lint-free cloth. Wipe in one direction, not back and forth.
- ⚠ **Don't skip this step**, or your new adhesive strips may not bond properly, and the display may fall out of your iMac.

## Step 4 — Lay out the adhesive strips

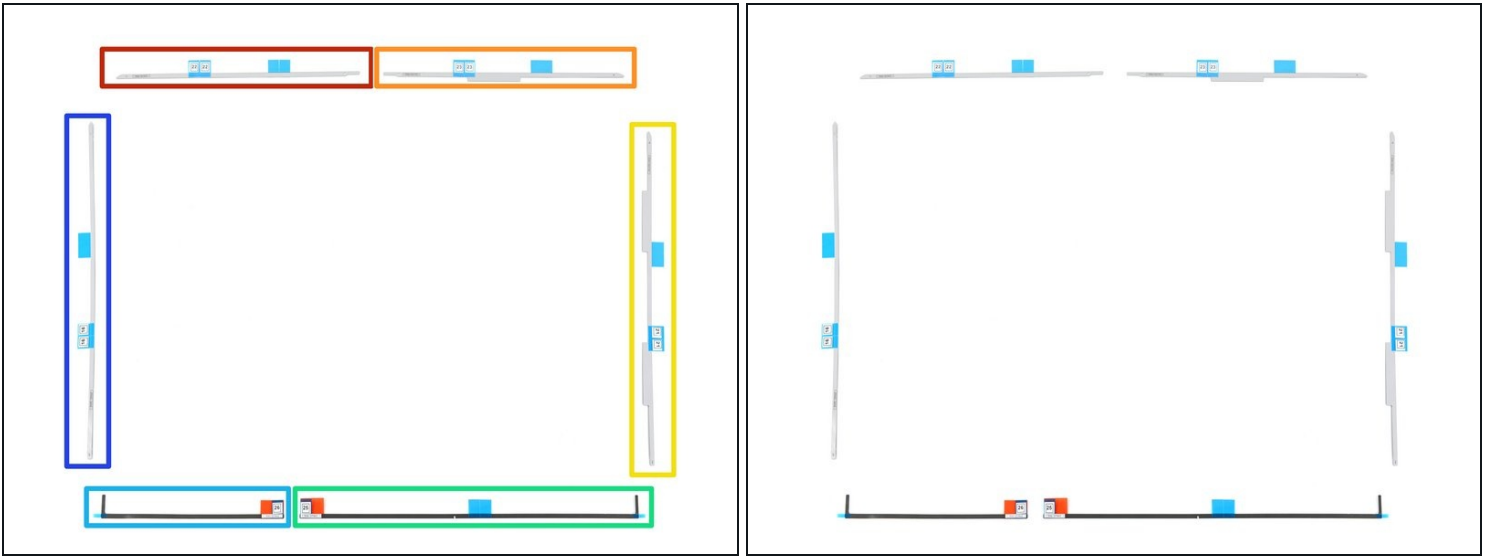


- Lay out the adhesives strips beforehand so you won't accidentally install a strip in the wrong place:
  - Strip 22 on the top left
  - Strip 23 on the top right
  - Strip 21 on the right vertical
  - Strip 25 on the bottom right, dark side facing up.
    - ① Double check to make sure this strip has the necessary cutout for the microphone.
  - Strip 26 on the bottom left, dark side facing up
  - Strip 16 on the left vertical

## Step 5 — Install the right side adhesive



- Start with strip 21, which goes on the right vertical edge of the iMac frame.
- ⓘ Before you peel off any backing, line the adhesive strip up along the frame of the iMac to get an idea of where it goes.
- Peel the short piece of backing off the back of the strip.

## Step 6

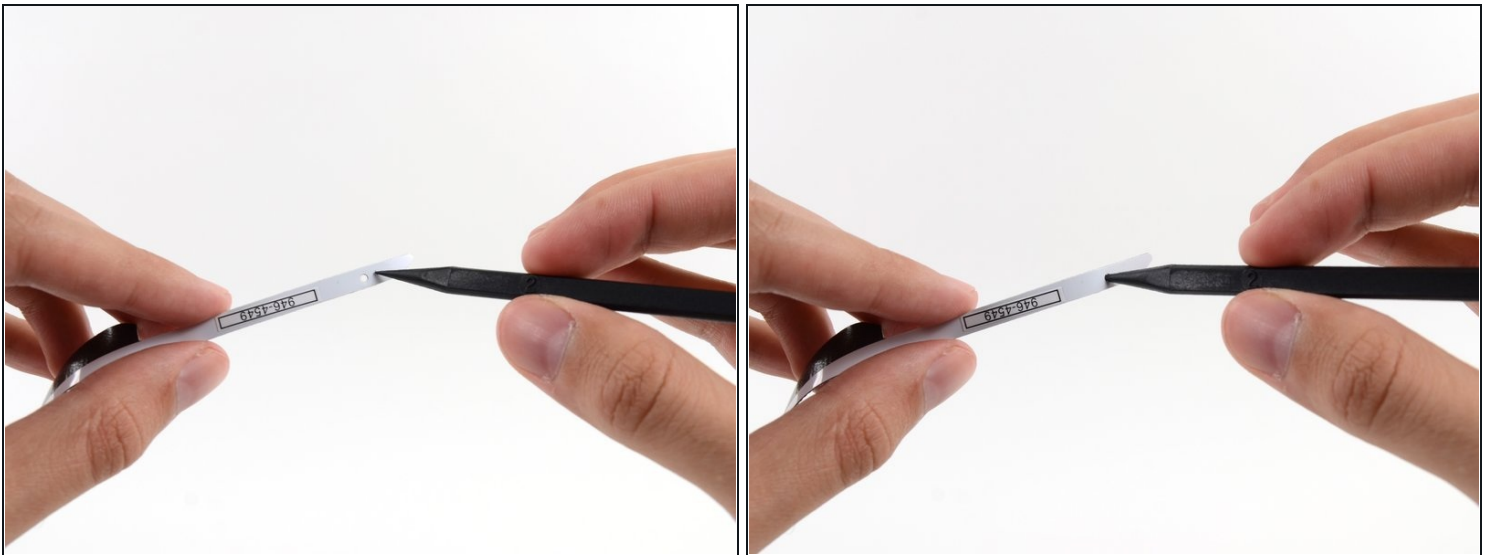

- Insert the tip of a spudger into the hole at the end of the strip where you just removed one layer of backing. Insert the spudger from the side that still has a layer of white backing on it.



## Step 7




- With the spudger still poking through the hole in the adhesive strip, push the spudger tip into the corresponding hole in the frame of the iMac.
- Using the hole and spudger to anchor the position of the adhesive strip, line the strip up against the right edge, gently pull down against the spudger to ensure the strip is taut, and stick it onto the frame.

## Step 8




- Once you're satisfied that the top half of the adhesive strip is neatly aligned, peel longer blue piece of backing out from behind the strip.
  - ❗ If the top half isn't aligned properly, you can carefully peel it up and re-stick it before peeling off the lower backing strip. Be sure to use the spudger tip to anchor the top.

## Step 9

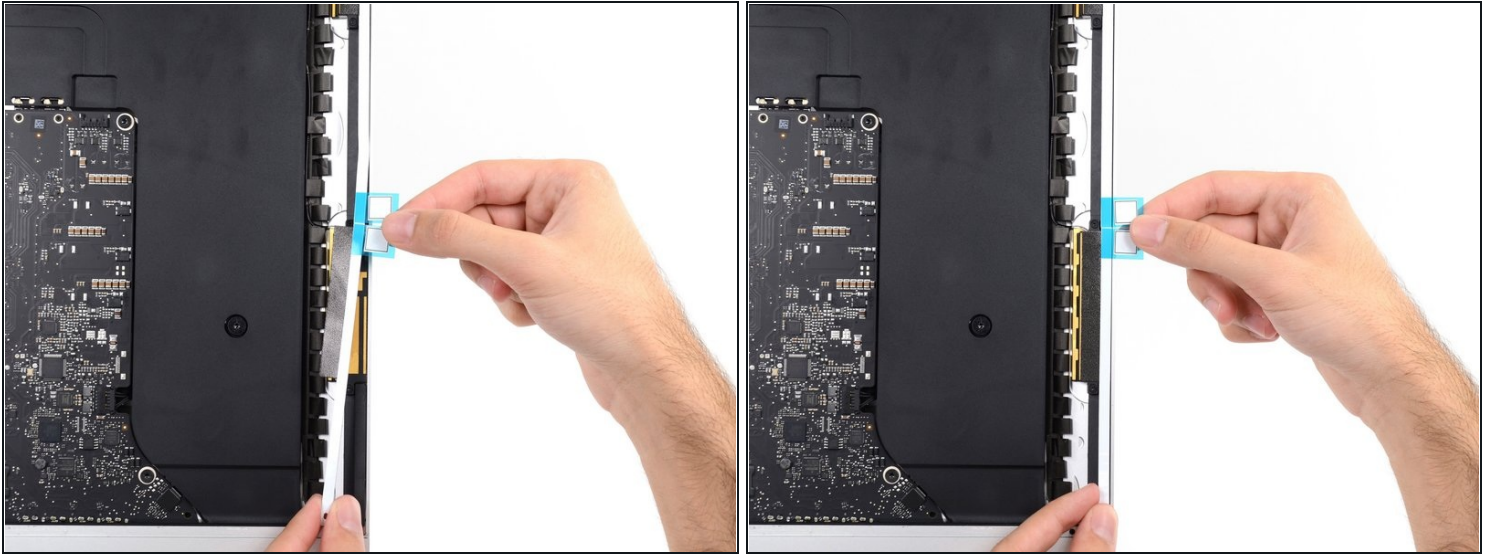

- Align the lower portion of the strip with the right edge of the frame, and stick it down.

## Step 10


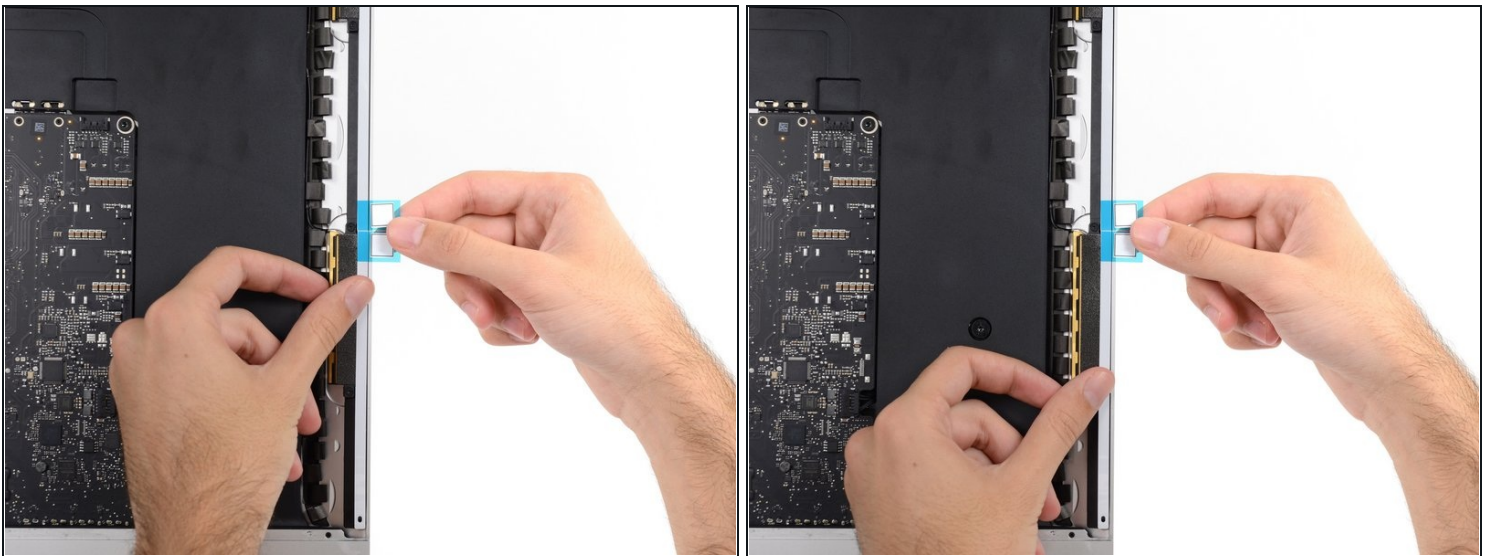


- Use your finger to smooth out the strip. Make sure it is neatly aligned with the right side of the frame and that it sits flat.

***i*** Do not peel off the front adhesive backing yet.




## Step 11 — Install the top and left adhesives

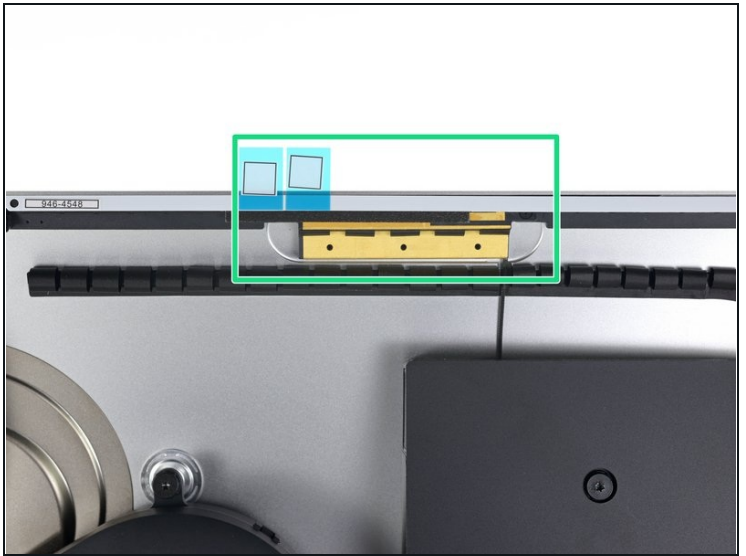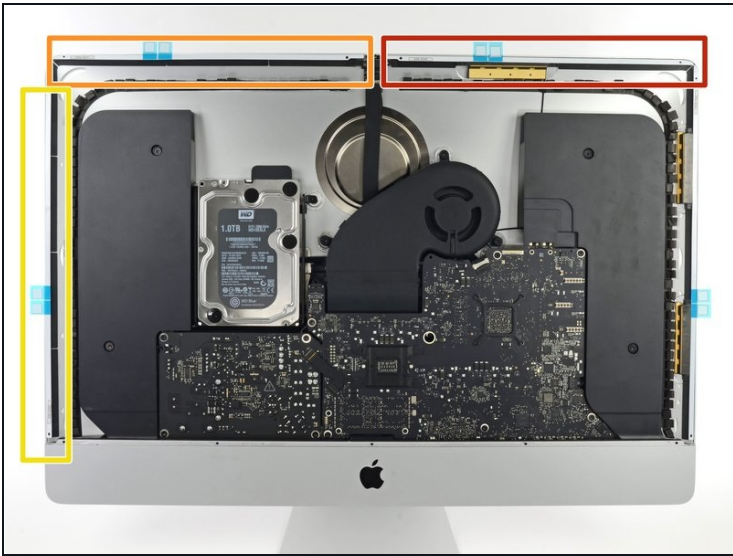

- Work your way counter-clockwise around the perimeter of the iMac, adding three more adhesive strips in the same manner:
  - Strip 23 on the top right
  - Strip 22 on the top left
  - Strip 16 on the vertical left
- ⓘ These three strips have a hole at each end—always use the smaller hole for alignment for more precise placement.
- On the iMac Intel 27" Retina 5K Display, the top-right strip's blue tabs will not line up with the top antenna in the same way as the non-5K model. This is perfectly acceptable and won't impact the performance of the strips or antenna.

## Step 12 — Install the bottom adhesives



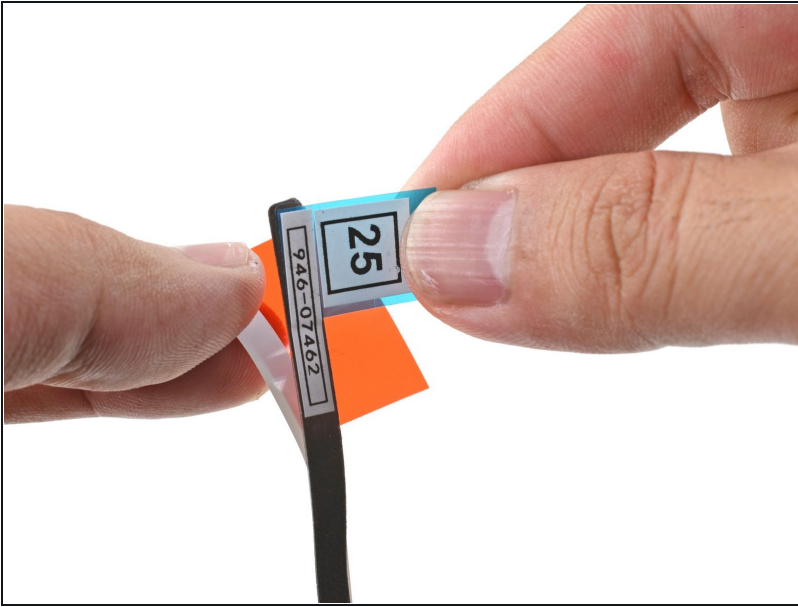


- ① The next few steps will show you how to install the bottom right adhesive strip (strip 25), which includes a notch that must be aligned with the microphone.

⚠ Read through this step and the next four steps before you attempt the procedure.

- Grasp the red pull tab on strip 25 and pull to separate about 2 inches (5 cm) of white backing from the strip.

## Step 13

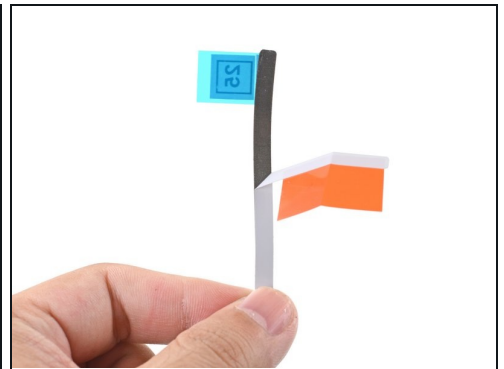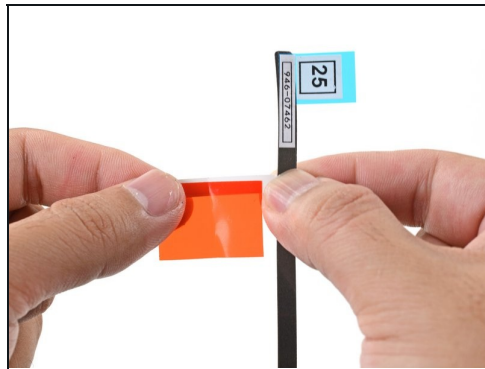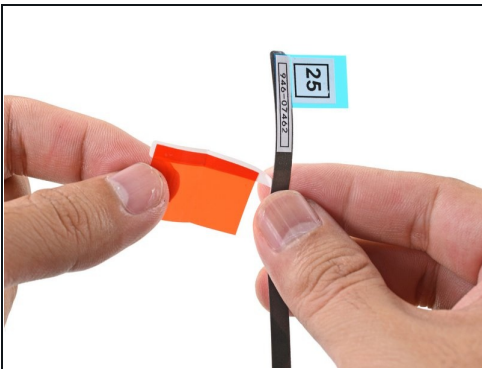


- Fold the loose white backing to a right angle and pinch the crease with your fingers.
  - ① This exposes 2 inches of adhesive while folding the red tab out of the way.

## Step 14



- ① The microphone hole is [the center hole](#) flanked by two larger holes.
- Align the adhesive strip to the bottom edge by positioning the microphone notch over the microphone hole.
  - If your iMac does not have a microphone hole, align the right end of the strip such that the L-bend [sits next to the right vertical adhesive](#). **The L-bend should not overlap the right vertical adhesive.**
- ① The adhesive tears easily. Be careful not to pull on the strip with too much force.
- Once you have aligned the strip, carefully set the left exposed edge onto the iMac to secure the alignment.


## Step 15

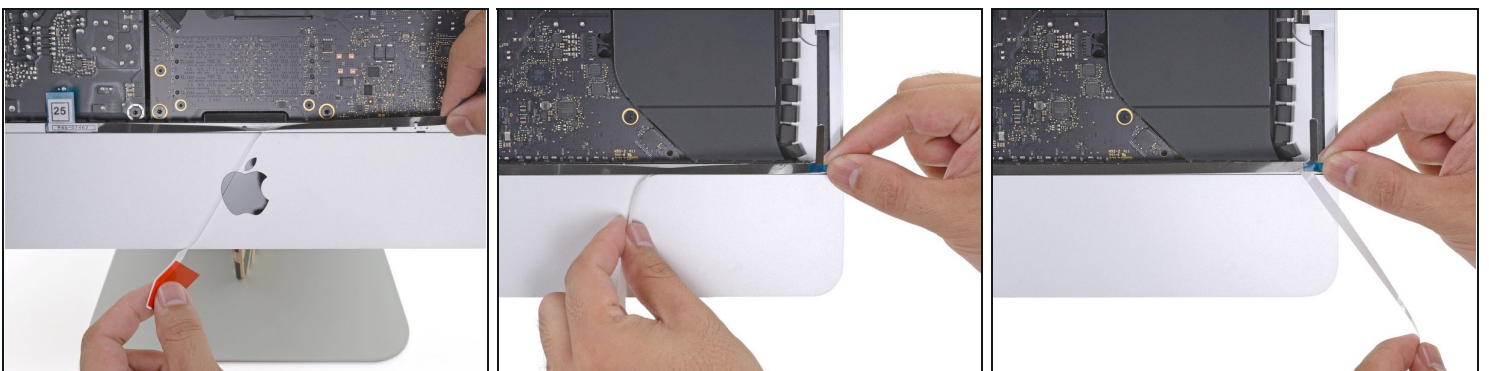

- Peel away the white backing behind the strip to expose the remaining adhesive.



## Step 16

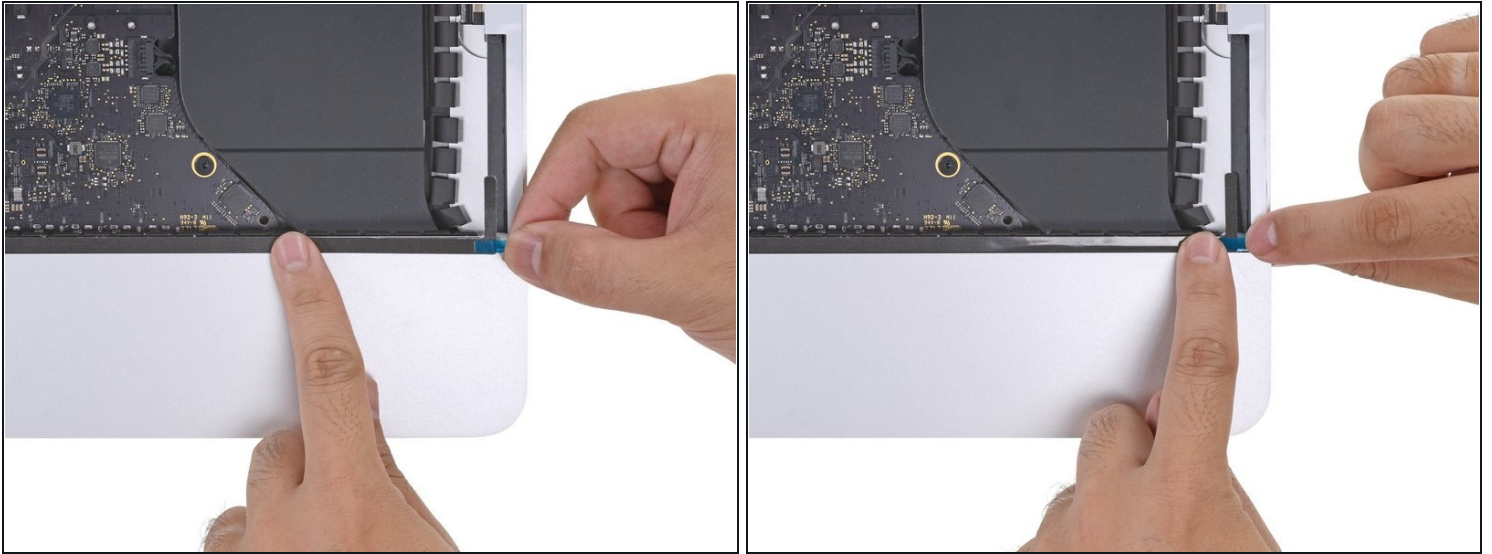

- Run your finger from left to right along the length of the adhesive strip to ensure it is straight and unwrinkled, pressing down as you go to adhere the strip to the iMac.

## Step 17




- Repeat the previous steps for the bottom left adhesive strip (strip 26), aligning and placing it along the bottom left edge of the iMac.
  - ① The strip should be positioned such that the L-bend sits next to the left vertical adhesive. **The L-bend should not overlap the left vertical adhesive.**
  - ① Once you've applied all the adhesive strips, the iMac should look as shown in the second photo.

## Step 18 — Replace the display



- Gently set the display in place over the iMac and align it carefully.

## Step 19

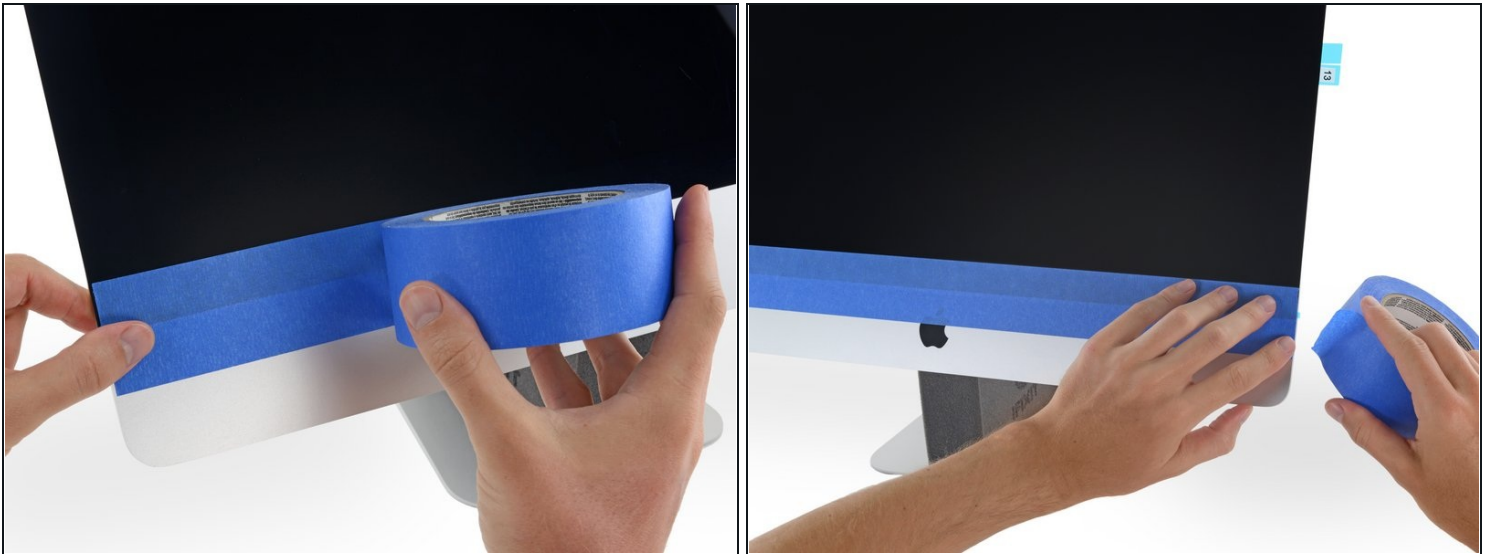

- Use painter's tape or masking tape to temporarily secure the bottom edge of the display to the iMac's enclosure.
  - ① The tape preserves the display's alignment, and allows you to safely swing the top edge of the display open to access the display cables.




## Step 20 — Test your repair



- ⓘ *At this point it's a good idea to test your repair, in order to make sure your iMac works properly before you seal it back up. Follow the next three steps to temporarily reconnect the display cables and boot up your iMac prior to pulling the protective film off the adhesive strips.*
- If you've already verified that your iMac is working correctly and are ready to seal it up, skip to [step 22](#).
  - Gently insert the display data connector into its socket on the logic board. Be sure to press it straight into the socket, and insert it completely.
  - Flip the display data connector lock down onto the socket.
  - Insert the display power connector into its socket on the logic board.

## Step 21

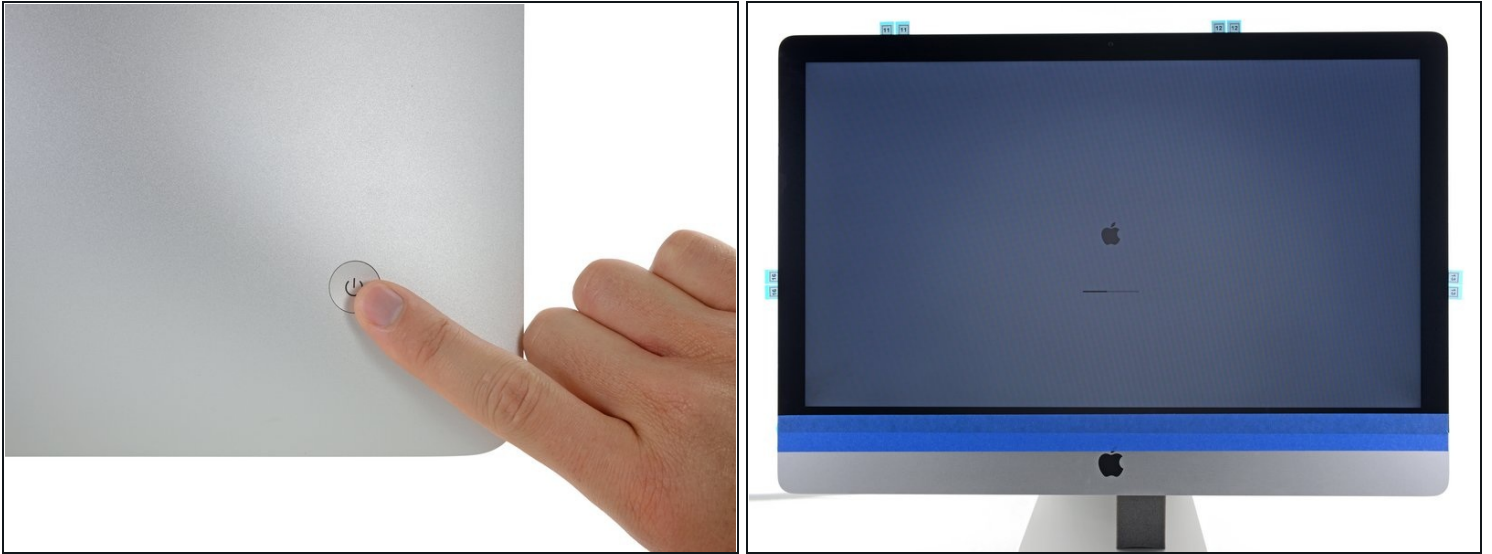

- Set the display back on the iMac's rear enclosure.
- ⓘ At this time, plug in your iMac, power it on, and test your repair before sealing up the computer. Be sure to check for full functionality of any hardware you removed or disconnected.
- ⚠ When you are finished, shut the iMac down and **unplug the power cord** before you continue.

## Step 22 — Seal the iMac



⚠ Verify that your iMac is turned off and unplugged from power before you continue.

- After confirming that your iMac functions properly, disconnect the display cables and carefully lean the display forward.
- Remove the film from the two bottom strips by reaching in from above with a pair of tweezers and pulling the blue tabs straight up from the bottom edge of the display.

## Step 23




- Reconnect the display power and data cables for the final time.
  - ☑ Remember to secure the metal retaining bracket on the display data cable.

## Step 24



- ☑ Check the glass directly in front of the webcam for dust and other contaminants. If necessary, wipe it down with a [microfiber cloth](#) before you seal up the display.
- Steady the display with one hand as you remove the protective film in the following steps, or rest it lightly against the iMac's enclosure.


## Step 25

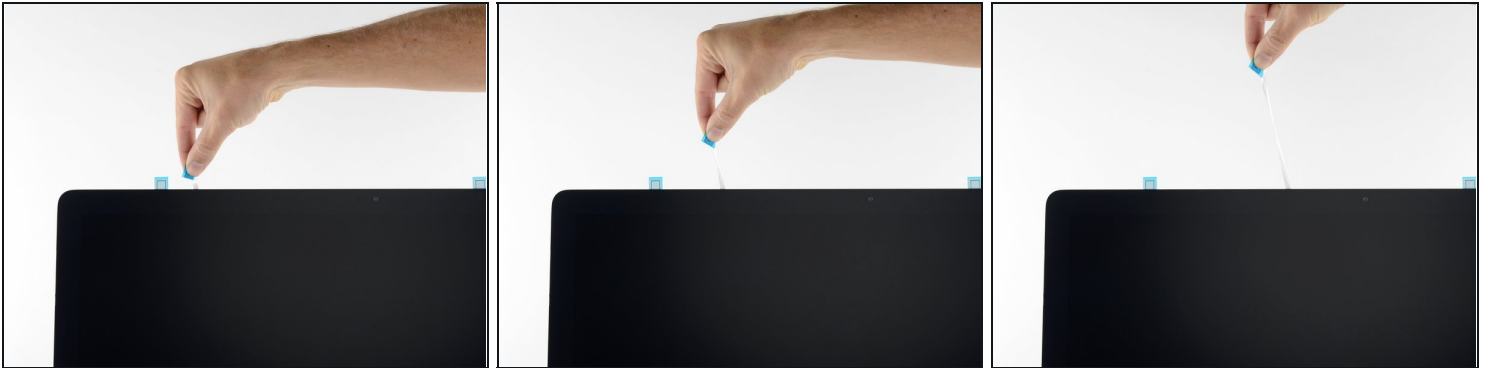

- Remove one side of the protective film from the top left strip by pulling its tab straight up.




## Step 26

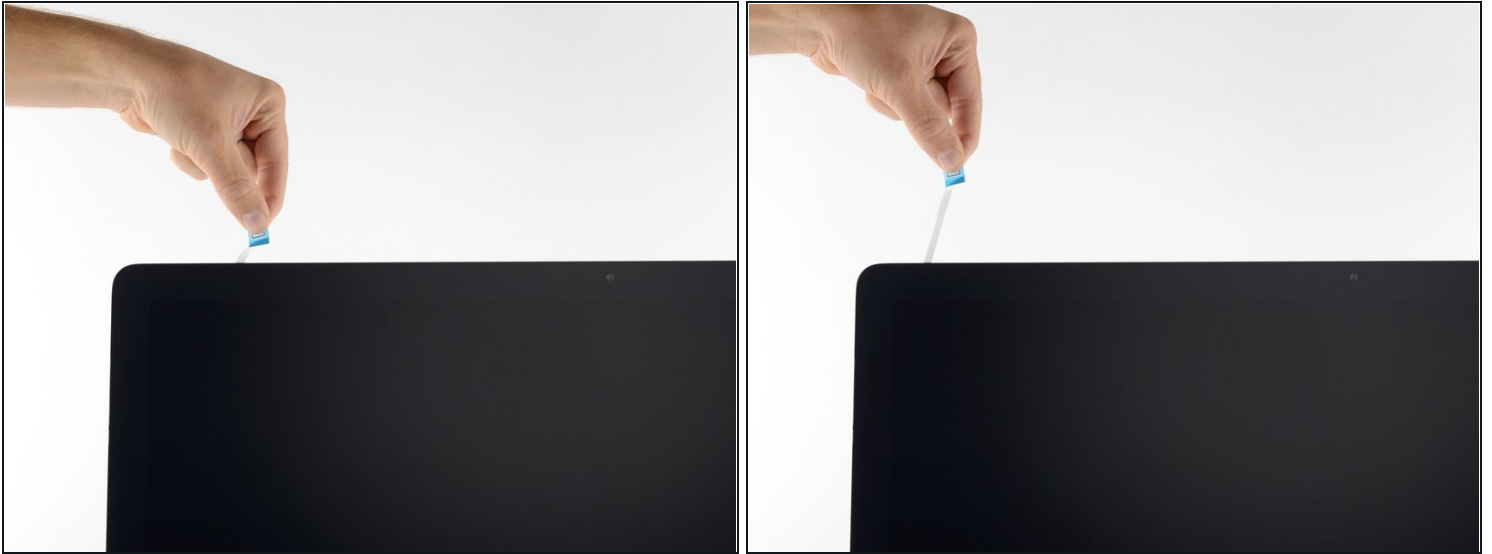

- Remove the other side of the protective film from the top left strip.

## Step 27

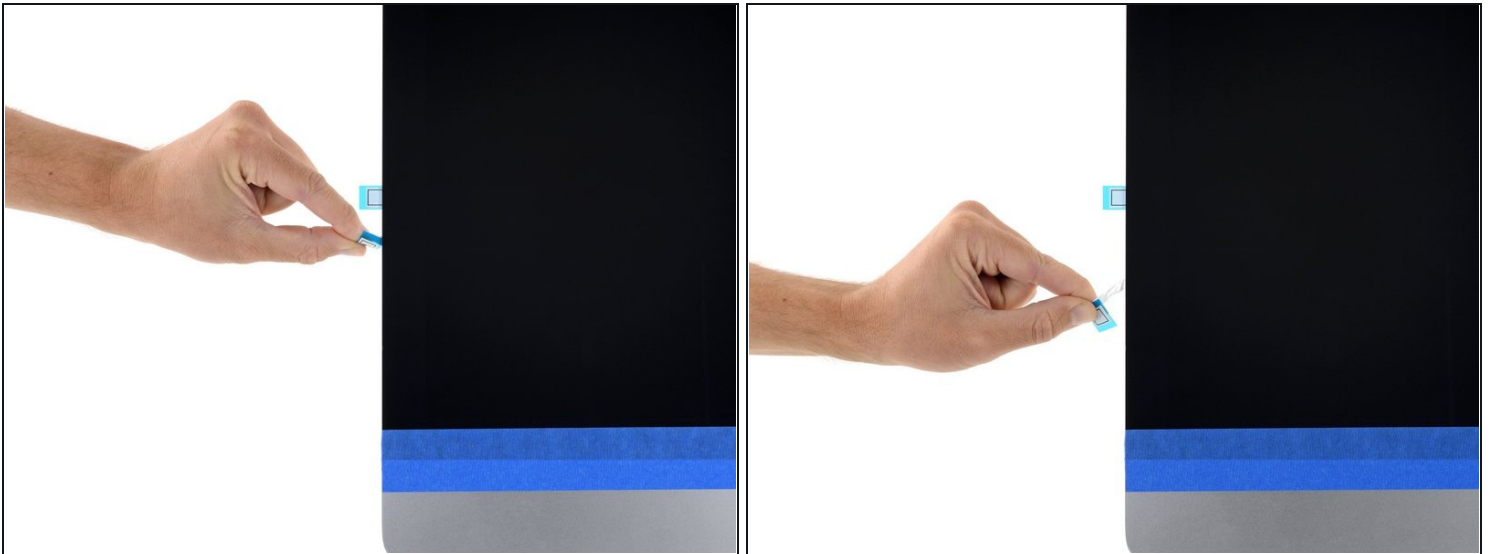

- Repeat the previous steps to remove the protective films from all the remaining adhesive strips.



## Step 28



- To ensure a strong bond, carefully tip the iMac flat on its back (with the screen facing straight up) and press carefully but firmly around all four edges of the display.
- Remove the tape securing the display to the rear enclosure.
- ☒ Check the display after 24 hours to make sure that it is not loose on the iMac.

---

Take your e-waste to an [R2 or e-Stewards certified recycler](#).

Repair didn't go as planned? Check out our [Answers community](#) for troubleshooting help.