



# How to Replace Hardwood Flooring

Use this guide to replace the hardwood floor in your household or place of residence.

Written By: Rori Tyrrell



---

## INTRODUCTION

Do you have a section of flooring that's warped? Are your floors scratched from years of use? Replacing those floors with hardwood panels is much easier than you'd think, and costs far less than paying professionals.



### TOOLS:

- [Notched Trowel](#) (1)
- [GreenGrip hardwood bond adhesive](#) (1)

#### Adhesive

- [Tape Measure](#) (1)
-



## Step 1 — How to Replace Hardwood Flooring



- Remove the hardwood, tile, or carpet flooring you are trying to replace to expose the foundation or plywood underneath. The methods will vary depending on the type of flooring that is being removed.
- ❗ Be sure to remove extra fragments of the original flooring and clean the area of any debris.



## Step 2



- With a notched trowel, spread the GreenGrip hardwood adhesive over the foundation where you would like to lay the new flooring.



### Step 3

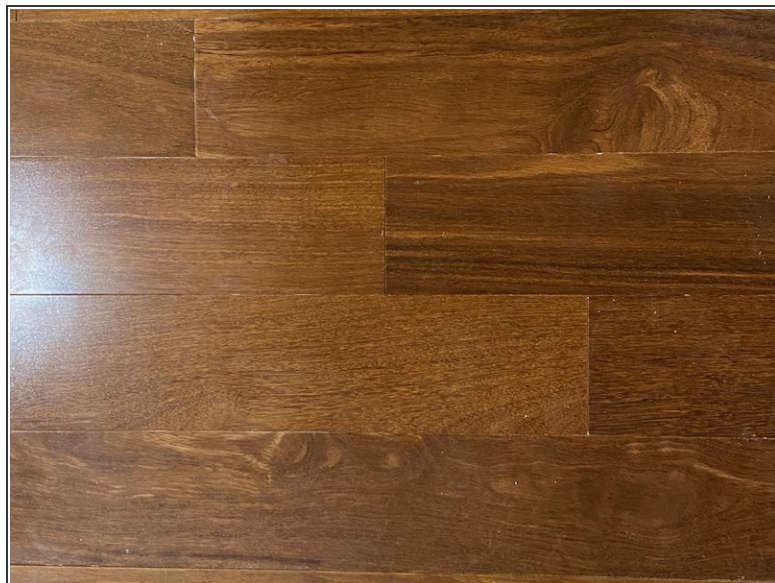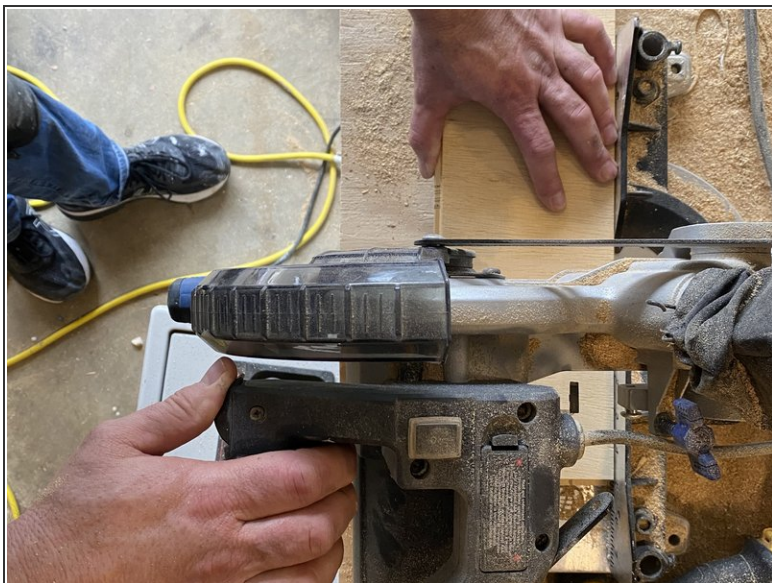

- Measure the planks of wood to organize them into a desired pattern, then cut each plank accordingly.

### Step 4



- Carefully place the boards on top of the glue, making sure to push the seams of the planks together.



## Step 5



- Some of the adhesive may come through the seams, so wipe off any excess glue with a wet rag.

## Step 6



- Let the glue cure for 24 hours and enjoy your beautiful new floor!