



Casio DW-6900 Watchband Replacement

If your Casio G-SHOCK DW-6900 watchband is...

Written By: Shaoguang He



INTRODUCTION

If your Casio G-SHOCK DW-6900 watchband is damaged or you want to change the watchband color, use this guide to replace the watchband.

There are no special requirements and hazards.

During the process, keep screws in a safe place


TOOLS:

Flathead Screwdriver small (1)

Phillips screwdriver (small) (1)

Step 1 — Watchband



 There are four screws— two on each side of the watch case.

- Use the Phillips screwdriver to remove four 4.5 mm screws.

Step 2




- There are two trunnions on both sides of the watch, and there are four grooves.
- Use a small flat-blade screwdriver and push inward to remove the trunnion. And remove the strap.

Step 3




- From the bottom of the watch, buckle the case from the main body of the watch by hand.

Step 4

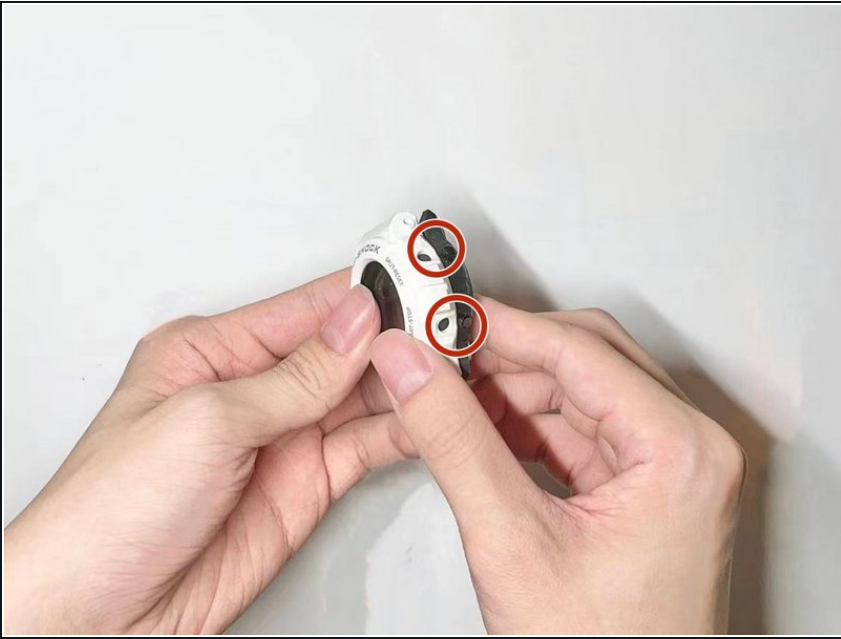


- Align the hole on the side of the case with the button on the watch and put on the new watch case.

Step 5

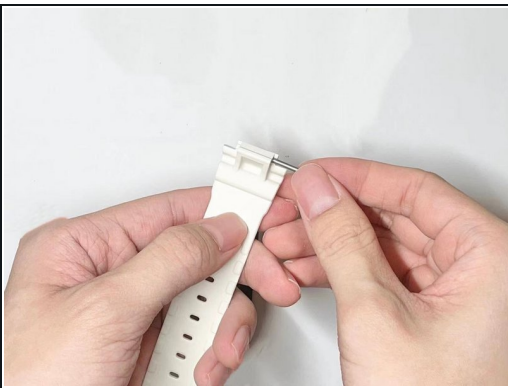

- Thread the trunnion into the small hole on the strap.
- First, snap one side of the trunnion into the hole of the watch body.
- Use a flat-blade screwdriver to push the other end of the trunnion into the main body of the watch.

Step 6

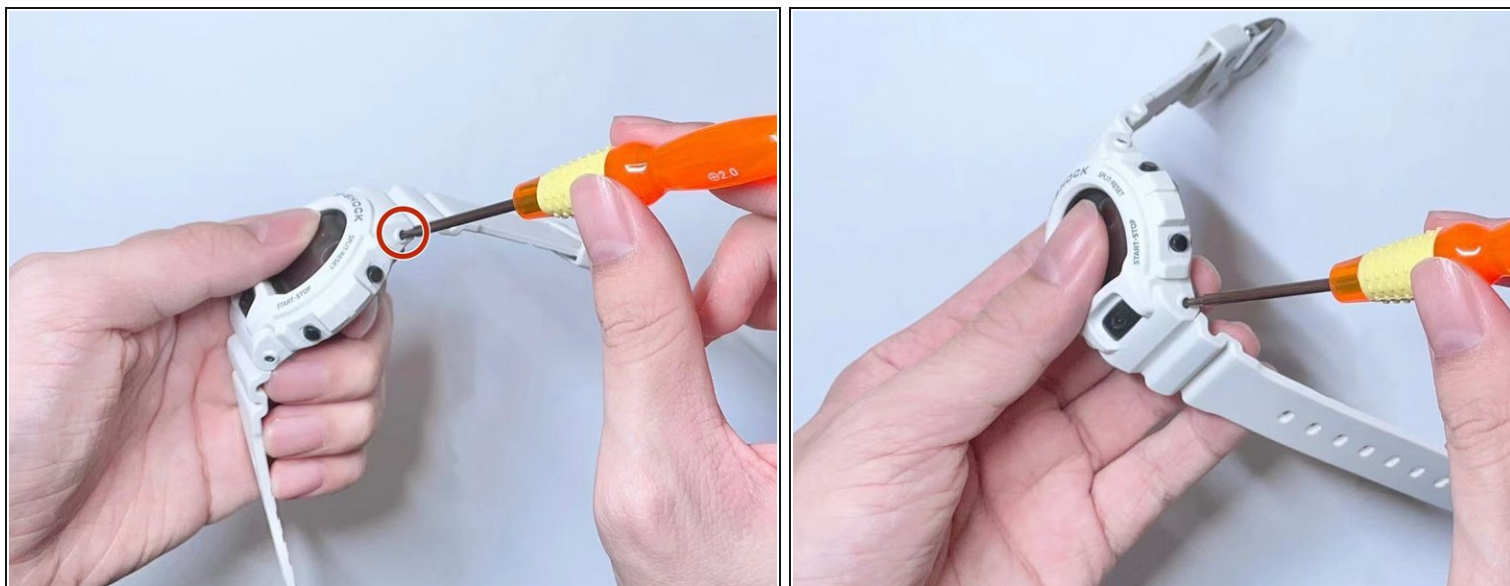

- Screw on the four screws on both sides of the watch.

To reassemble your device, follow these instructions in reverse order.