



Cupboard Drawer handle Replacement

This guide will show you how to remove and replace the handle in a standard cupboard drawer.

Written By: Raisa Jahan



INTRODUCTION

Most handles get broken or wobbly after a while. The handles on drawers in desks, cabinets, and other furniture may break off when a substantial object hits them. Moving furniture from one building to another can also cause this damage if the drawers are not properly secured. In this guide, I will be demonstrating how to repair a broken handle of a wooden cupboard.

In step 1 of the guide, you will need to take out the drawer out of the cupboard .Remove the belongings of the drawer before taking out the drawer.



TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Handle



- Remove the drawer from the cupboard and empty the contents.

Step 2




- Tighten the good side of the handle by rotating the screwdriver in a clockwise direction.

Step 3



- Take a screw with a similar radius of the handle's hole for the drawer.

Step 4

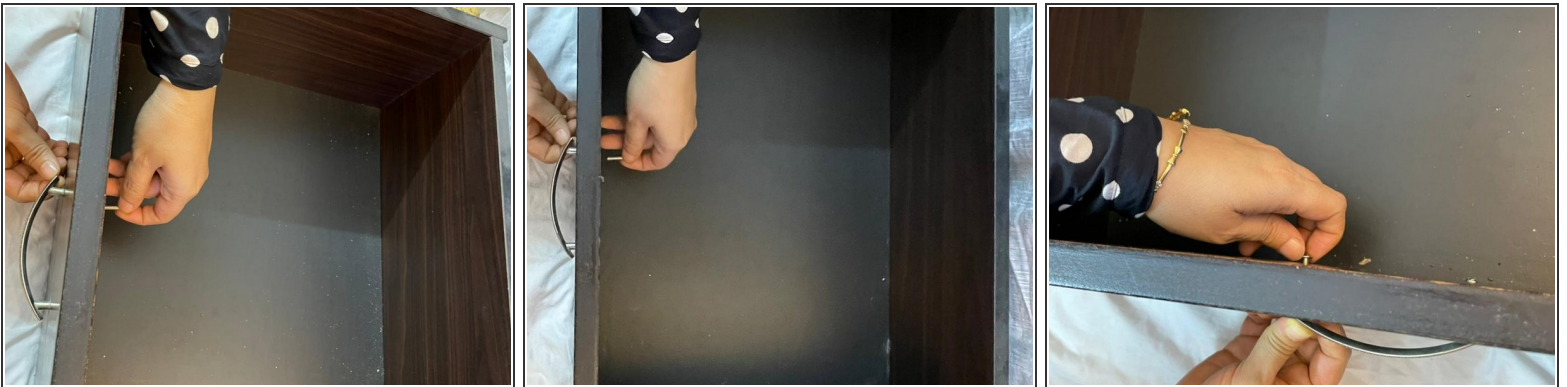

- Line up the hole or holes on the back of the handle with the holes in the front plate of the drawer.
- Take the screw and insert it in the hole at the back of the drawer.

Step 5



- Adjust the screw in a way that it stays in a straight line.
- Slowly rotate the screw clockwise and in a straight position so that the handle stays erect.

Step 6



- Make sure to check the grip of the handle.

To reassemble your device, follow these instructions in reverse order.