



# Toshiba Satellite A85-S107 15" Disc Drive Replacement

Use this guide to replace or install the disc...

Written By: Alana



# INTRODUCTION

Use this guide to replace or install the disc drive in your Toshiba laptop.

## TOOLS:

[Phillips #0 Screwdriver](#) (1)  
plastic openers  
[iFixit Opening Tool](#) (1)

## PARTS:

[PA3457-1BRS Lithium ion Battery](#) (1)

## Step 1 — Battery




- Power off the laptop.
-  **Disconnect the power cable from the laptop. If you do not, electric shock may result.**

## Step 2



- Flip the laptop over and orient it such that the battery faces towards you and the front faces away from you as shown in the diagram.
- Unlock the battery by sliding the tab shown to the right
  - ⓘ This tab will latch into place.

## Step 3

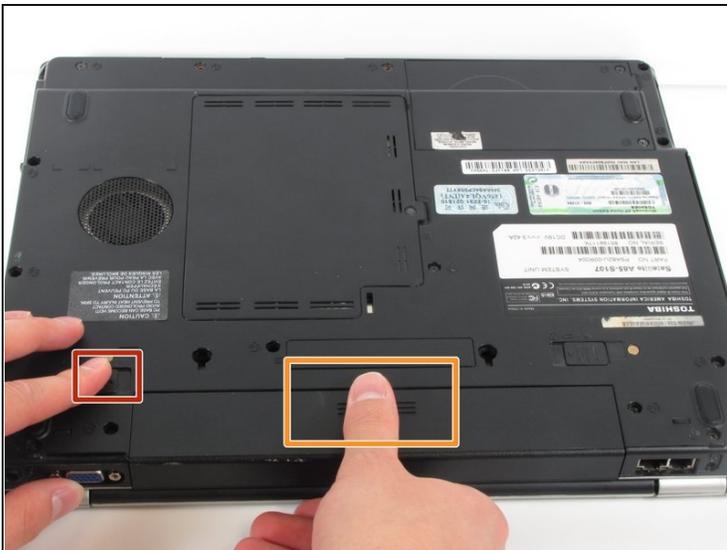

- Slide the tab shown to the left and remain holding it.
  - ⓘ This tab does not lock into place like in the first step.
- Place your thumb on the grips of the battery as shown.
  - While holding onto the grips, pull the battery towards you and away from the laptop.

## Step 4 — Disc Drive



- Flip the laptop over and orient it so that the battery faces away from you.
- Remove the 5mm Phillips #0 screw on the bottom case.

## Step 5



- Insert the plastic opening tool into the gap between the disk drive and the laptop and pop out the disk drive.
- Slid the disc drive out of its slot on the left side of the computer. It should slide out easily.

To reassemble your device, follow these instructions in reverse order.