



Enagic Water Filter SD501 Platinum Filter Replacement

Maintain Enagic Water filter SD501 Platinum by replacing the filter inside.

Written By: Edwin Ng



INTRODUCTION

Learn how to replace the filter of your Enagic Water filter SD501 Platinum to maintain its function with this filter replacement guide.

It is important to do this replacement since we would want to keep your water source as clean as possible. The filter should be always replace in 6-9 months. You can always make sure by marking the dates down.

Make sure you have prepared a brand new filter for steps 7 and 8 to replace the old one.

Before beginning, you might want to clean up the surroundings. You don't want anything getting in your water filter machine.



PARTS:

- [LeueLuk series Water Filter HG-N](#) (1)
-


Step 1 — Filter



⚠ Turn off and unplug the machine before cleaning it.

- Clean the machine with a damp cloth or paper towel.
- i** Make sure nothing dirty will get in the machine during the process.

Step 2

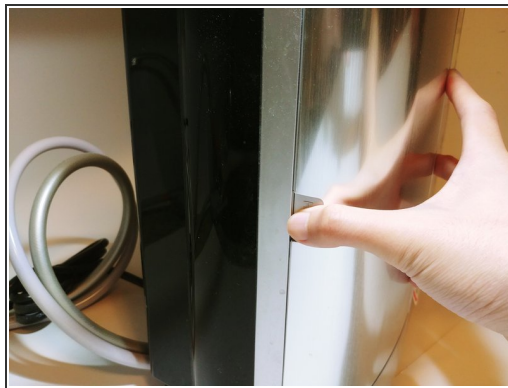

- Open the filter door by pushing the "Push" button.

Step 3



- Turn the ring at the bottom of the filter to the left until you hear a "click".

Step 4



- Remove the ring for now.

Step 5



- Lift up the old filter and discard or recycle appropriately.
 - ⓘ Some water might be dripping out from the bottom of it. Have a towel ready to clean it up.

Step 6



- Remove the two black rubber rings.
 - ⓘ They are **NOT** components of the machine. The new filter you have prepared should come with new ones.

Step 7



- ✦ Put your new filter in it.
- ⓘ Make sure that the two holes match the two popped-out parts from the filter.
 - ⓘ The one that is bigger should be on the middle and the smaller one should be on the side.
- ✦ This filter should be the new one that you have prepared and **NOT** the one that is removed from Step 5.

Step 8



- Put the ring component back in.
- Turn it to your right until you hear a click.
- ⓘ Make sure it is successfully locked in.

Step 9



- Turn the filter back on.
- Press the "Reset Switch"
- ① "FILTER RESET" should be shown on the display.

Step 10



- ✦ Attach the filter door.
- ① There are three holes to slide the door edge into.
- ✦ And push the "push" button to close it.

To change another filter, simply just follow the instructions once more.