



Michael Kors Hartman Rose Gold Watch

Battery Replacement

This guide will show you how to replace the watch battery in a Michael Kors Hartman Rose Gold Watch.

Written By: Tyrell



INTRODUCTION

Watch repairs at a jewelry store can be expensive, and not all places accept the same brands. However, a self-repair can save watch owners time and money and requires little knowledge to do. This battery replacement guide for a Michael Kors Hartman Rose Gold watch will provide step-by-step instructions to successfully deconstruct, replace, and reconstruct the watch and its battery.



TOOLS:


- [Electronic wipes](#) (1)
- [Push Pin](#) (1)
- [Spudger](#) (1)



PARTS:


- [SR616SW or 321 equivalent Lithium coin cell battery](#) (1)

Step 1 — Battery

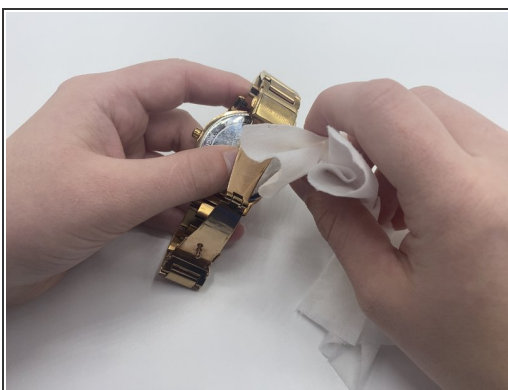

- Thoroughly clean the watch using electronic wipes.
- ❗ Be sure to get around the battery cover and remove as much dirt, dust, and/or debris to ensure an easy removal.

Step 2

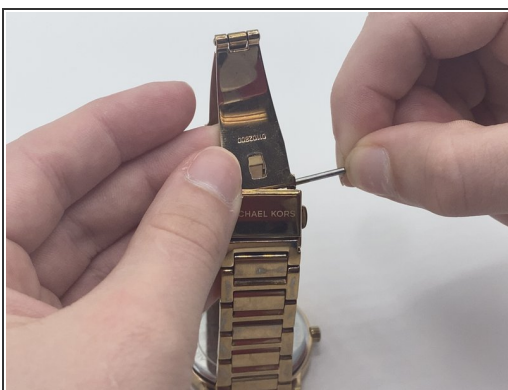

- Locate the spring pin under the band strap with the latch hole.
- Insert a push-pin into the hole.
- Push against the spring pin as needed until the band strap pops out.
- Remove the spring pin.
- ✦ Be sure to place the spring pin in a safe location. You will need it later for reassembling the watch.

Step 3




- Lay the watch clock face down on a dry, flat surface.

Step 4



- Place a spudger into the small notch on the edge of the battery cover.
- Pry the battery cover, using as much force as necessary.
- ⓘ How well you cleaned around the battery cover in Step 1 may determine how much force you will need to use.
- Remove the cover and place it to the side.

Step 5

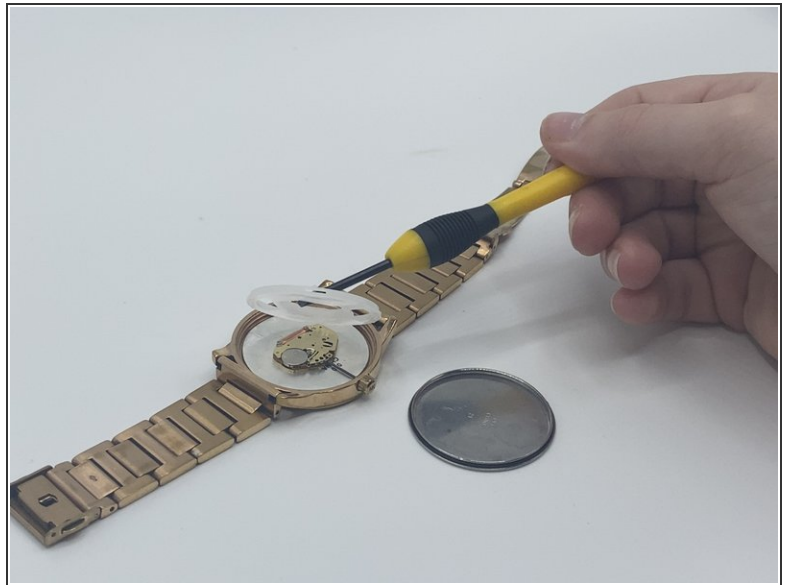

- Remove the plastic piece and set it aside.
- ⓘ You can do this step using either a spudger or your fingers.

Step 6



- Remove the battery from the watch.
- ❗ You can do this step using either a spudger or your fingers.

⚠ Batteries are considered hazardous waste. Do not throw away the battery. Keep it until you are able to dispose of it properly. Depending on where you live, some stores like Best Buy will recycle batteries for you at no charge.

Step 7



- Insert the new battery into the watch.
- ❗ Depending on the brand you buy, the battery needs to be an SR616SW or a 321.

Step 8



- Insert the plastic piece back into the watch.
- ⓘ The inner flap of the plastic piece should lay right on top of the battery and cover it completely.

Step 9






- Lay the battery cover back onto the watch.
- ⓘ There is a very small notch under the cover that should line up with the crown of the watch.

Step 10



- Press firmly on the battery cover, using both of your thumbs to snap it back in place.

Step 11

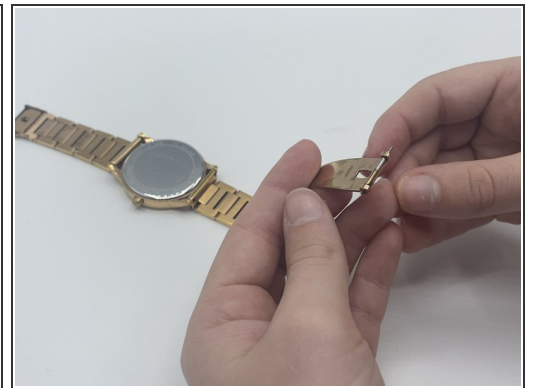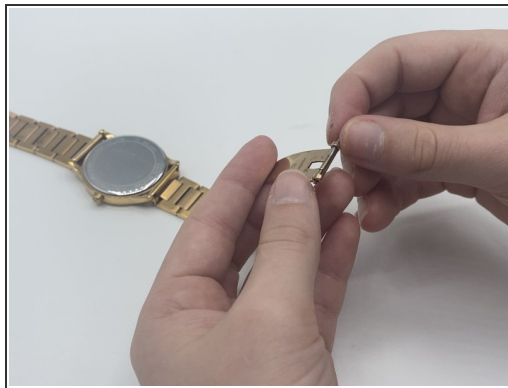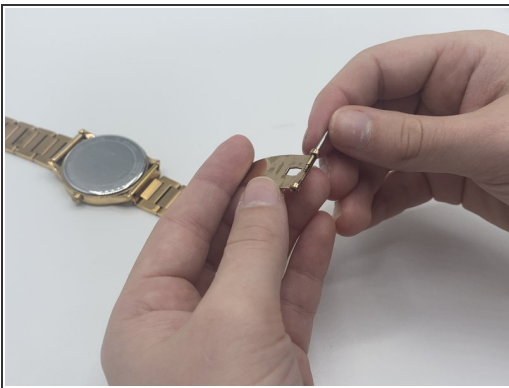



- Re-insert the pin you removed into the hole of the smaller (lengthwise) folding segment.

Step 12



- Align both ends of the watch, holding the segment with the spring pin adjacent to the hole.


Step 13

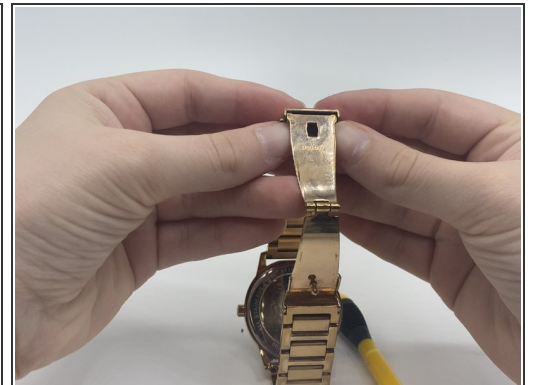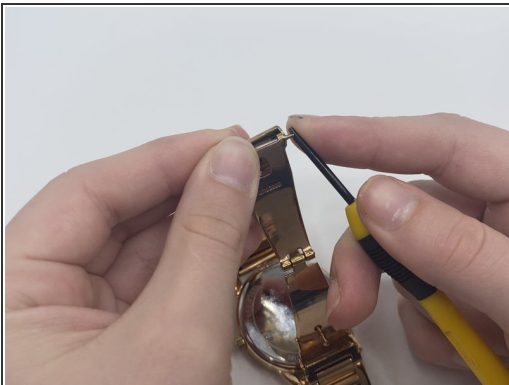

- Use a spudger to press down on the spring pin, guiding it into the second hole.
- Release once connecting segments are in place.

Step 14



 Optional: Use your electronic wipes to remove any unwanted fingerprints.

- Place your wrist in the watch.
- Relatch to ensure you correctly reassembled the watch.

Congratulations! You have replaced the battery from your Michael Kors Hartman Rose Gold watch. If you followed the step-by-step instructions, you should now have a fully reconstructed watch that is properly working. If it is not working properly, go back and carefully repeat the steps to ensure you completed everything correctly. Be sure to adjust the watch to display the correct time, and you will be ready to go.