



# Vivotek FD8169 Camera Module Replacement

How to remove a camera module from the Vivotek FD8169.

Written By: Logan Bento





## TOOLS:

- [Essential Electronics Toolkit](#) (1)
-

## Step 1 — Dome Cover



- Loosen the outside screw.

## Step 2



- Press down on the side button, and lift up the top dome.

## Step 3 — Camera Module



- Remove three screws that connect the camera base to the motherboard using a Phillips #1 screwdriver.


## Step 4



- Lift off the camera base from the motherboard.



## Step 5

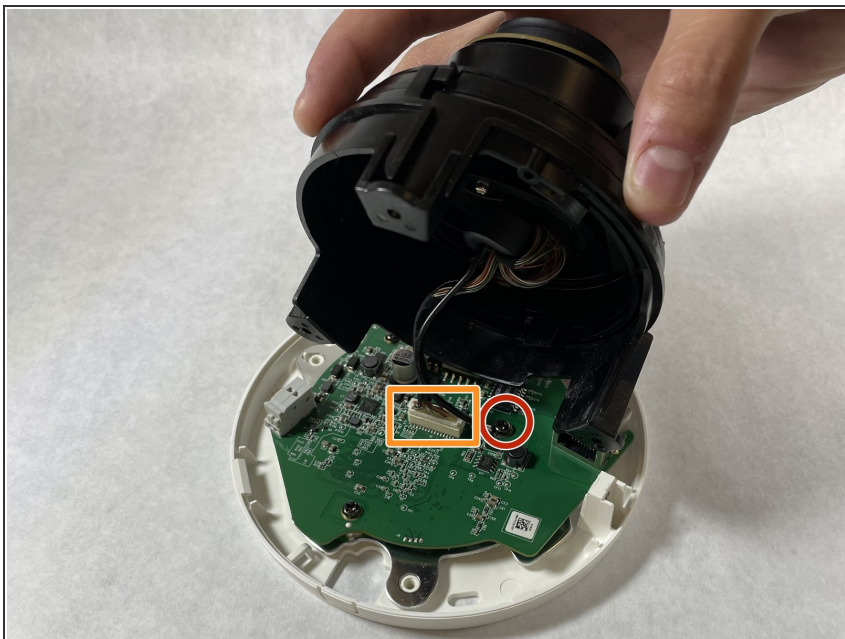

- Unscrew the cord from the motherboard.
- Unplug the remaining connection.

## Step 6



- Unscrew the camera from the camera base with a hex screwdriver on both sides.

## Step 7



- Pull the camera out from the camera base.

To reassemble your device, follow these instructions in reverse order.