




# Acer Iconia Tab B1 Factory Hard Reset/Password Removal

Written By: ZFix

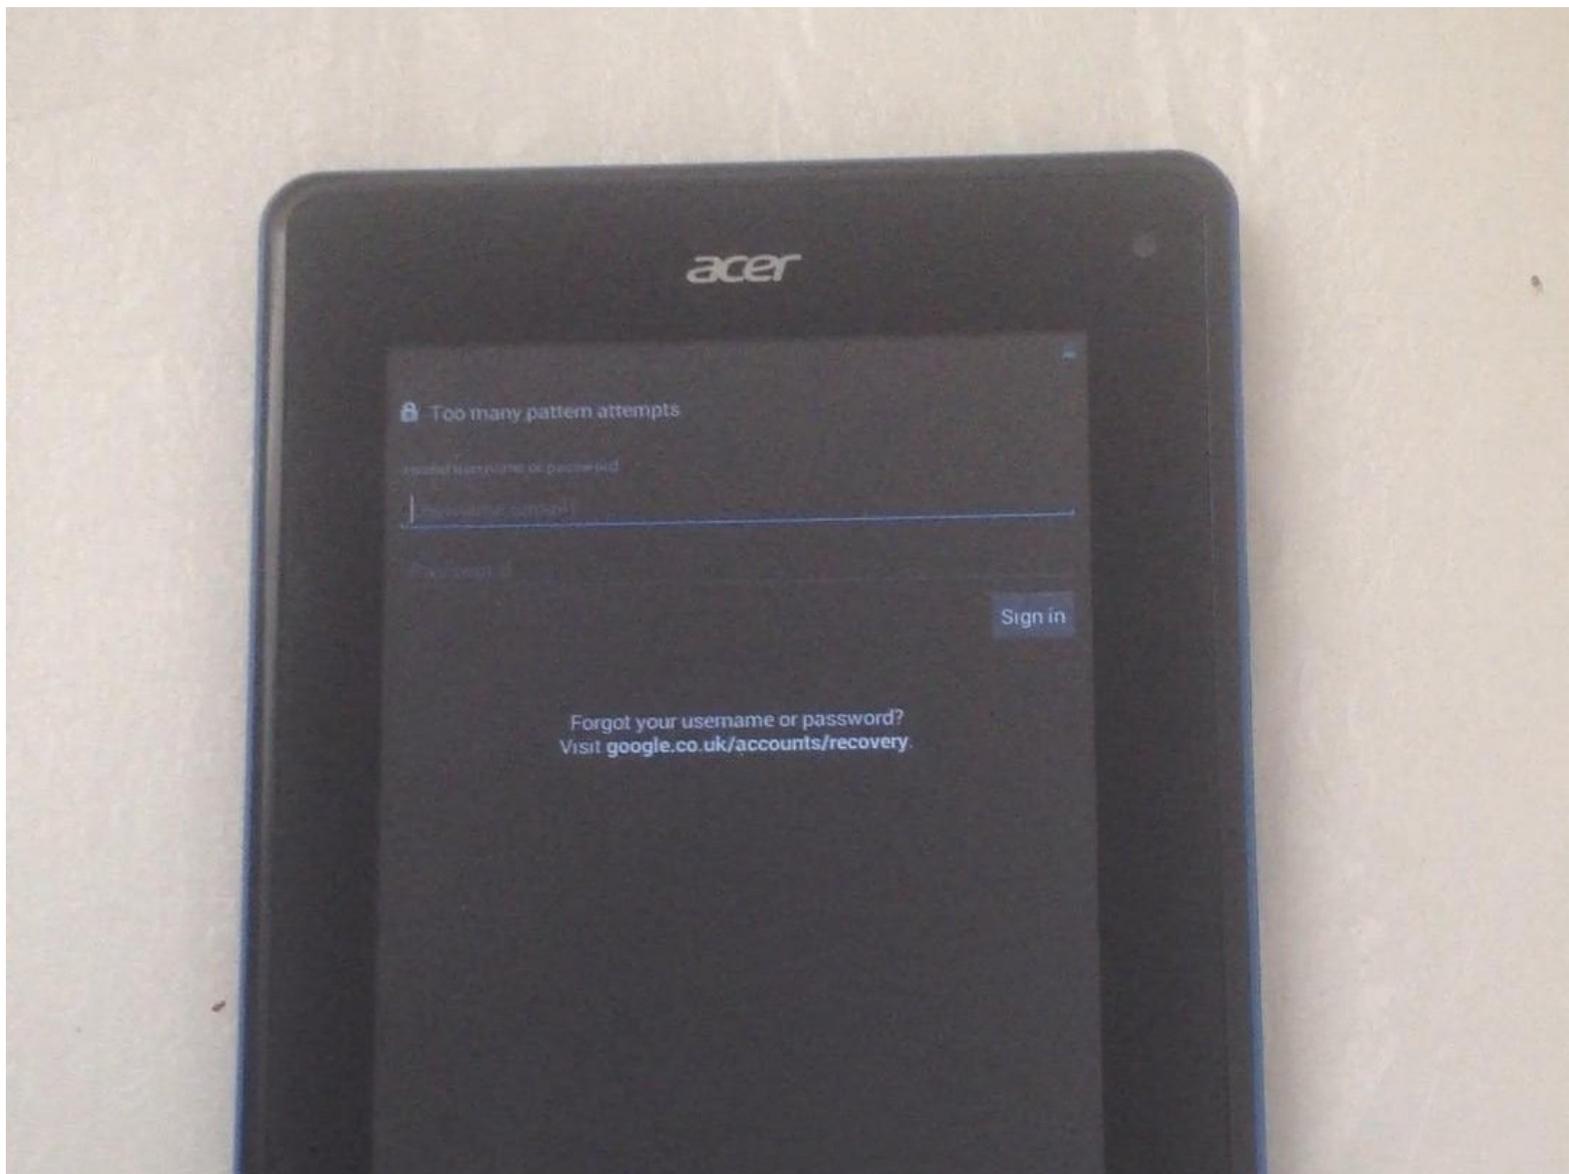

## INTRODUCTION

If it says "Too many pattern attempts..." or not working Android system, or you want to erase all data.

\_\_\_\_\_ **Video tutorial:** \_\_\_\_\_

[video: <http://www.youtube.com/watch?v=WioXs4vTG10>]

## Step 1 — Acer Iconia Tab B1 Factory Hard Reset/Password Removal



- From the reset hole we can make reset without erasing data.

## Step 2




- Power of the tablet. Push and hold *Vol(+)* and *Power On* keys together in the same time.

### Step 3




- Now you are in the Boot Mode menu. With **Vol(+), (-)** go to **[SD Update Image Mode]** and select it with **Power On** key.
- ⓘ Pressing the Power On key too quickly may turn off the tablet screen. You'll need to press and hold for about a second to select **[SD Update Image Mode]**.

### Step 4

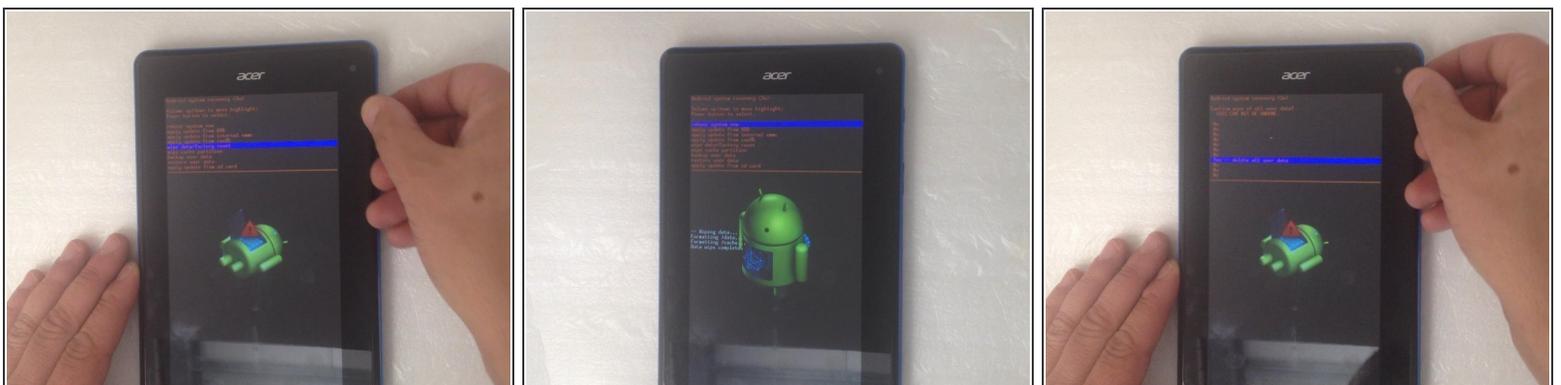

- Now you are in Android System Recovery Menu. Choose **"wipe data / factory reset"**, **"Yes -- delete all user data"**. And finally **"reboot system now"**.

## Step 5

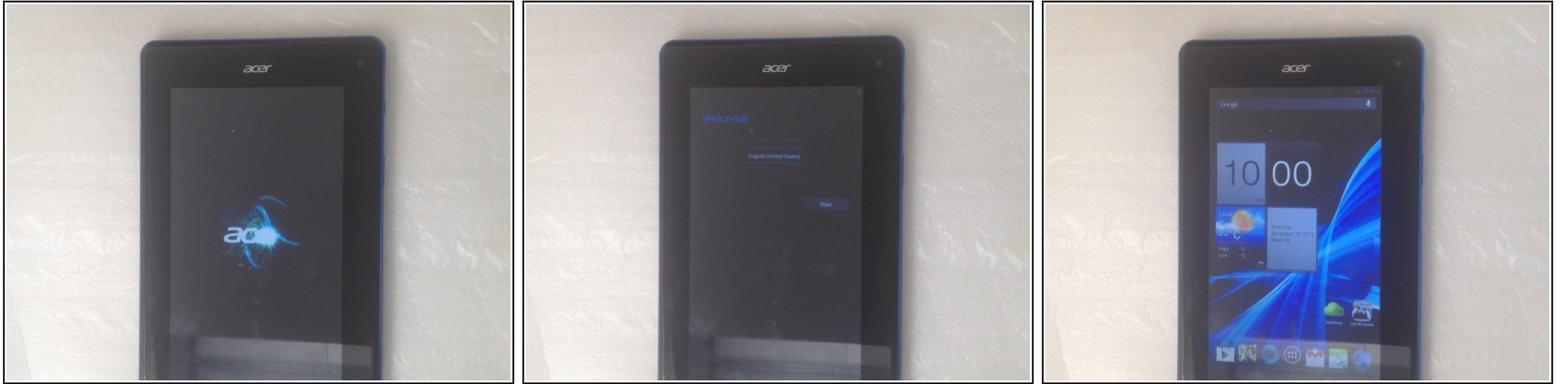

- **After restart you will have empty (free of data) device and access to it.**

To reassemble your device, follow these instructions in reverse order.