



Disassembling ZTE GRAND S FLEX : Unibody, Battery, Motherboard

Explain how to open the uni-body shell of the ZTE Grand S Flex. How to disassembling different components as Battery, Camera, Antenna,... At the final stage, the motherboard and the screen will be isolated.

Written By: Jonathan J





TOOLS:

- [Pro Tech Toolkit](#) (1)
-

Step 1 — Disassembling ZTE GRAND S FLEX : Unibody, Battery, Motherboard

1. Unpaste the black part

Introduce something sharp carefully into the hole of the micro to lift the black cover

Do not go too far, otherwise you will damage the micro




- Insert wisdom here.

Step 2



- Insert wisdom here.

Step 3

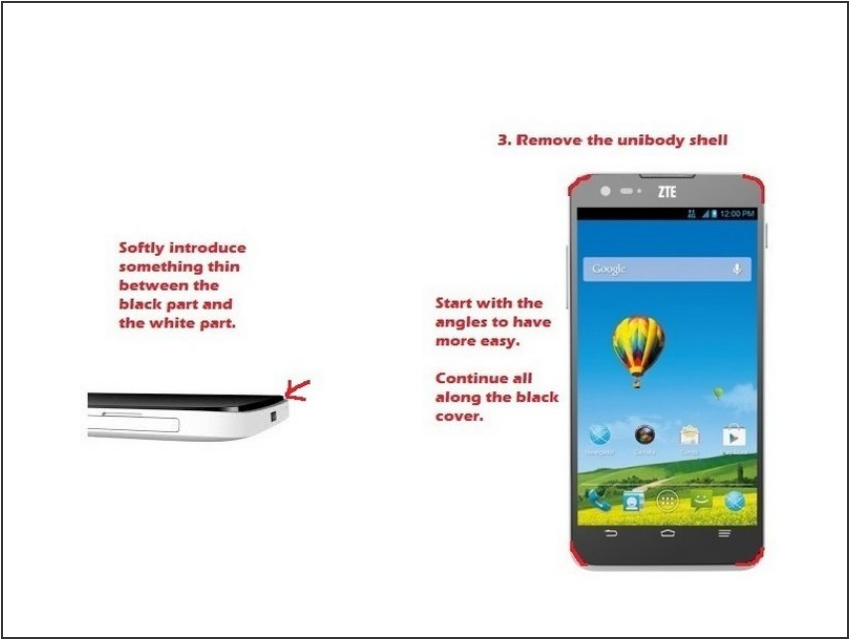

● Insert wisdom here.

Step 4




● Insert wisdom here.

Step 5



- Insert wisdom here.

Step 6

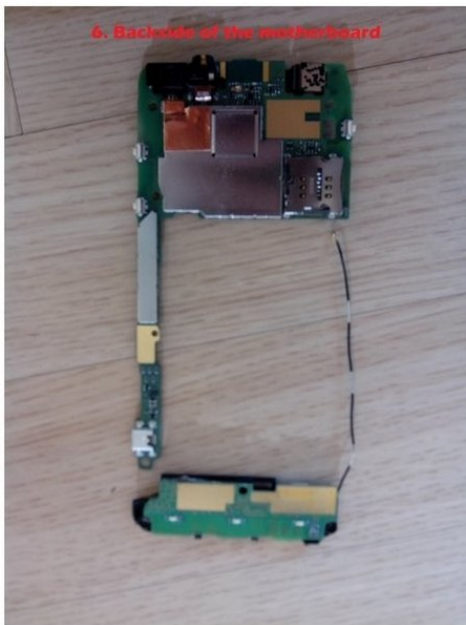

- Insert wisdom here.

Step 7



- Insert wisdom here.

Step 8



- Insert wisdom here.

Step 9



- Insert wisdom here.

To reassemble your device, follow these instructions in reverse order.