

HP Pavilion dv6-1245dx Battery Replacement

If you need to replace your HP Laptop (HP...

Written By: Jennifer



INTRODUCTION


If you need to replace your HP Laptop (HP Pavilion dv6-1245dx) battery, use this guide.

The battery supplies power to the device, enabling it to work without a power cord. The laptop will either be drained of power faster or won't power on with a faulty battery. Eventually, laptop batteries will rapidly drain after going through a repeated amount of charge cycles. If the battery drains faster than usual, you should replace your battery.

A punctured battery can cause a dangerous fire. If your battery is swollen, <u>take</u> <u>appropriate precautions</u>.

Before using this guide, make sure to turn off any external source of power connected to your device.

Step 1 — Battery

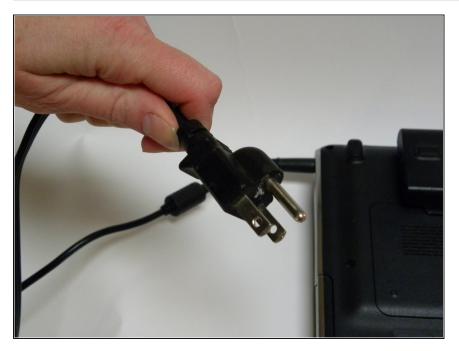

• Shut down the computer and unplug it from the outlet.

Step 2



• With the battery facing away from you, slide and hold the battery release latch to the left.

Step 3



• While holding the release, lift the battery away from the battery bay.

Step 4



Place the new battery into the battery bay, making sure the connectors are lined up so the battery can click into place.

To reassemble your device, follow these instructions in reverse order.