




# Nokia 6030 Keypad Replacement

If your Nokia 6030's keypad works...

Written By: Spencer Woodworth

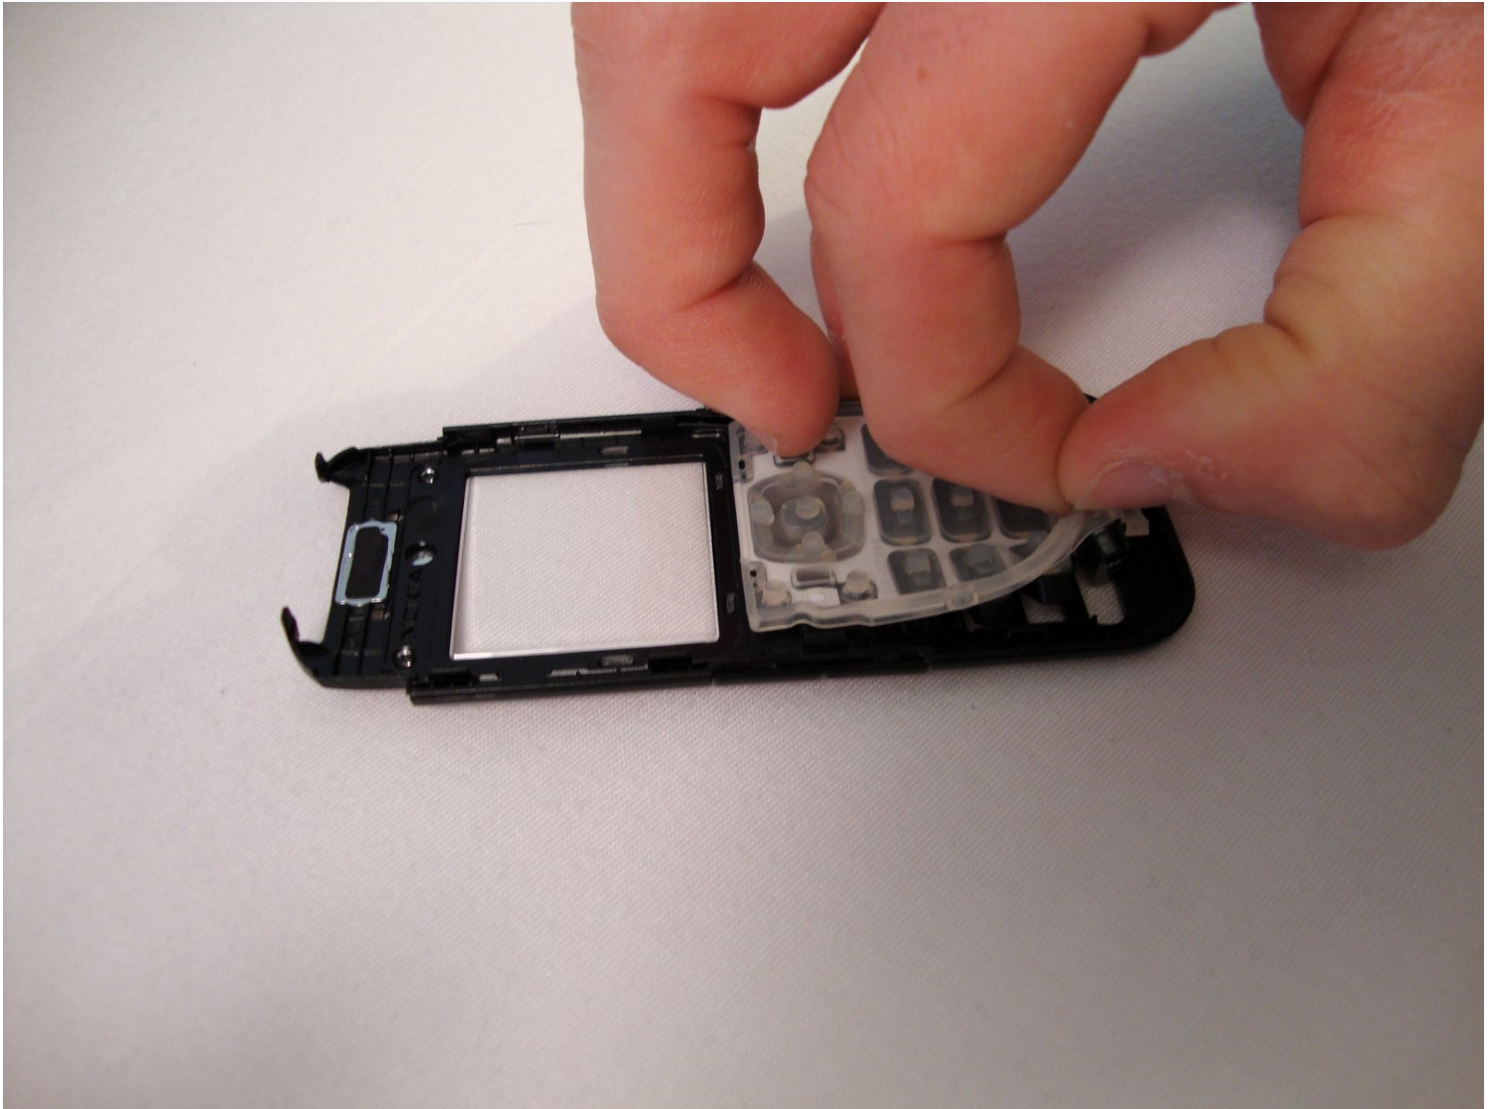

## INTRODUCTION

If your Nokia 6030's keypad works inconsistently, you may need to replace the old keypad with a new one.

After extended use, cell phone keypads become unresponsive. A faulty keypad causes frustrating experiences when attempting to type something on the device or to call someone.


This guide provides step-by-step instructions on replacing your Nokia 6030's keypad, without the need for any special skills or tools.

### Step 1 — Battery



- Press down on the grip on the back of the phone and slide the rear housing down towards the bottom of the phone.

## Step 2

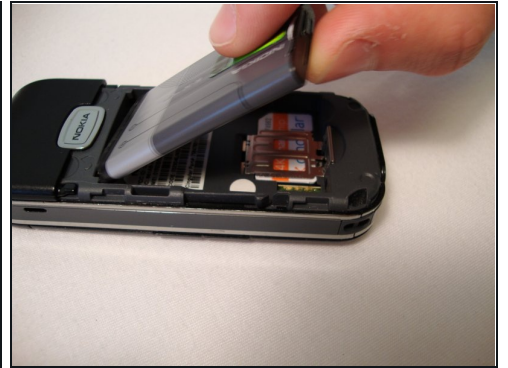

- Use your finger to gently pull the bottom of the battery up by using the slip found at the bottom of the phone.
- Lift out battery and remove.

## Step 3 — SIM Card



- Use your finger to lift the metal cage up.
- Remove SIM card.



## Step 4



- Use your finger to close the metal cage.

## Step 5 — Front Cover




- Insert your two fingers under the two tabs found at the top of the phone underneath the black casing, then pull the casing up and slide it out slowly.

## Step 6



- After removing the top cover, turn the phone over so the screen is facing upwards.


## Step 7

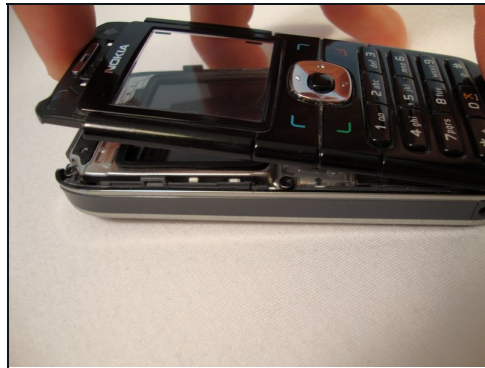

- Use your fingers to slowly lift the screen back towards the bottom of the phone using the arrows found at the top of the phone.




## Step 8 — Keypad

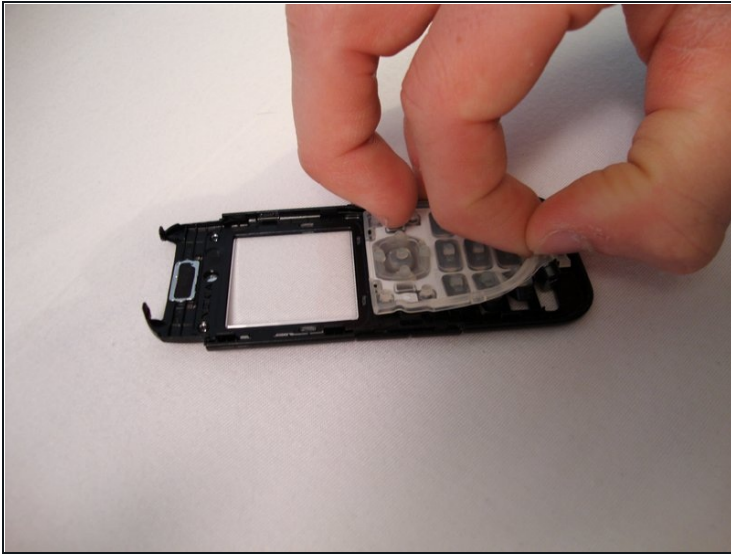

- Gently pull the rubber away from the front screen and the buttons will detach from the plastic case.

## Step 9

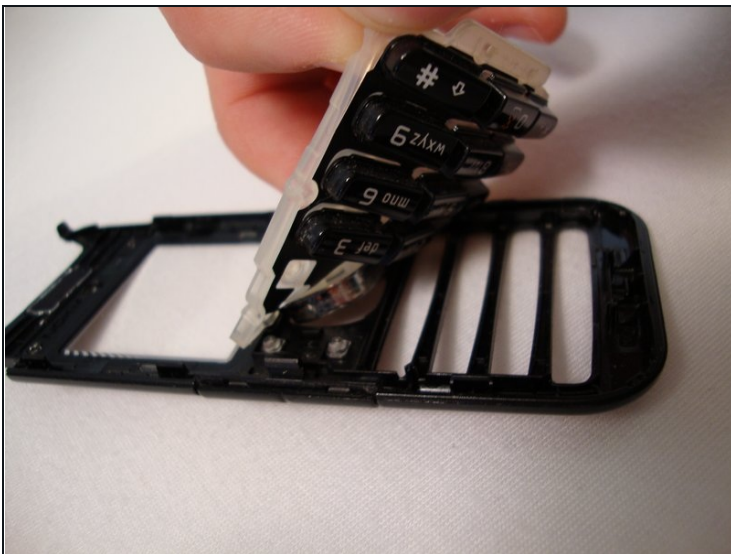

- Remove old keypad and replace it with new keypad.

To reassemble your device, follow these instructions in reverse order.