




# Lenovo IdeaPad N586 Optical Drive Replacement

Can't watch movies? Change your optical drive...

Written By: Christopher

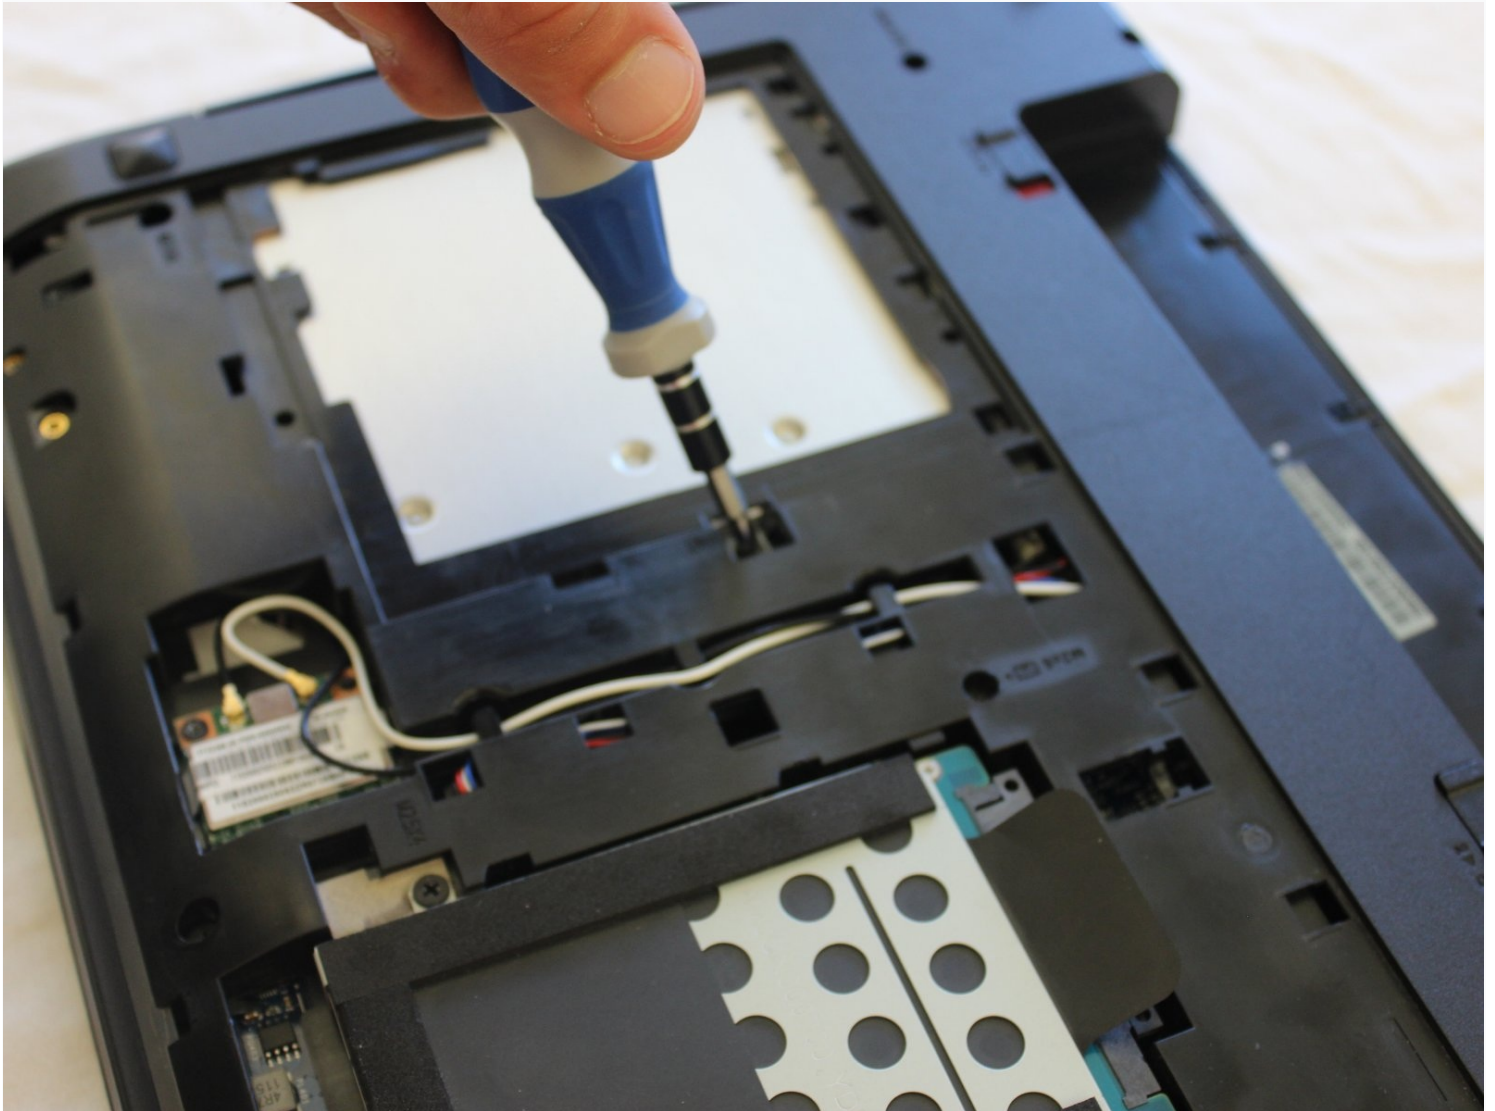

# INTRODUCTION

Can't watch movies? Change your optical drive with this guide!

## TOOLS:


Phillips #1 Screwdriver (1)

### Step 1 — Battery



- To unlock the battery, flip the laptop over so that the bottom is facing upward. Then unlock the left clip by pushing the clip to the left.

## Step 2

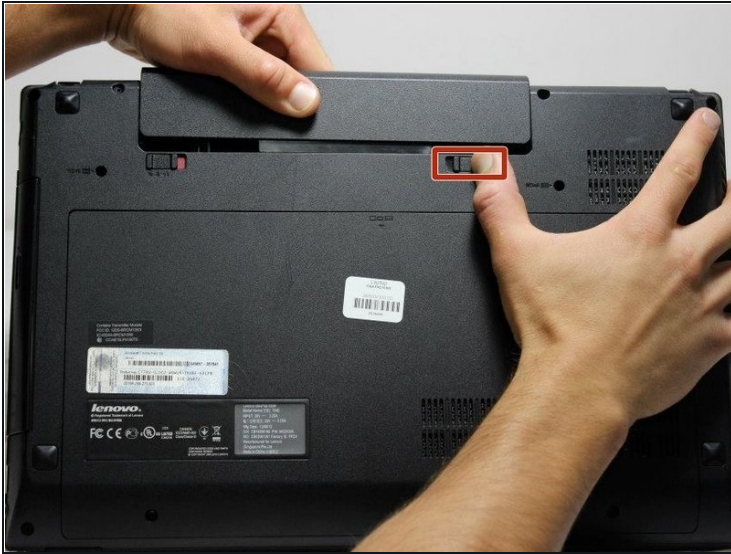


- Now push the right clip to the right and hold it while using your other hand to pull the battery out.

## Step 3 — Back Panel




- Remove the two screws highlighted.

## Step 4

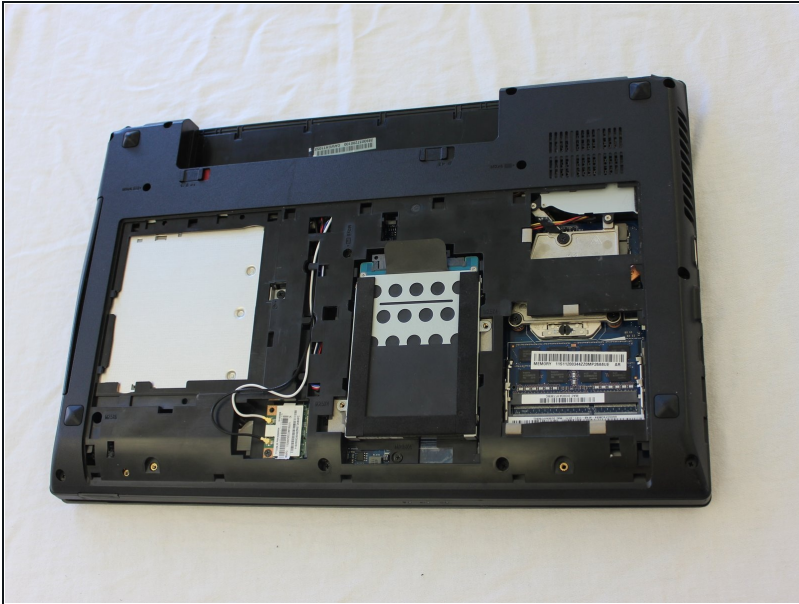


- This is the back of the laptop with the cover removed.

## Step 5 — Optical Drive

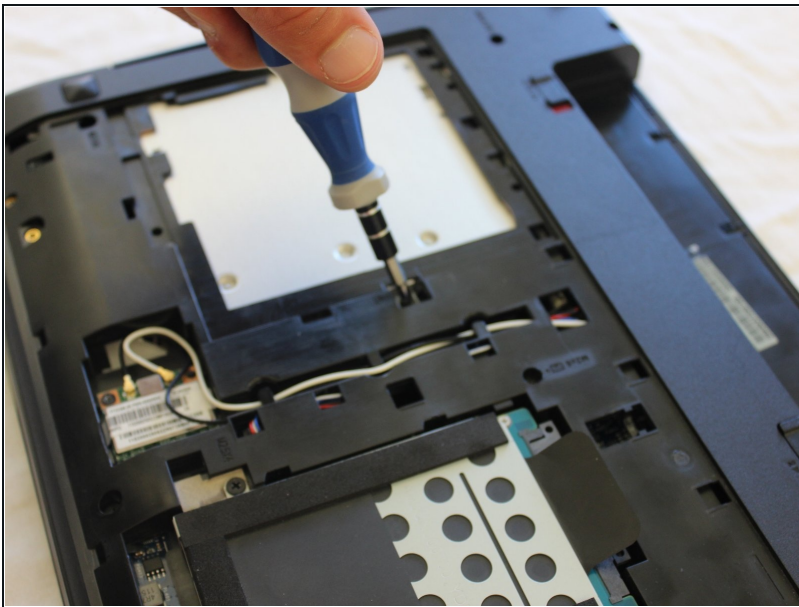

- Locate and remove the single screw right of the optical drive

## Step 6

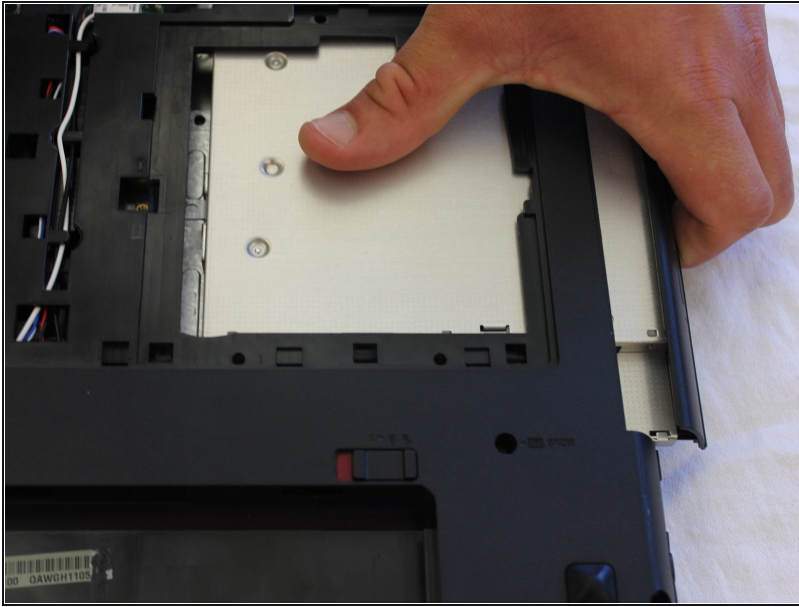

- Optical Drive should slide out easily with one thumb's effort.

---

To reassemble your device, follow these instructions in reverse order.