



Nerf Vortex Vigilon Side Cover Disassembly

Prerequisite Only.

Written By: Cara Pew






TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Removing the outer screws

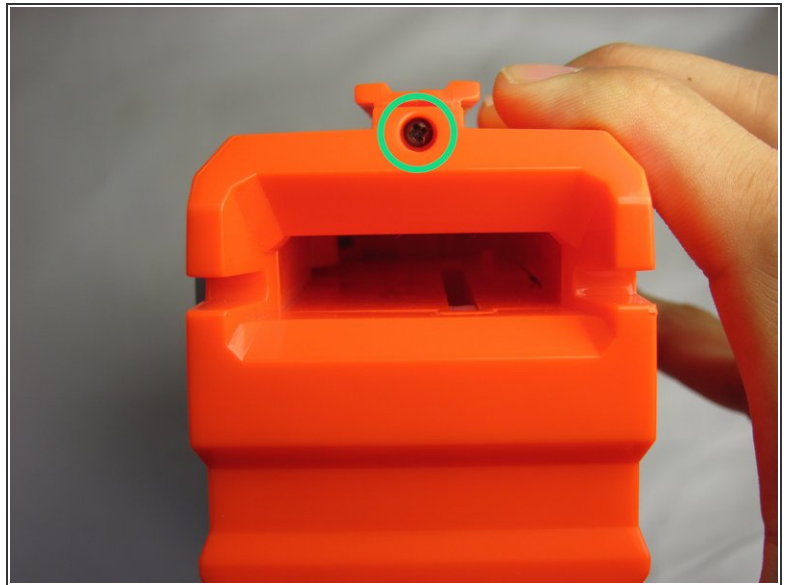

- Remove the twelve #00 1 cm Phillips screws.
- ⓘ Because the holes for the screws are deeper than the screw size, some of the screws may not come out even after you have completely unscrewed them. They will come out when you take off the outside cover in the next step, which is okay.
- Rotate the gun so that the front is facing you to remove the final screw.

Step 2 — Removing the outside cover



- ⓘ When removing the cover, the clip attachment and the spring will likely fall out of the gun.
- Lift the outside cover off of the gun. Only the side where you removed the screws will come off.
- ⓘ The magazine will slide down automatically as you remove the cover.

To reassemble your device, follow these instructions in reverse order.