


Samsung Galaxy Tab 3 8.0 Front Camera Replacement

Written By: anthony gonzalez

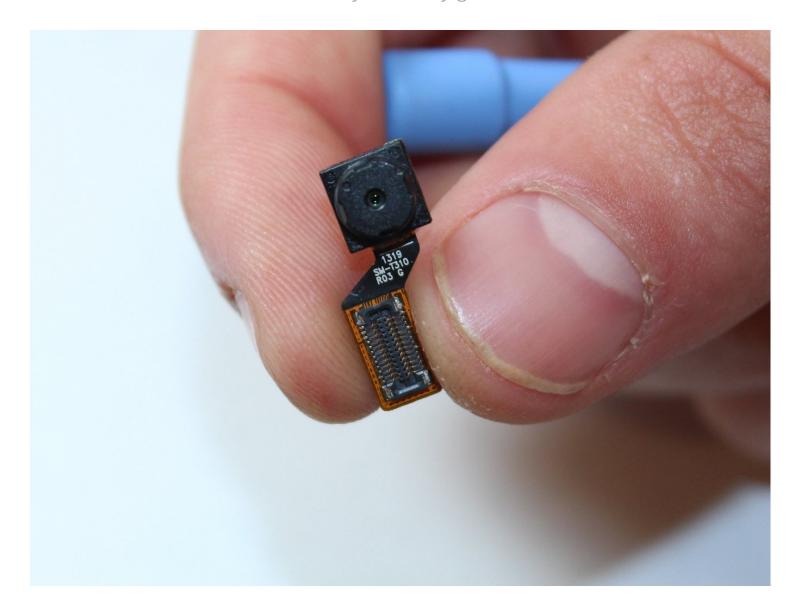




PARTS:

iFixit Opening Tool (1) Tweezers (1) Samsung Galaxy Tab 3 8" Front Camera (1)


Step 1 — Battery - Open up the tablet

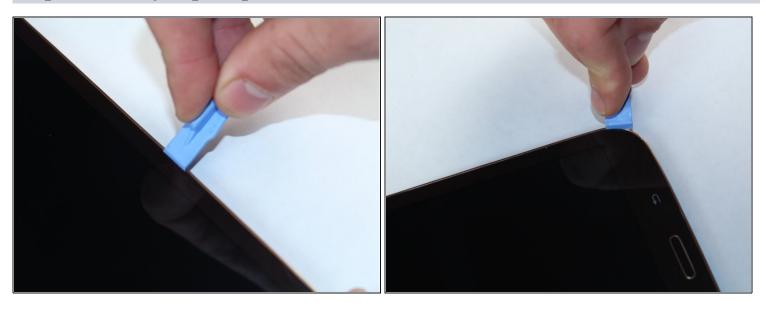

• Start out by separating the screen from the back cover using the larger plastic opening tool to pry them apart.


<u>A</u> Be careful when removing the screen as negligence can cause damage.

Step 2 — Remove Back Cover

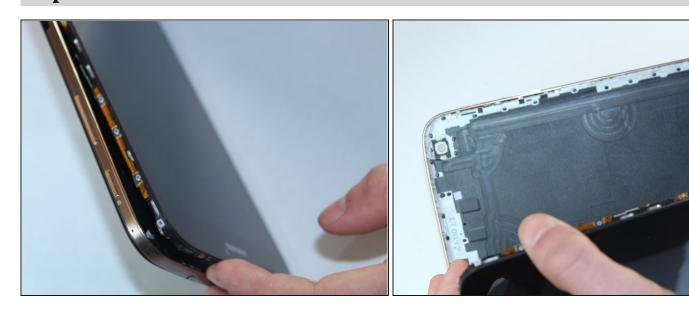


 Once every part of the screen is separated from the back cover, you should be able to fully remove it with your hands.

Step 3 — **Disconnect Battery**

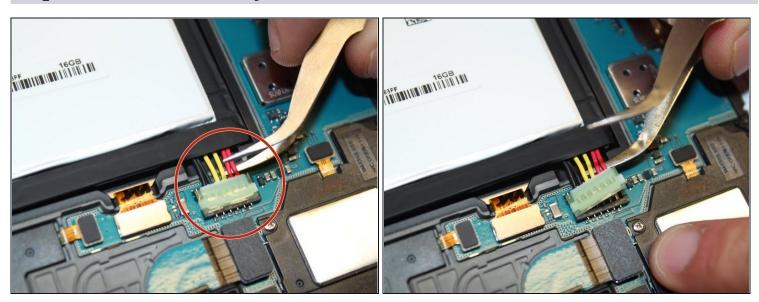


- To remove the battery you must use something small, such as tweezers, to disconnect the battery from its port.
- (i) Note: the connection lifts up to remove.

Step 4 — Remove Battery

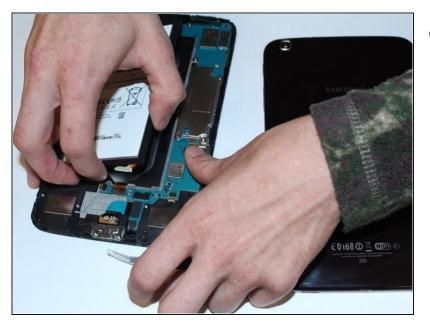

 After the battery is disconnected, use the pulling tab to safely remove the battery.

Step 5 — Remove the Front Camera

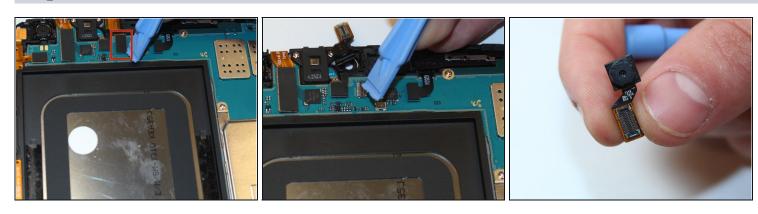

• Take the plastic remover tool and gently lift the component free from the motherboard.

To reassemble your device, follow these instructions in reverse order.