



# Sony Xperia E C1505 C1504 Touch Screen Glass Digitizer Replacement

Sony Xperia E C1505 C1504 Touch Screen Glass Digitizer Replacement

Written By: ZFix



## INTRODUCTION

How to replace broken Digitizer Glass on Sony XPERIA E.

[Please SUBSCRIBE to my channel ツ](#)

[video: [http://youtu.be/z9\\_Qglj9PEk](http://youtu.be/z9_Qglj9PEk)]



### TOOLS:

- [T5 Torx Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)
- [Double Sided Adhesive Tape - 3 mm Width](#) (1)
- [Spudger](#) (1)
- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Picks set of 6](#) (1)



### PARTS:

- [Sony XPERIA C1505 Touchscreen](#) (1)

## Step 1 — Touch Screen Glass Digitizer



- Switch-off the phone.
- Remove the battery.

## Step 2



- The small bottom bezel is held by 2x locking clips.
- Preferably use plastic tools for disassembling.

## Step 3





- There are 4x silver screws and 3x black screws.
- The rear cover is held by 5x locking clips.
- Two of them, at the bottom side are more hard for unlocking. You can use a screwdriver or other metal tool to unlock them.

## Step 4




- Remove the back cover.
- With a plastic tool disconnect one by one:
  - LCD Display flex cable
  - Touchscreen flex cable
  - Menu Buttons Board flex cable
  - Coaxial Wire Antenna cable

## Step 5

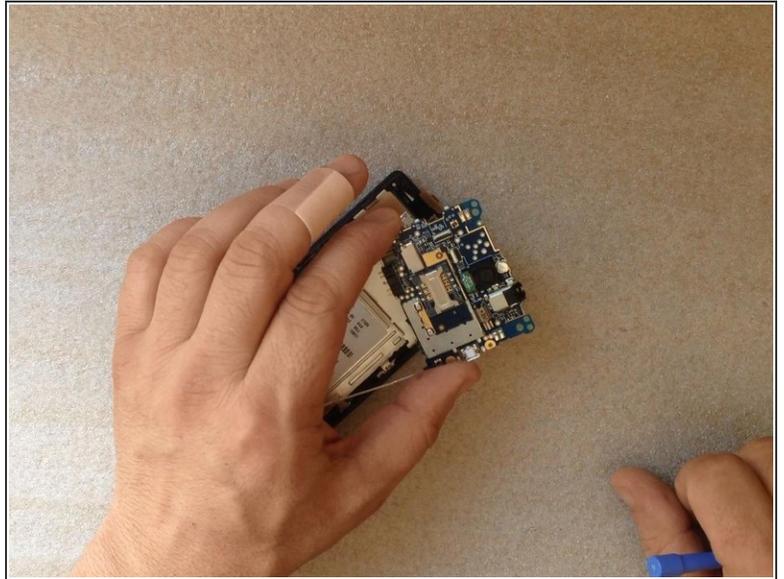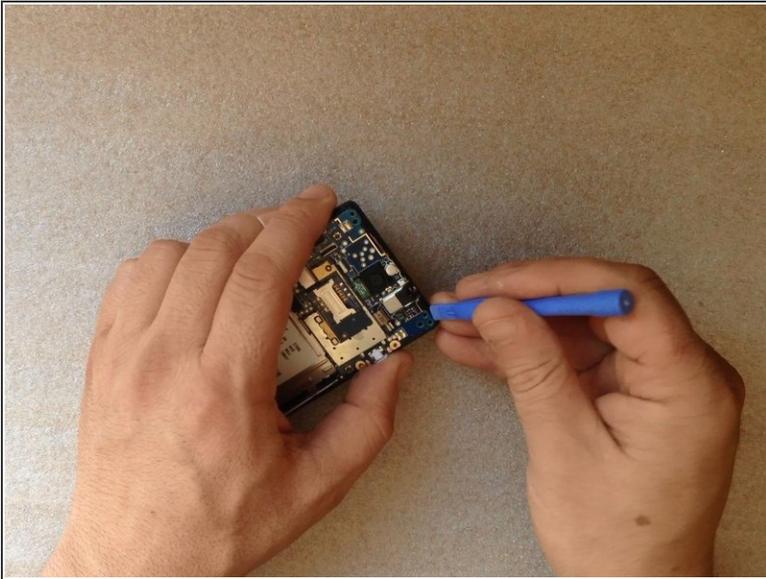

- Carefully remove the main board.

## Step 6

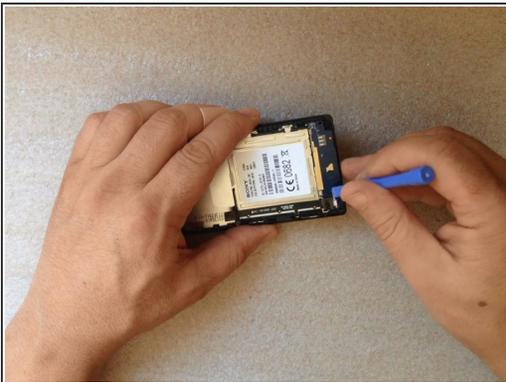


- Disconnect the other side of the flex cable and remove the Home Buttons board.
- Unstick the camera button.

## Step 7



- The touch screen is stuck to the frame with double side adhesive tape.
- By using plastic tools gently start separating.
- At the bottom is glued on firmly because the bonded surface is larger.
- Use a hot air to make separating more easy and safety.


## Step 8

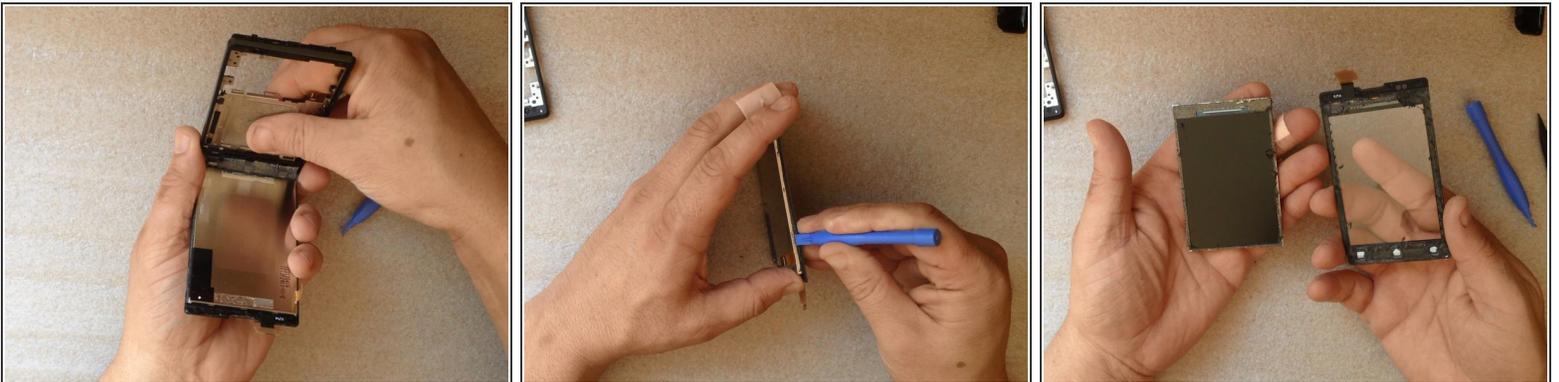

 With a plastic tool, carefully separate the LCD display from the touch screen.

- Clear the touchscreen from the old adhesive tape.


## Step 9

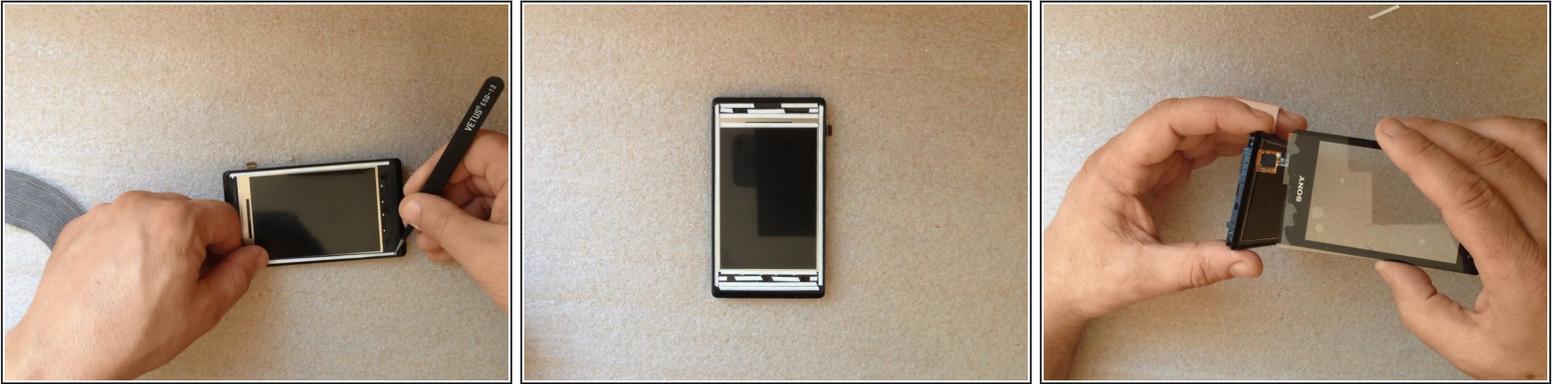

- Install the new LCD into the frame and put adhesive tape.

 Be careful not to cover the holes (for the speaker, menu buttons etc.). Install the Touchscreen.

## Step 10

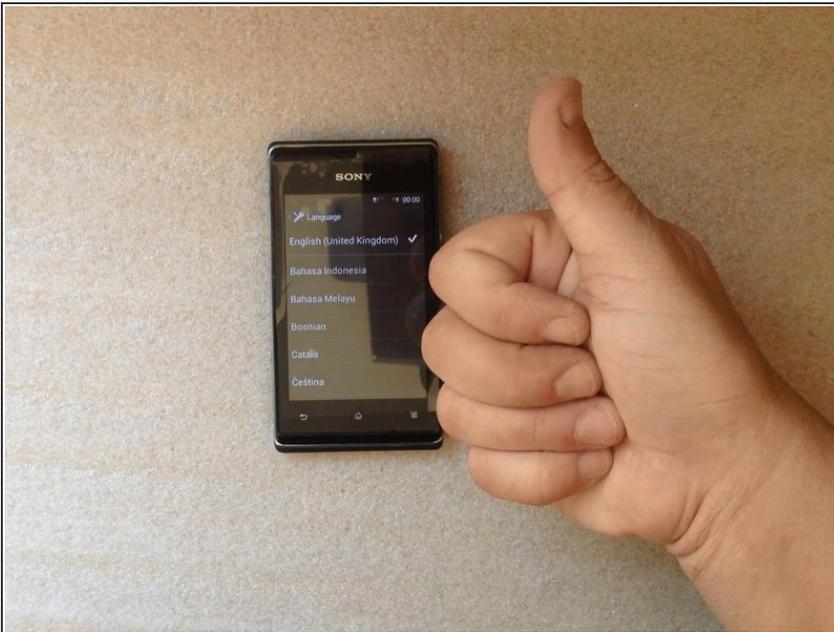

- To reassemble your device, follow these instructions in reverse order.

- .

- **Did you do it successfully?**

 [Please SUBSCRIBE to my channel ツ](#)

To reassemble your device, follow these instructions in reverse order.