



HTC Droid Incredible 4G LTE Display Assembly Replacement

How to replace the LCD and Digitizer for the HTC Droid Incredible 4G LTE.

Written By: Tevin



INTRODUCTION

With this phone, the LCD and digitizer are removed together. These can then be separated by heating. If there is a discrepancy with the way images appear on your screen you may have a broken LCD. However, if you are unable to utilize the touchscreen interface then you may have a broken digitizer.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
 - [64 Bit Driver Kit](#) (1)
-

Step 1 — Battery



- Use the plastic opening tool to pry off back cover by inserting opening tool in the space indicated and pushing down on the handle of the tool.

Step 2



- Remove the battery after taking off the cover.

Step 3 — Midframe



- Remove eight 4mm and one 5mm Torx screws.

Step 4



- Use a prying tool to pry off the midframe.

Step 5 — Micro USB Port



- Remove the 4mm Torx screw holding the charging port to the phone.

Step 6




- Remove the silver bracket holding the charging port in place.

Step 7




- Use a prying tool to remove the charging port as shown.

Step 8 — Display Assembly

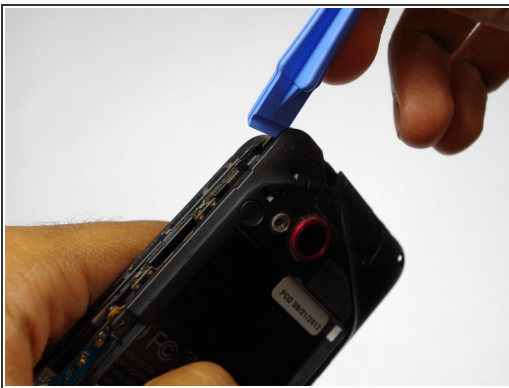




- Pry off and remove the back cover

Step 9

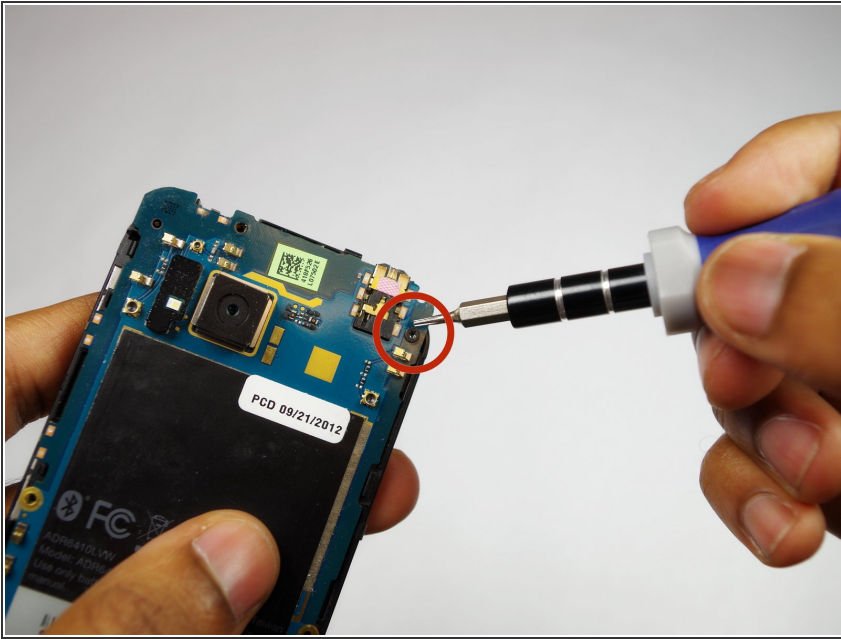

- Remove the 4mm Torx screw.

Step 10

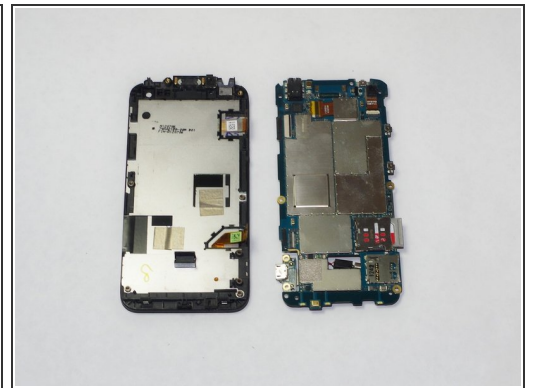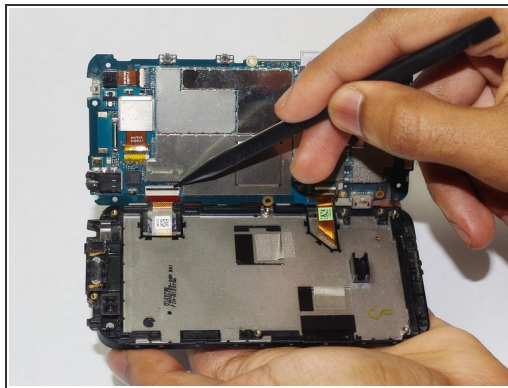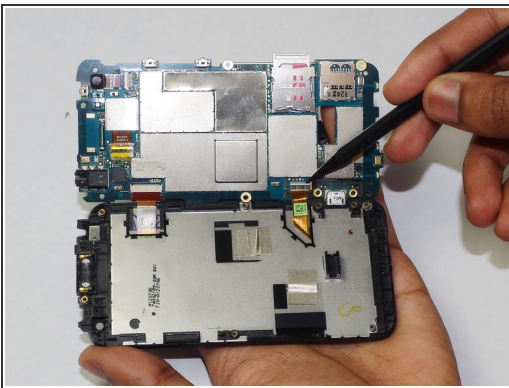

- Remove tabs holding the motherboard to the phone.

To reassemble your device, follow these instructions in reverse order.