



BLU Advance 4.0 Screen Replacement

Written By: Jon Sclar






TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Removing the back cover

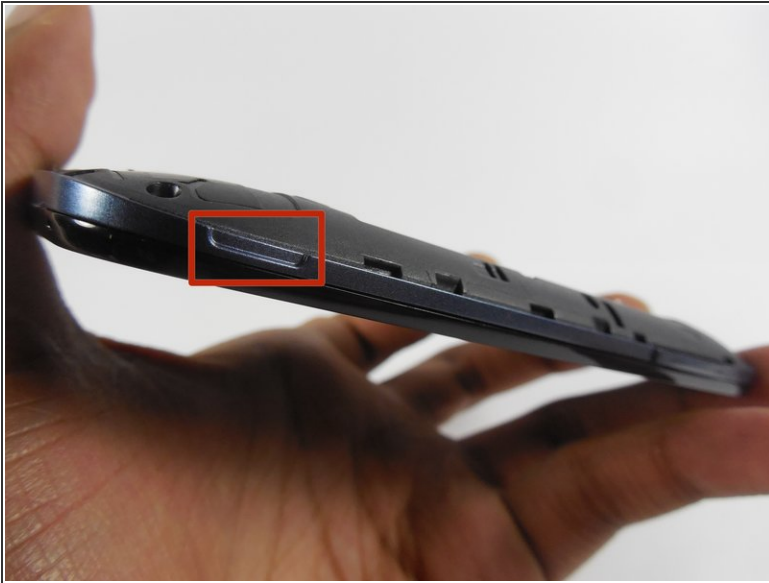

- With the back camera on the top side and facing you, find a notch on the bottom right side of the phone.
- Unclip the cover by raising it up from the notch and sliding a flat rigid tool along the edge.

Step 2 — Revealing the motherboard



- Remove the battery.
- Remove 3 screws from each side with a Phillips 00 screwdriver.
- Unclip the screen by sliding a flat rigid tool between the black and the blue side-band.
- Pop off the blue side-band to be exposed to the motherboard.

Step 3 — Separating motherboard from screen



- Remove 2 black plastic buttons from each side, exposing metallic padding.
 - Gently pry the metallic padding off the motherboard with a flat rigid tool.
 - Carefully separate the clip-on tabs while lifting the motherboard away from the screen.
- ⚠ Forcefully separating the motherboard from the screen can further damage your device.

To reassemble your device, follow these instructions in reverse order.