




# HTC Droid DNA Micro USB Port Replacement

Use this guide to remove and replace the...

Written By: Madeline Tran

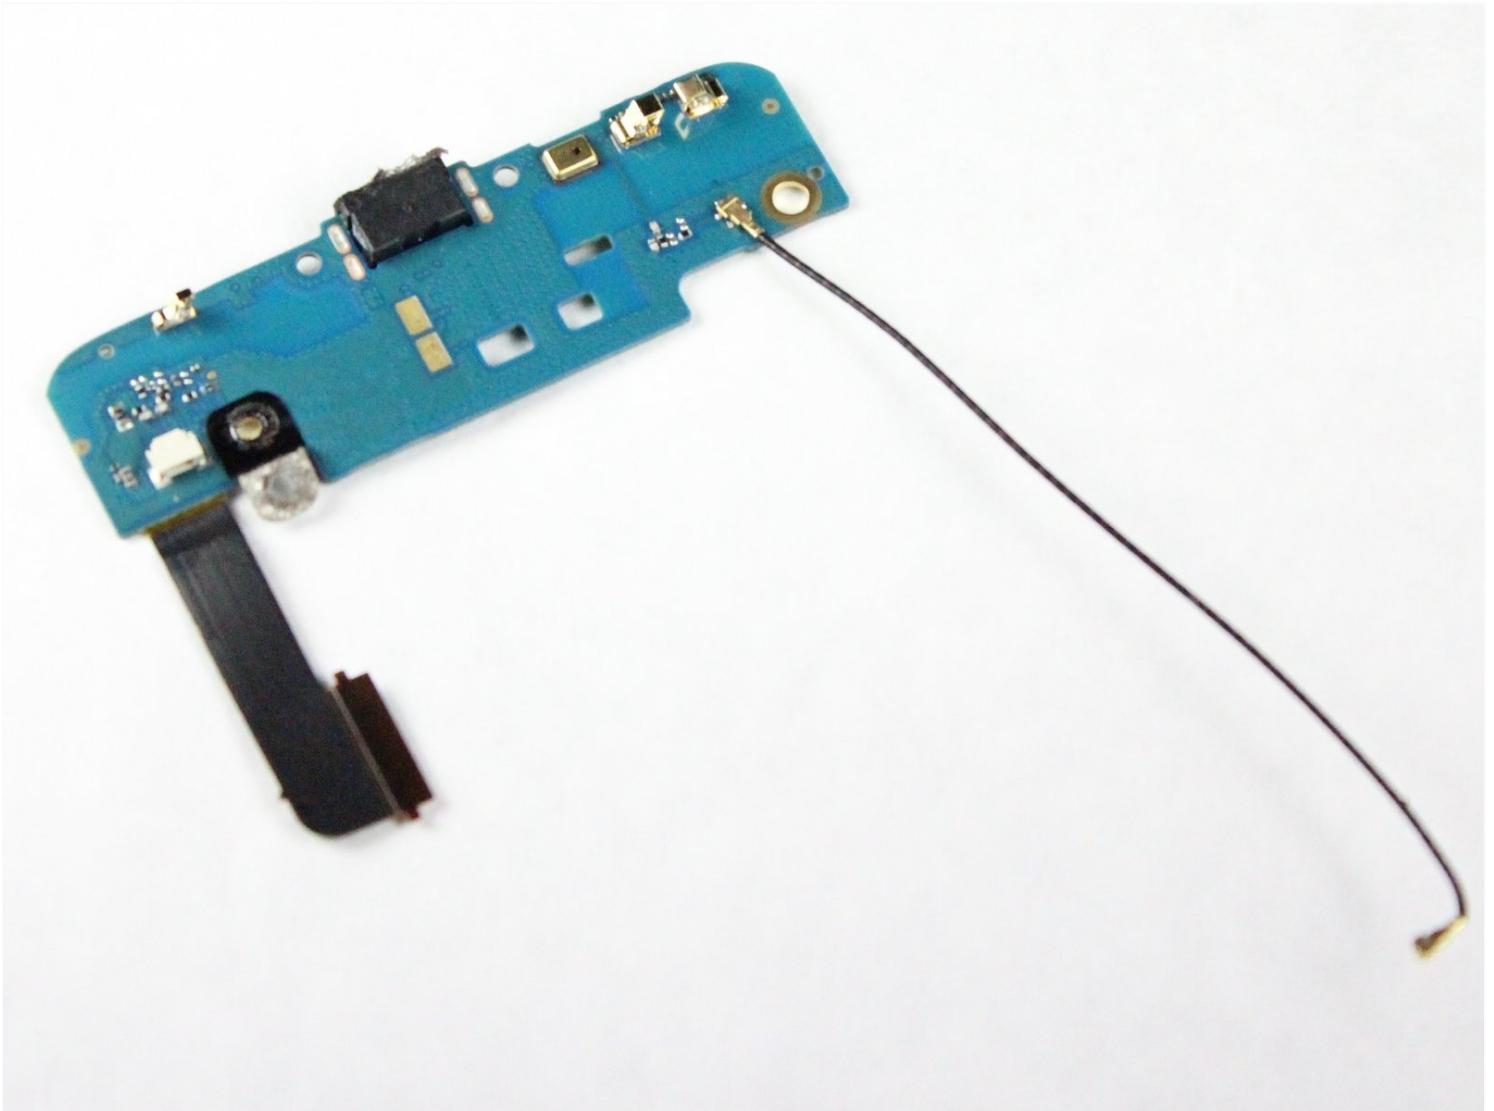

# INTRODUCTION

Use this guide to remove and replace the charging port from your Droid DNA.

---

## TOOLS:

[Paper Clip](#) (1)

[Phillips #000 Screwdriver](#) (1)

[T5 Torx Screwdriver](#) (1)

[Tweezers](#) (1)

[iFixit Opening Tool](#) (1)

---

## Step 1 — Remove the SIM Card Tray




- Poke a paperclip into the hole to the right of the SIM Card Tray. The SIM Card Tray will automatically pop out.

## Step 2 — Removing the SIM Card Tray



- Pull out the SIM Card Tray with your fingers.

## Step 3 — Loosen the Phone Casing

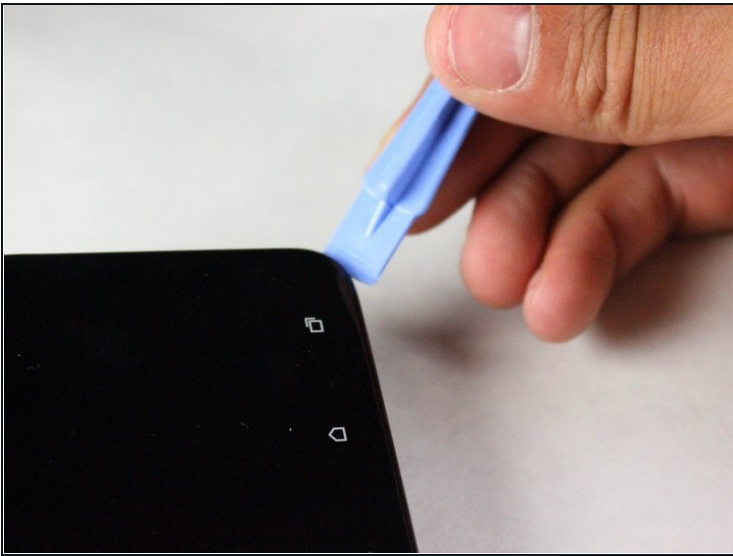

- ① Make sure the USB cover on the bottom of the phone is removed first.
- Starting at a corner, slowly work your way around the edge of the sides with your prying tool to loosen the front panel.
- ① Take your time. A lot of force is necessary to loosen the front panel.

## Step 4 — Pull the Casing Apart



- Slowly pull the panel apart from the back of the phone.
- ⓘ Apply a moderate force to pry the panel from the back of the phone.

## Step 5 — Remove the Black Tape




- Set the device down so that the bottom of the phone is facing to the right.
- Gently take off the piece of black tape surrounding the motherboard.

⚠ Be careful not to rip the tape.




## Step 6 — Remove the Yellow Tape

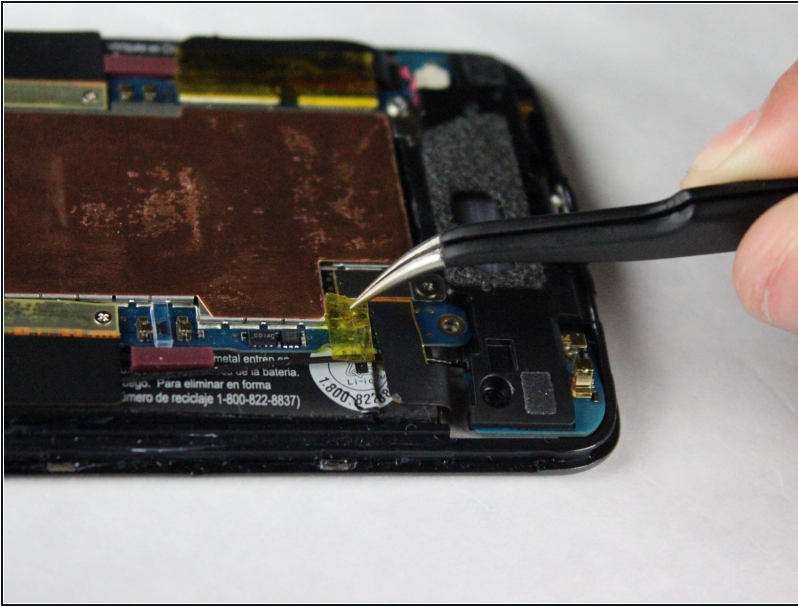


- Use your [tweezers](#) to take off the yellow tape on the bottom left corner of the phone.

## Step 7

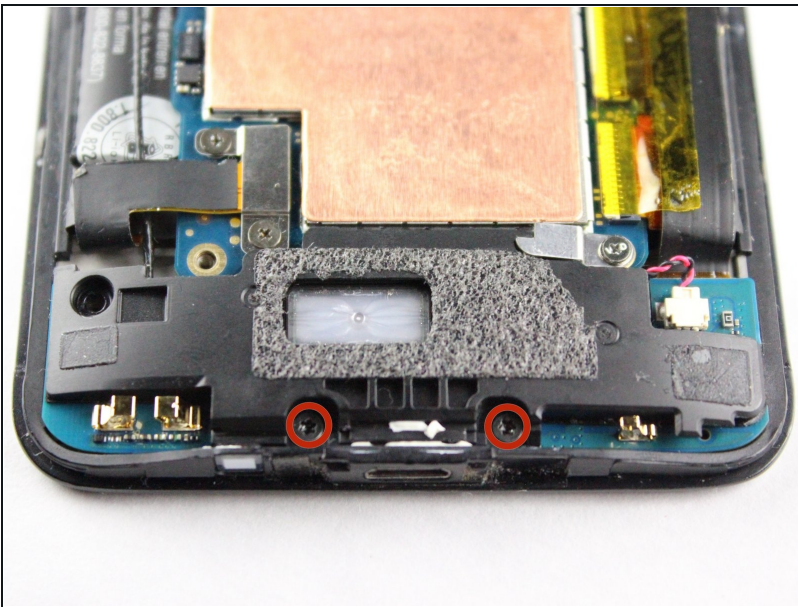


- Rotate your phone 90 degrees clockwise so the bottom of the phone is facing you.
- Use the T5 Torx screwdriver to remove the two 4mm screws located at the bottom of the phone.

## Step 8 — Remove the Void Screw

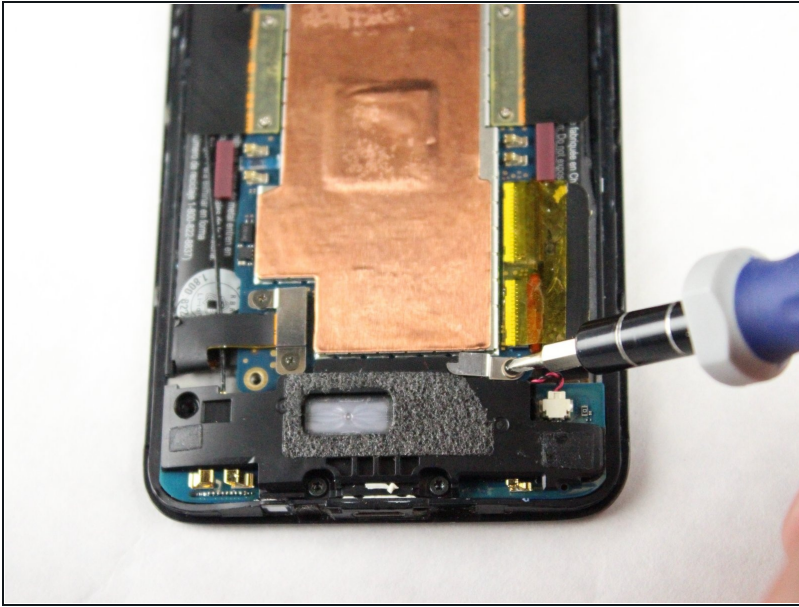

- Use the Phillips #000 screwdriver to remove the single 2.7mm void screw on the bottom right.

## Step 9 — Remove the Screw Retaining Bracket

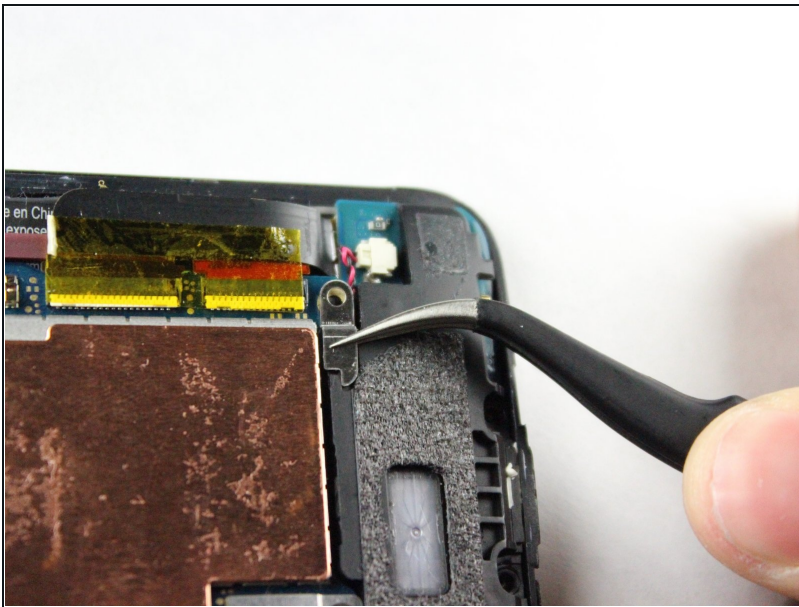

- Rotate your phone back 90 Degrees counter-clockwise.
- Use your tweezers to take off the small metal retaining bracket on the bottom right of the phone.





## Step 10 — Remove the Connector Screws



- Remove the following Phillips #000 screws from the motherboard:
  - Four 1.6 mm screws
  - Two 1.5 mm screws


## Step 11 — Unfasten the Connectors

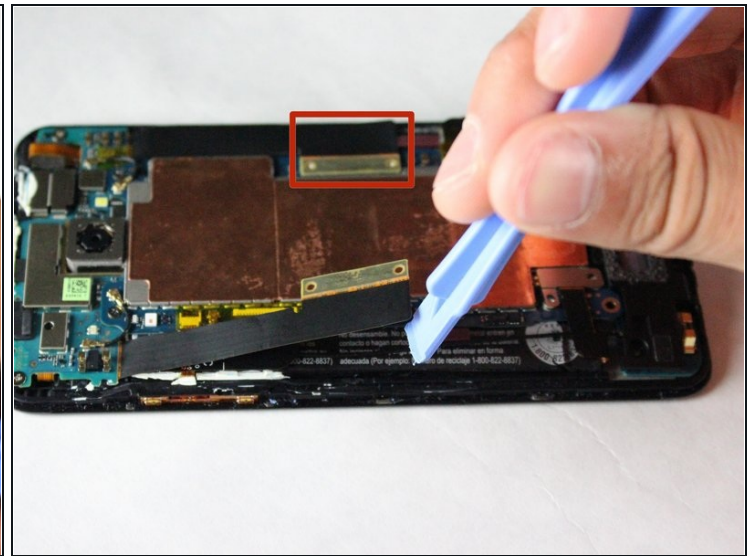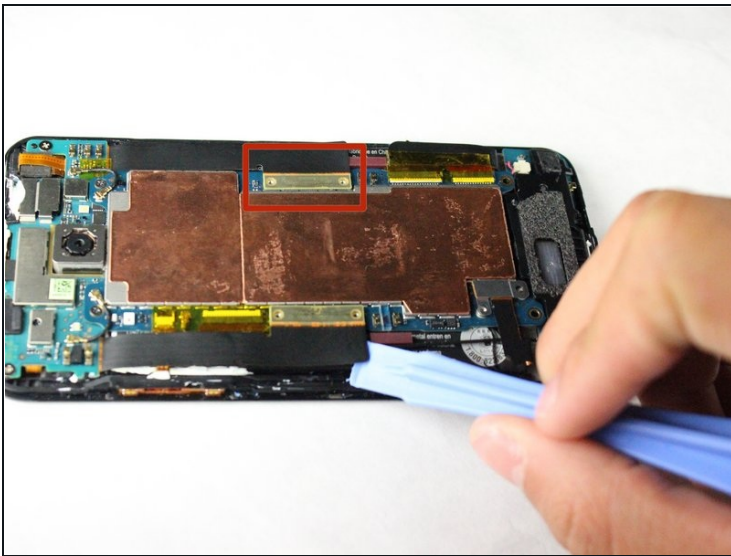

- Use your pry tool to unfasten the connectors on both sides of the motherboard.



⚠ The connectors will still be attached to the green camera board at the top so DO NOT try to pull them off or bend them severely.

## Step 12 — Remove the Yellow Tape

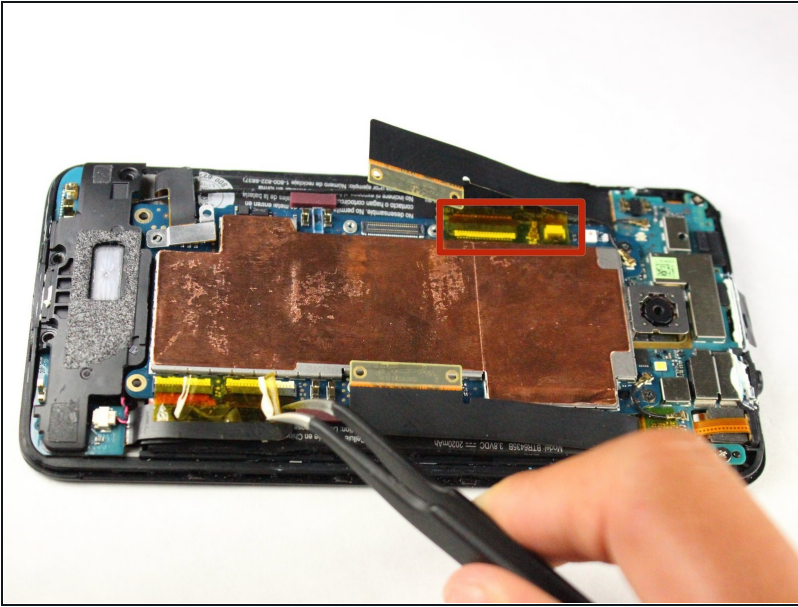

- Use your tweezers to remove the two pieces of yellow tape shown.


## Step 13 — Flipping up the White Board

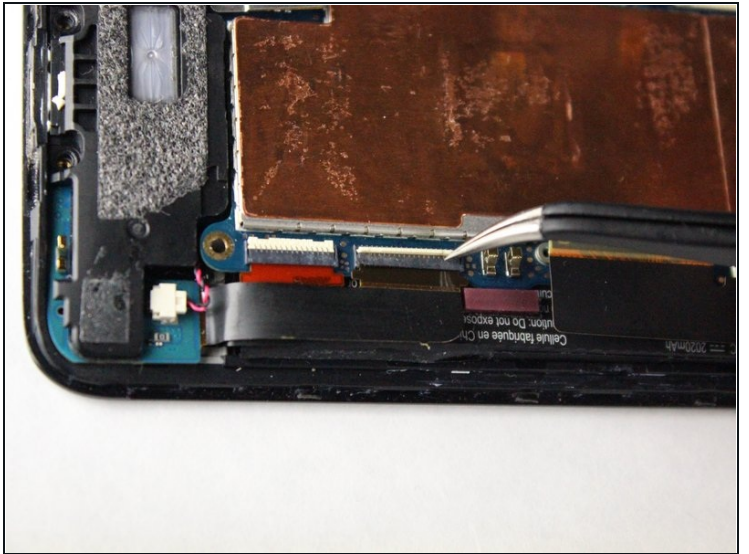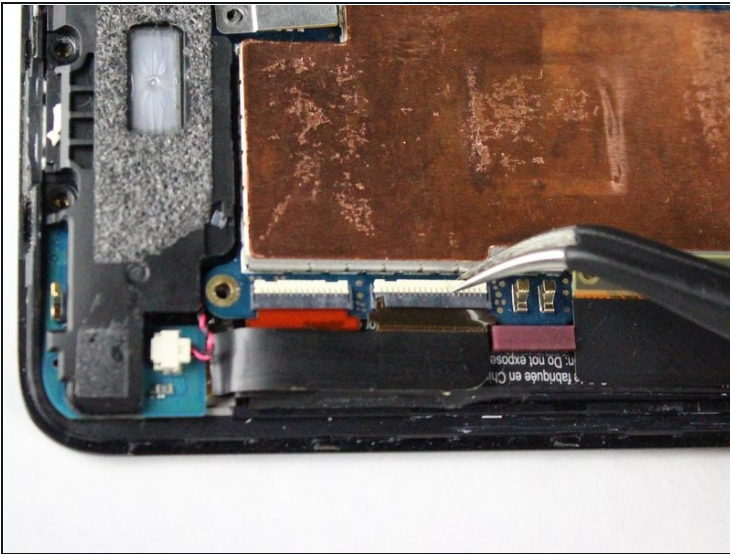

- Use your tweezers to gently snap up the white board on the bottom right of the motherboard.



## Step 14 — Disconnect the Connector

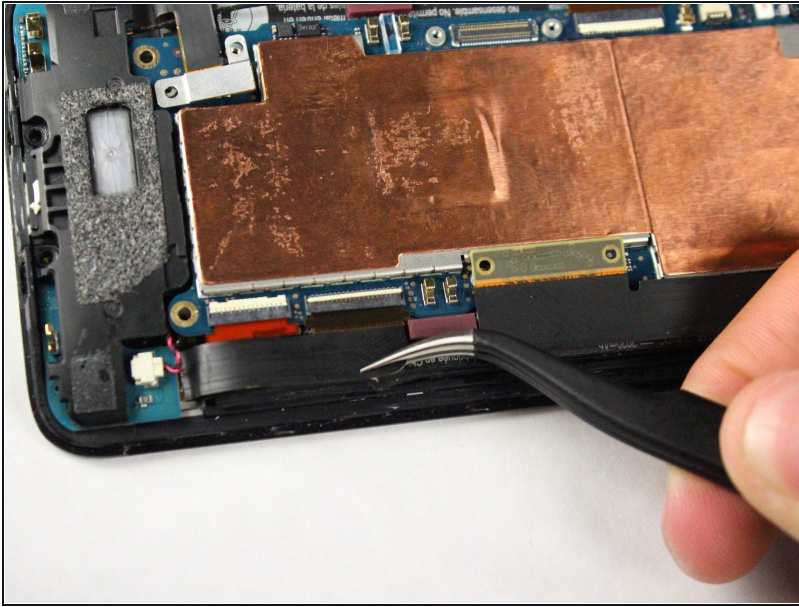

- Use your tweezers to disconnect the black connector on the bottom right of the motherboard.


⚠ Be careful not to bend the Flex Cable of the Connector.

## Step 15 — Flipping up the White Board



- Use your tweezers to gently snap the other white board on the bottom right of the motherboard up.



## Step 16 — Disconnect the Connector

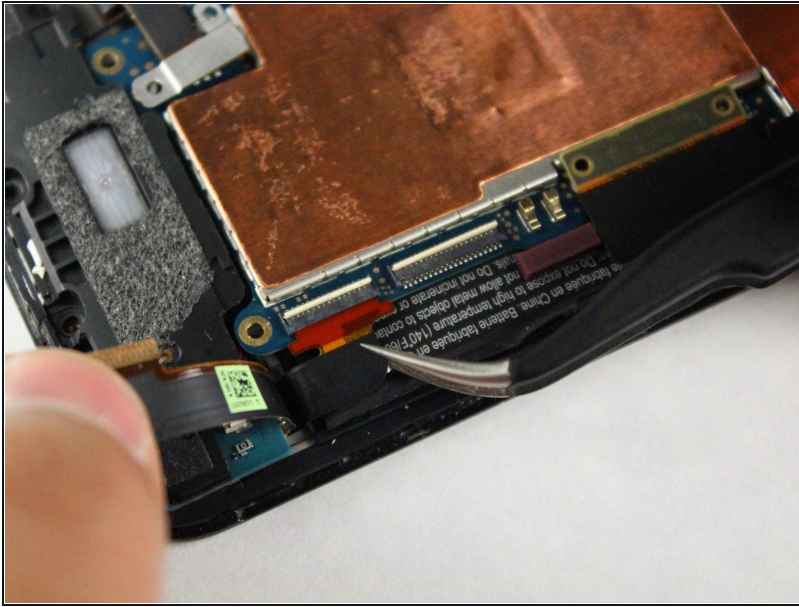

- Use your tweezers to disconnect the other small connector on the bottom right of the motherboard.

⚠ Be careful not to bend the Flex Cables for the Connector.


## Step 17 — Flipping up the White Board

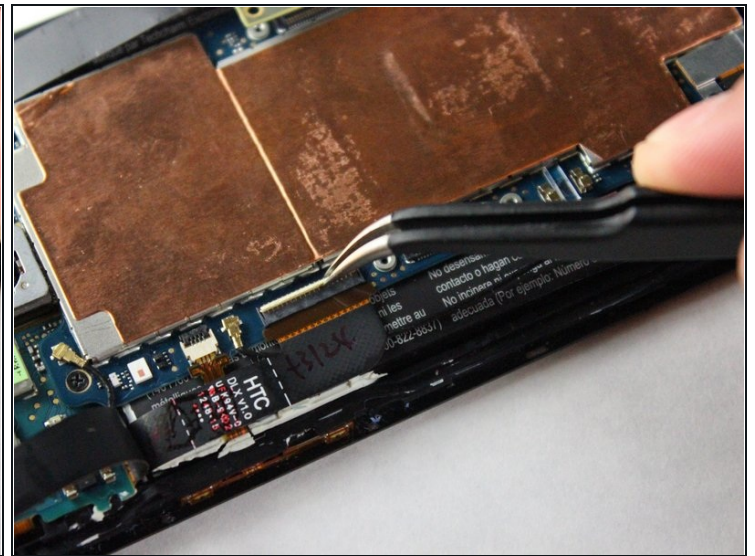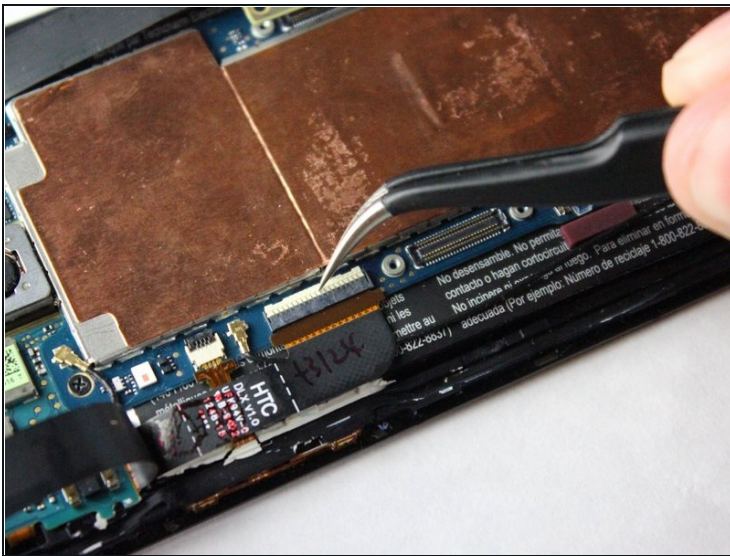

- Rotate the phone 180 degrees.
- Use your tweezers to gently snap up the white board on the top left of the motherboard.




## Step 18 — Disconnect the Connector

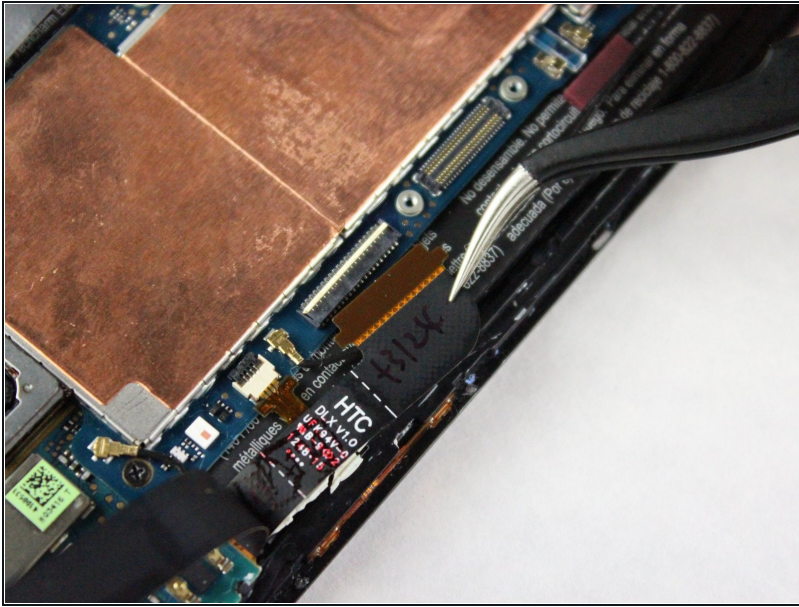

- Use your tweezers to disconnect the cable on the top left of the motherboard.


⚠ Be careful not to bend the Flex Cable of the Connector.

## Step 19 — Flipping up the Black Board

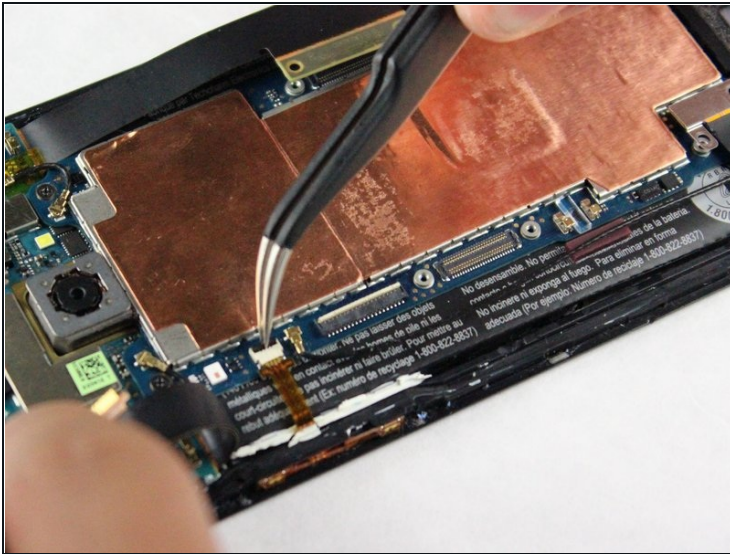


- Use your tweezers to gently snap up the black board on the top left of the motherboard.

## Step 20 — Disconnect the Small Ribbon Connector

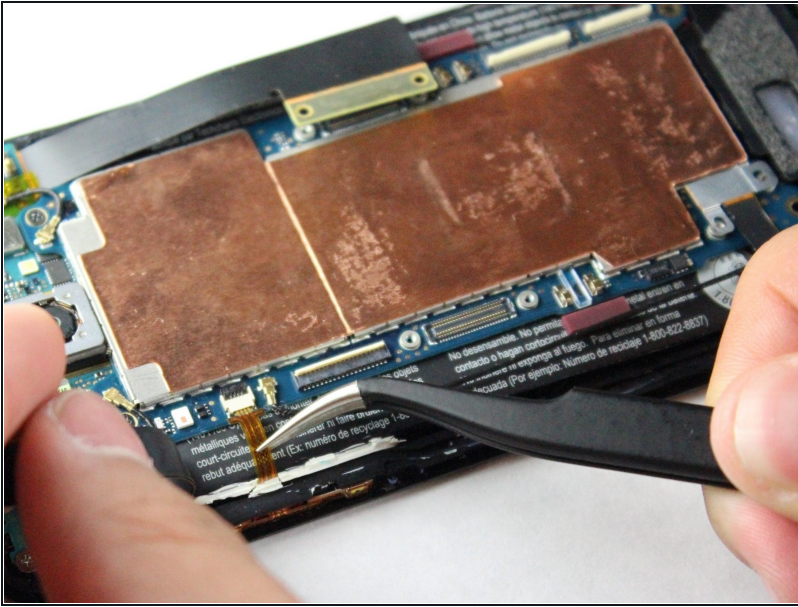

- Use your tweezers to gently remove the yellow connector on the top left of the phone.


## Step 21 — Remove the Black Wire

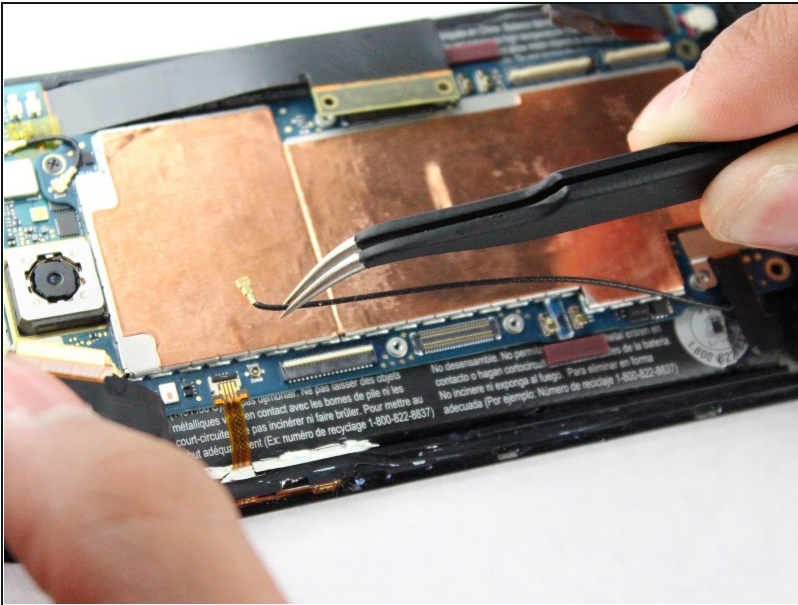

- Remove the long black wire on the left of the motherboard.




## Step 22 — Remove the Two Black Wires

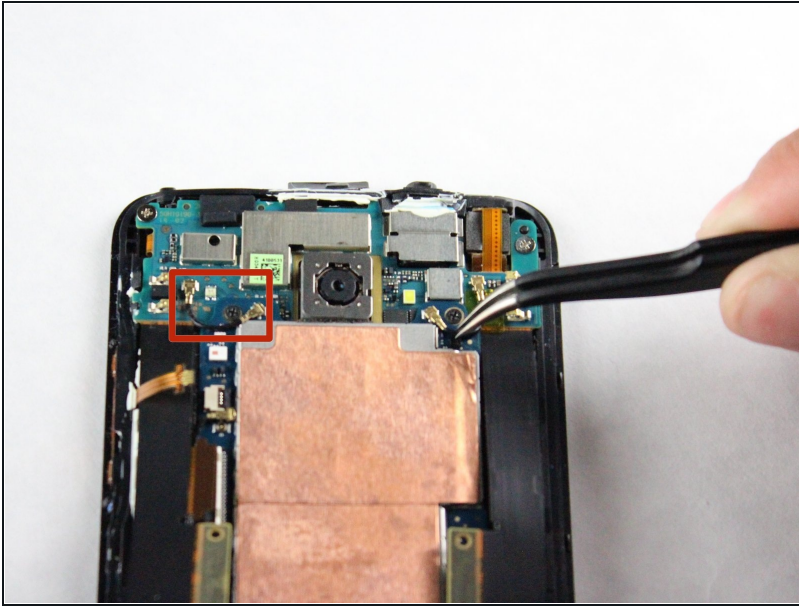



- Reorient the phone so that the green camera board is farthest from you.
- Use your tweezers to remove the two wires located at the top of the board. The wires snap off very easily so not much force is needed.

## Step 23 — Remove the Screws

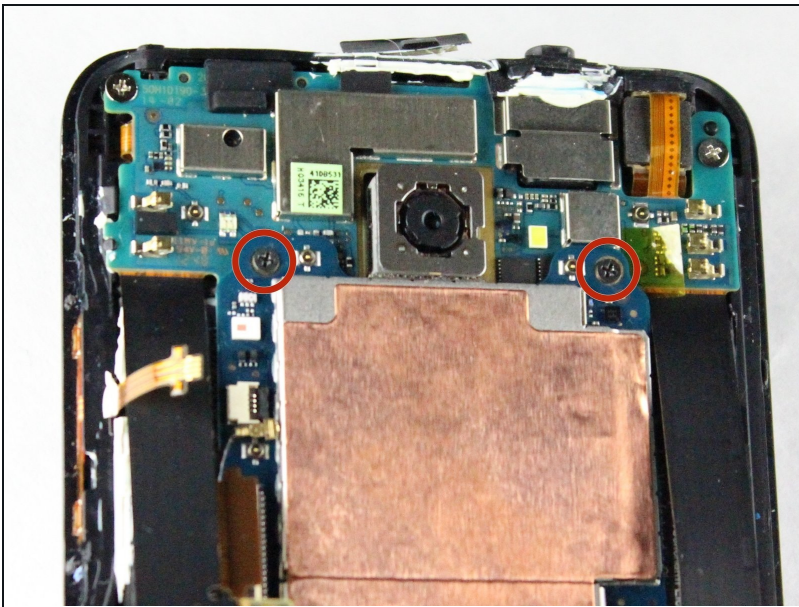


- Use a Phillips #000 screwdriver to remove the two 3.9mm screws on top of motherboard.

## Step 24 — Remove the Motherboard

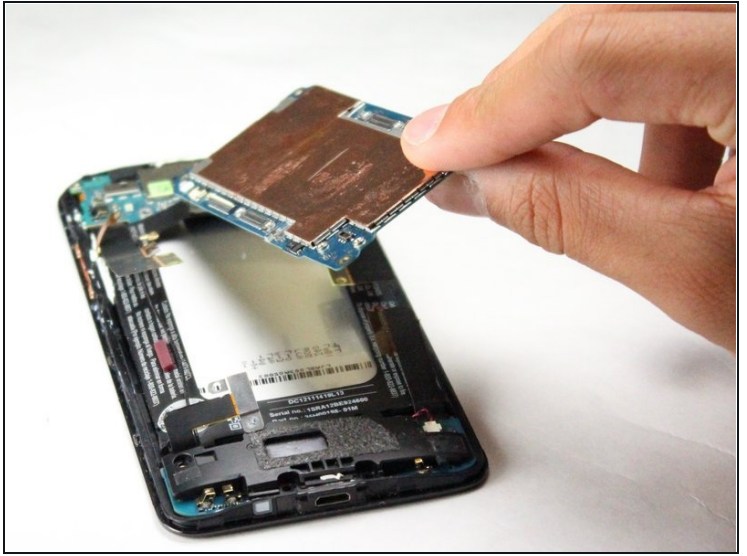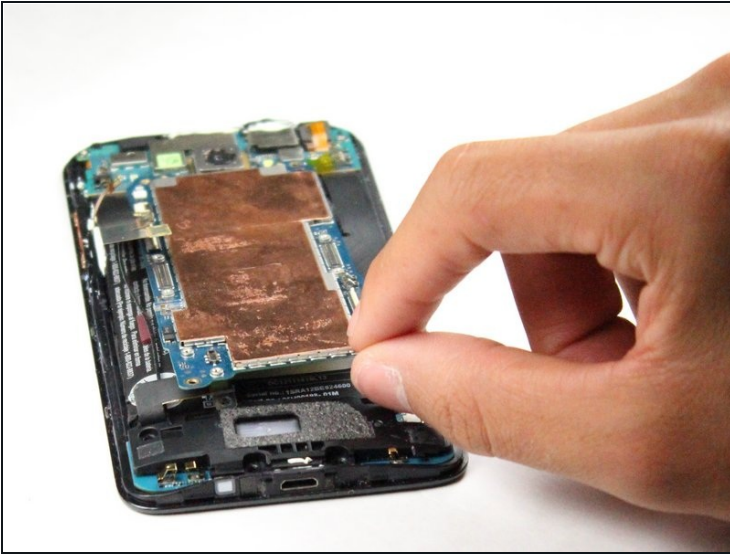

- Now, use your fingers to slowly pull up the motherboard and remove it from the phone.


## Step 25 — Remove the Charging Port Assembly

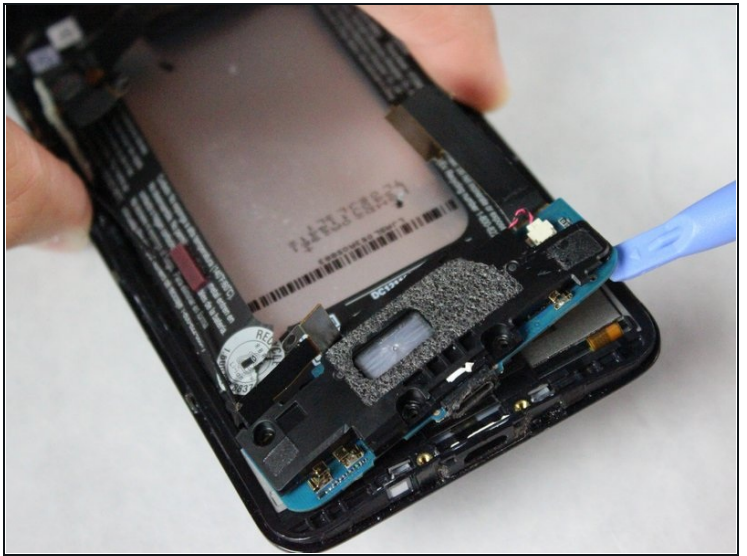

- Use the plastic prying tool to gently remove the charging port assembly.





## Step 26 — Disassemble Charging Port Assembly

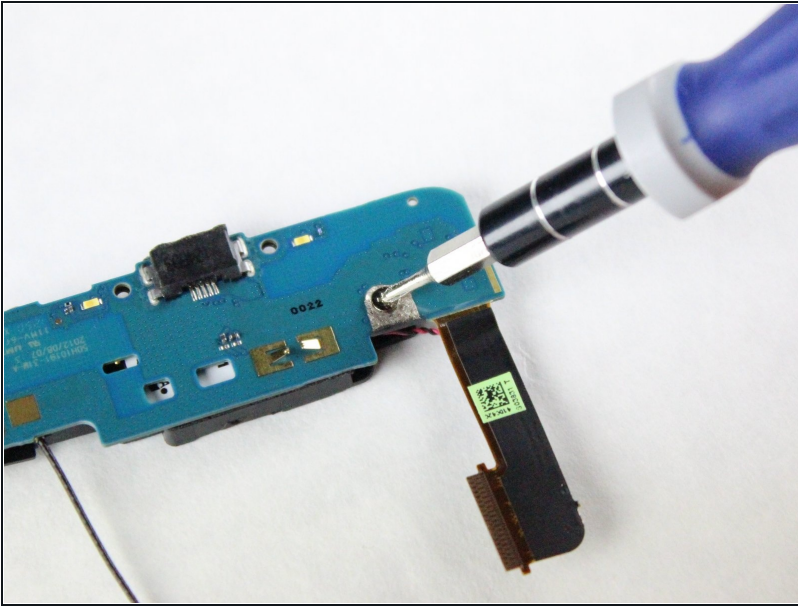


- Use a Phillips #000 screw driver to remove the single 2.1mm screw located on the backside of the assembly.

## Step 27 — Undo the Wire Connection

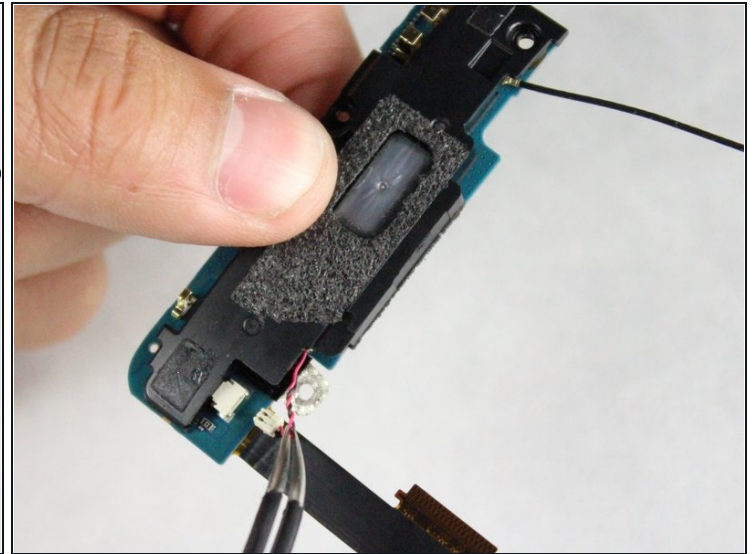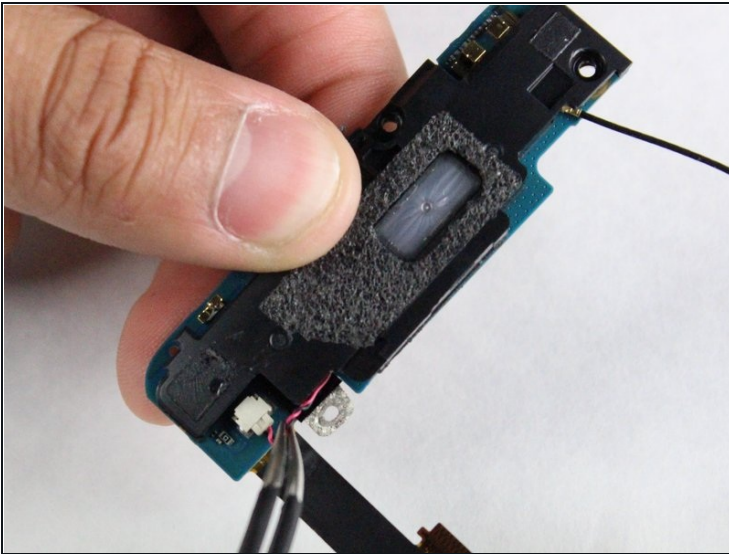


- Use your [tweezers](#) to undo the red and black wire connection.

## Step 28 — Separate the Black and Blue Assembly Pieces

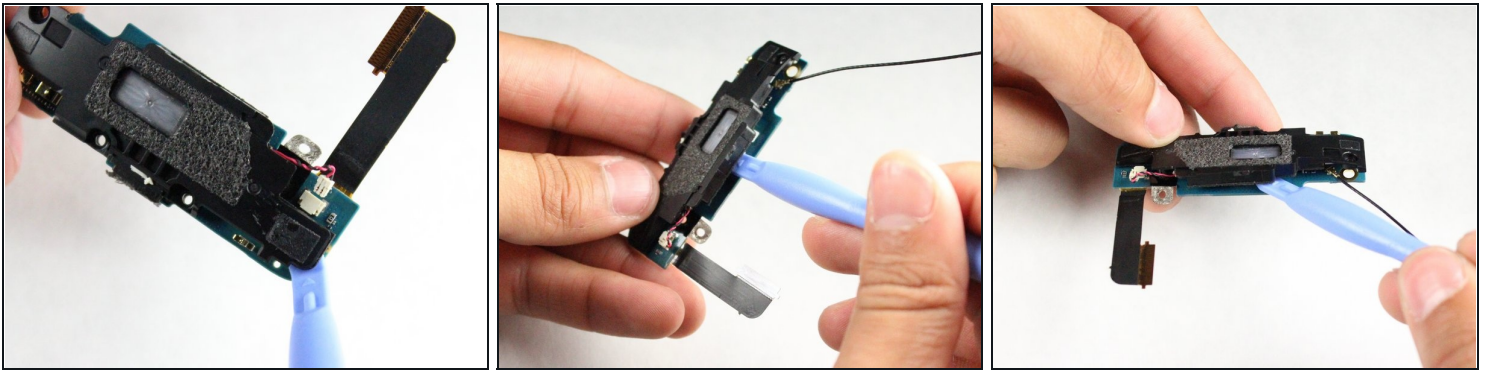

- Use the plastic prying tool to separate the assembly into two pieces: blue and black.

## Step 29 — Remove the wire

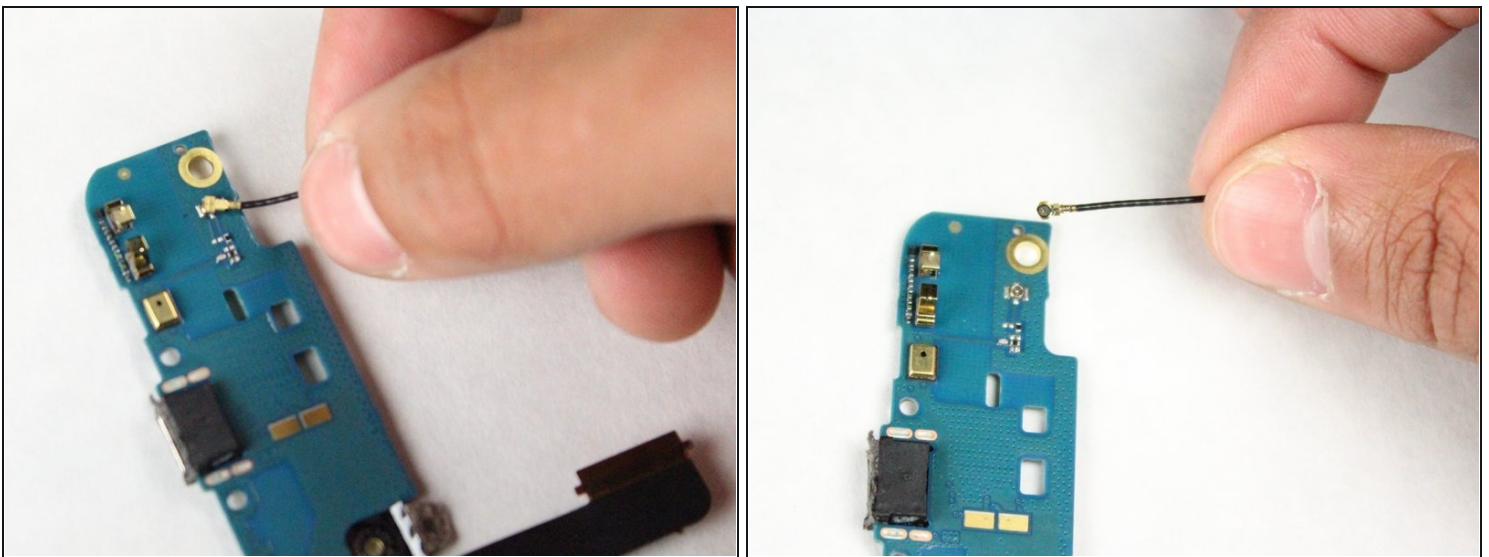

- Remove the black wire on the blue piece (the Micro USB charging port) so it is out of the way and cannot get damaged.
- ⓘ If the micro USB port is damaged, the charging port may need to be replaced.

---

To reassemble your device, follow these instructions in reverse order.