



Planet Eclipse Etha Trigger Replacement

This guide will instruct you on how to replace the trigger on your Planet Eclipse Etha.

Written By: Evan Hensch



INTRODUCTION

The trigger on the Etha doesn't break often, but you may choose to replace it for a trigger you prefer or it may simply need cleaning.

TOOLS:

- [Macro Bit Set](#) (1)
-

Step 1 — Battery and Grip Panels




- Use the 5/64" hex key to remove the screw shown.
- Remove the grip panel by gently holding the bottom of the panel and lifting the panel off.
- ⓘ If you are only replacing the battery, skip the next step.
- ⓘ The screws in this guide are interchangeable with those shown in the Eyes replacement guide.

Step 2




- Flip the marker over and use the 5/64" hex key to remove the screw shown.
- Remove the grip panel by gently holding the bottom of the panel and lifting the panel off.

Step 3

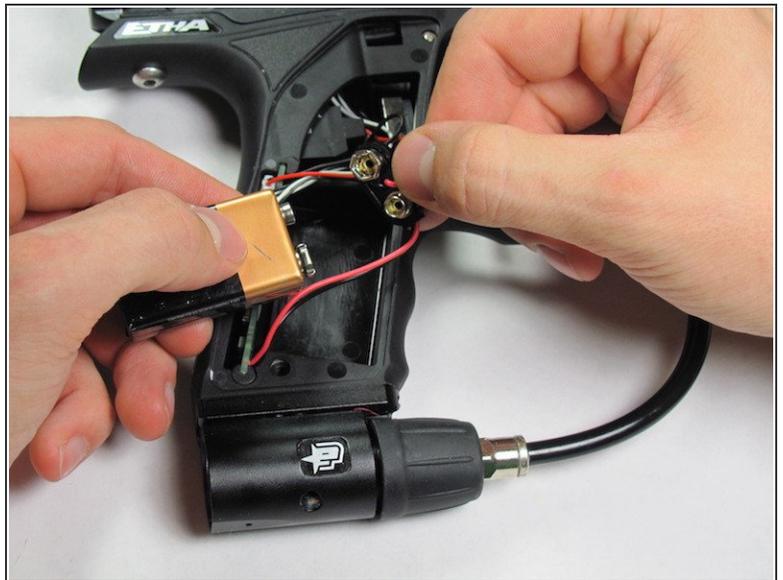

- Carefully remove the 9V battery and connector.
- Remove the 9V battery from the connector.

Step 4 — Trigger

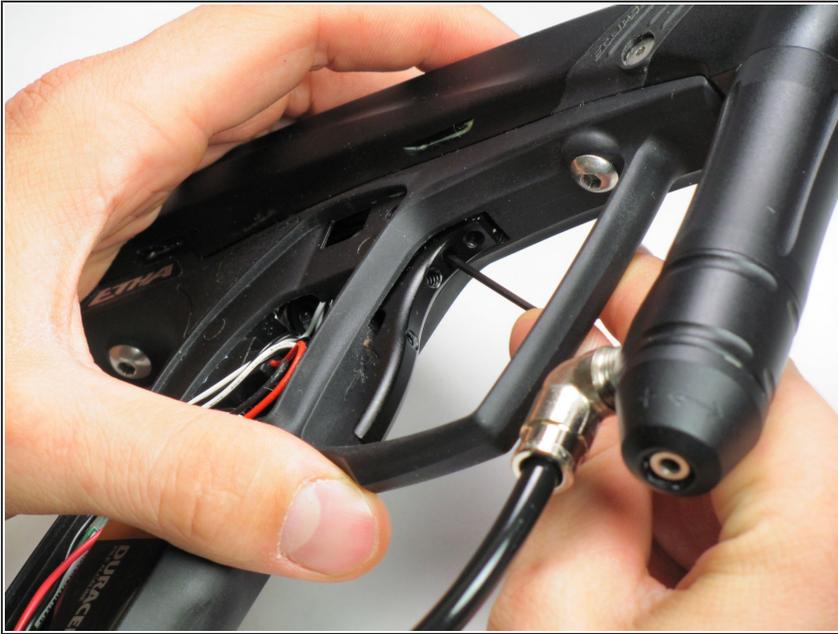

- Use a hex key to unscrew the middle screw on the top of the trigger.

Step 5



- Use same hex key to push through trigger retention pin on the side of the gun.

Step 6



- Pull out the trigger by grabbing the bottom and slowly rotating outwards.

To reassemble your device, follow these instructions in reverse order.