


# Equity Alarm Clock 13014 Alarm Replacement

Written By: Alaa

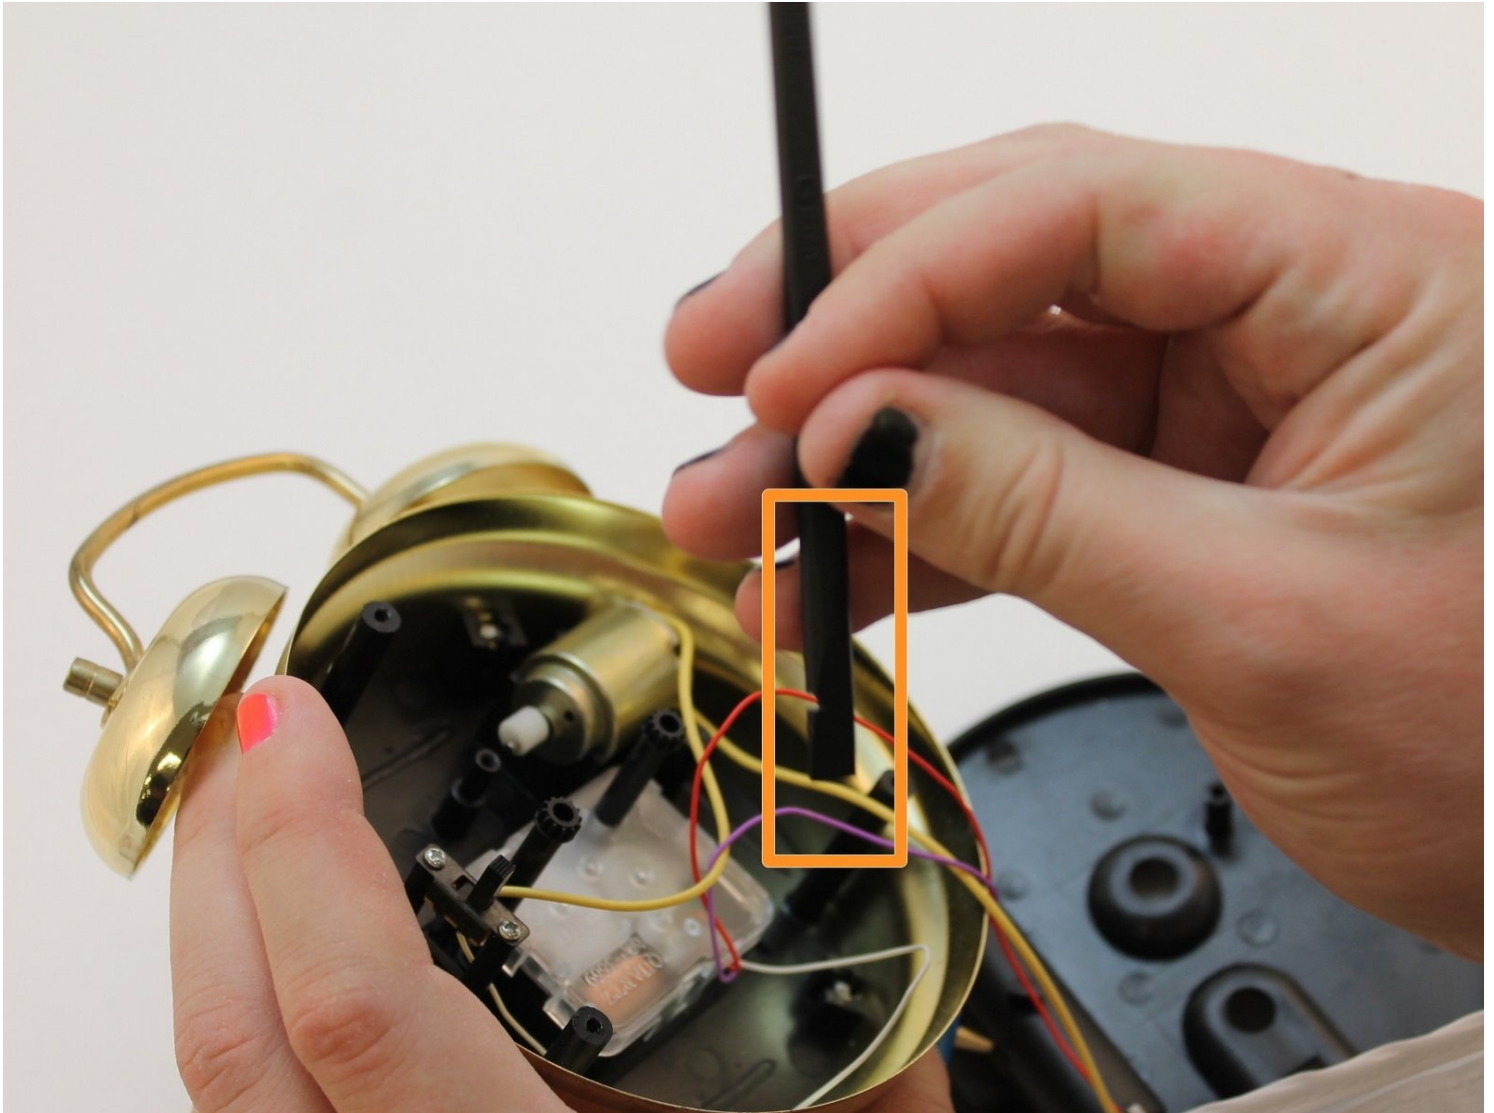


## TOOLS:

Spudger (1)


Soldering Iron 60w Hakko 503F (1)

### Step 1 — Alarm

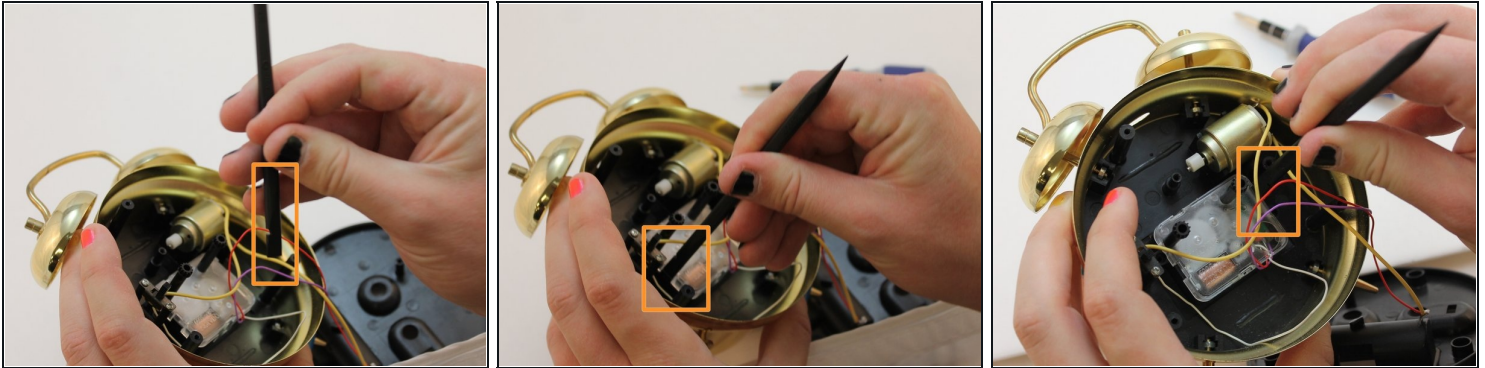


- Use a spudger to open and detach the wiring box from the clock. Insert the flat end of the spudger on both sides of the box, gently pry it open and detach it from the clock. Be careful while handling the box and clock to avoid any damage or injury.

### Step 2

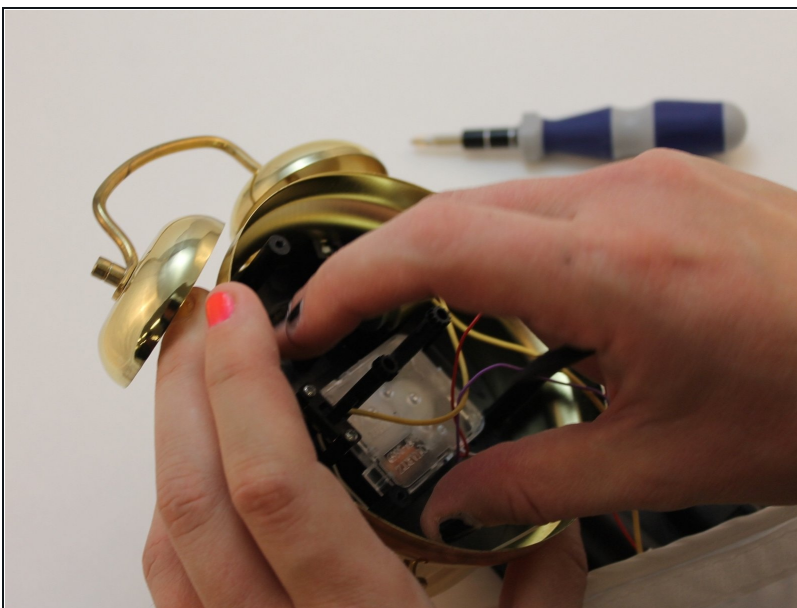

- To remove the box, please use your fingers to gently grasp it and lift it out. Be careful not to apply too much pressure or force that could damage the box .

### Step 3

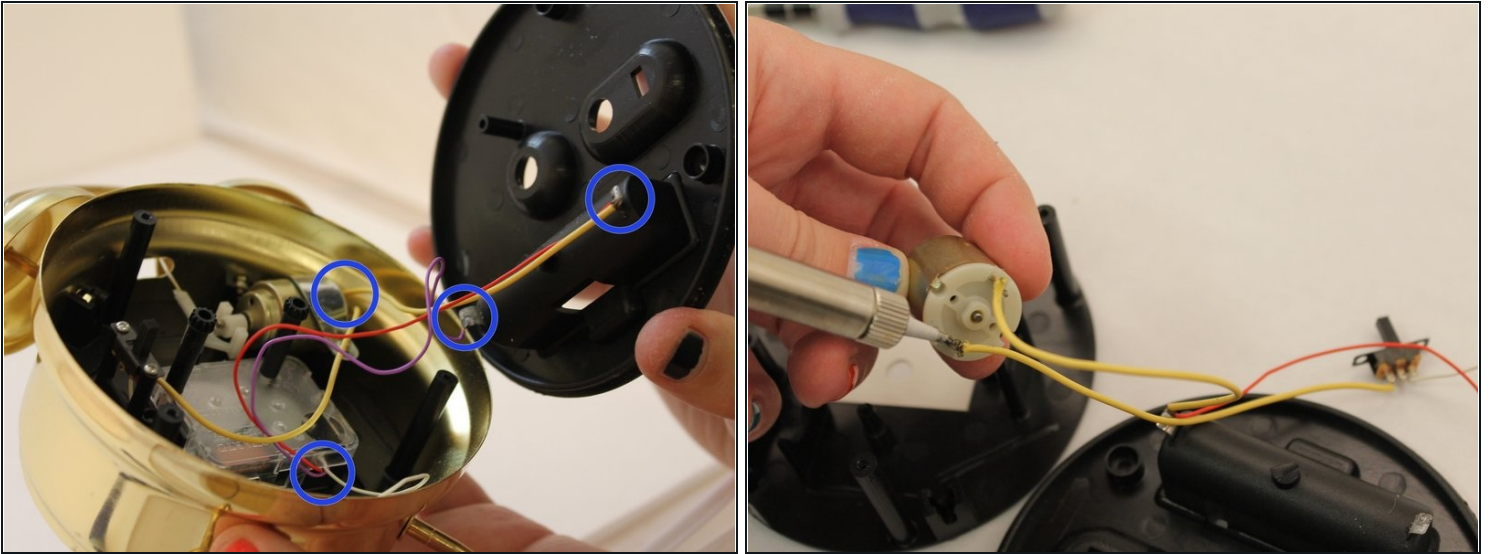

- Use a soldering iron to melt the solder on each wire connection to safely remove the wires.

### Step 4



- To replace the wiring box, use your hand to remove the old one and install a new one in its place.

---

To reassemble your device, follow these instructions in reverse order.