




Asus X55C HDD / RAM Cover Replacement

Asus X55C HDD / RAM Cover Replacement

Written By: ZFix

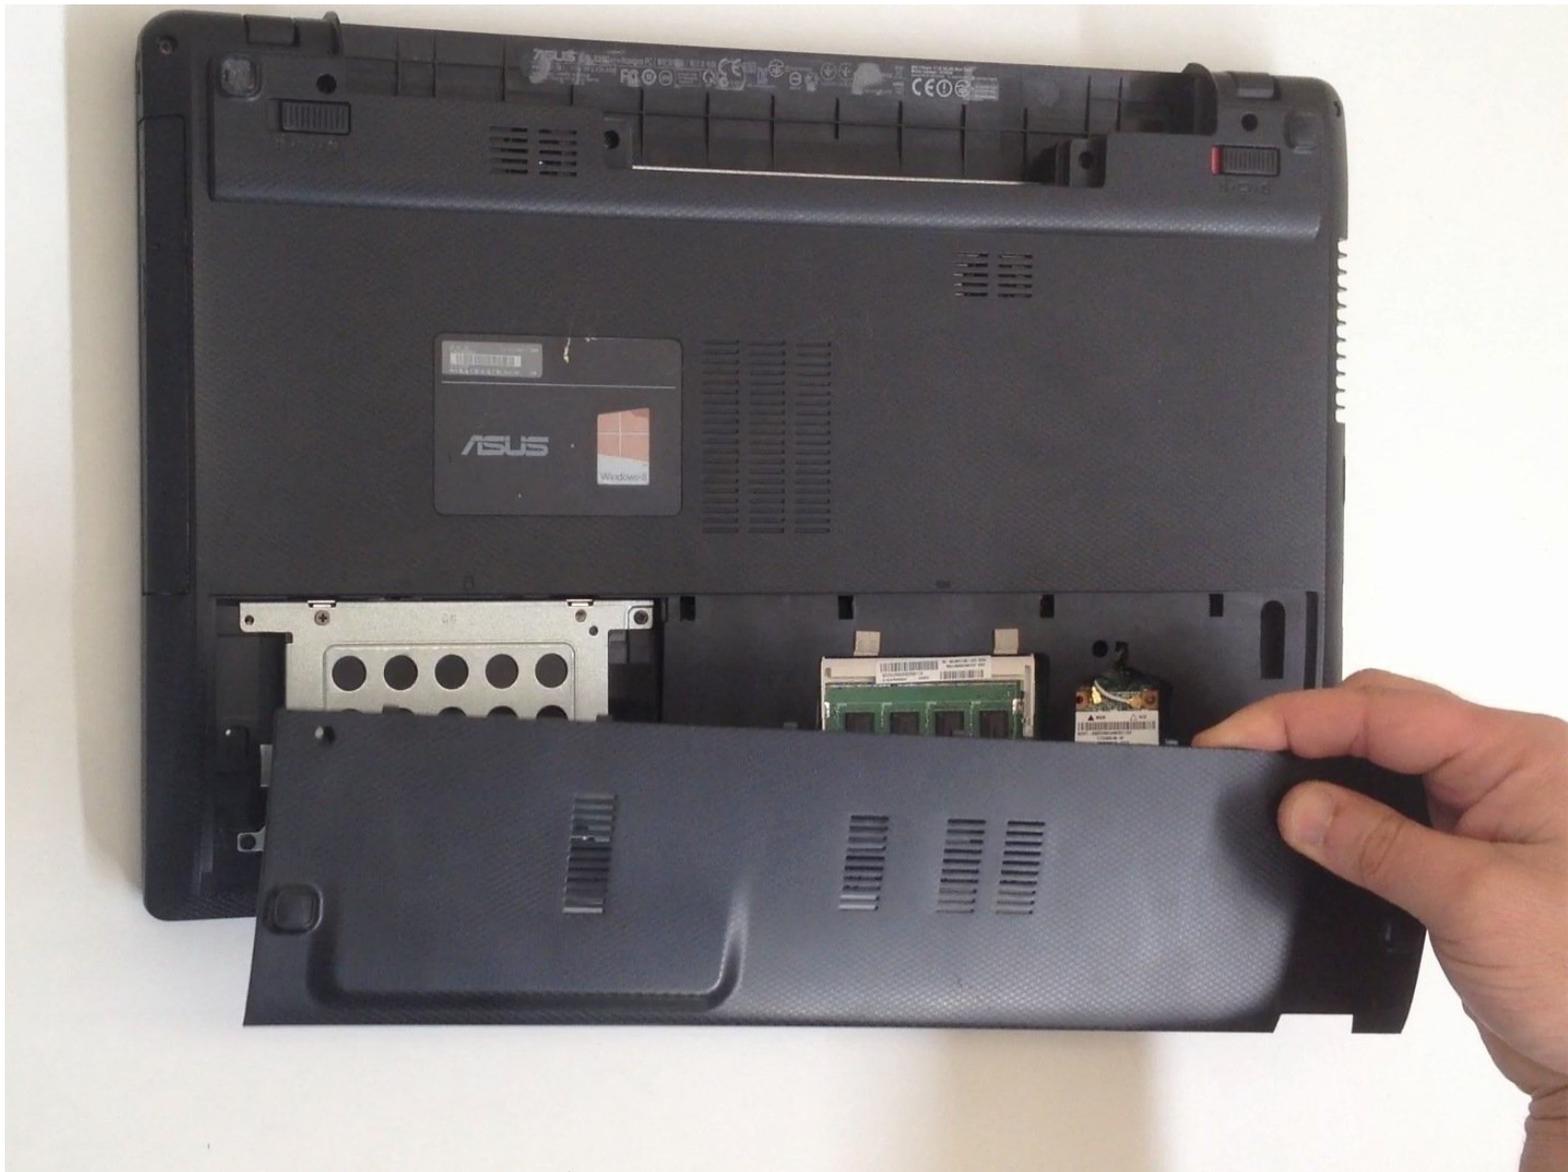

INTRODUCTION

How to change the HDD / RAM (Service) Cover.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — HDD / RAM Cover



- Switch off the Laptop and remove the Battery.
- Remove two screws securing the HDD / RAM (service) cover.
- Remove the cover.

To reassemble your device, follow these instructions in reverse order.