



# Uniden Dect 6.0 Battery Replacement

This guide will help a Uniden Dect 6.0 home phone owner replace the battery pack.

Written By: Mary



---

## INTRODUCTION

This guide explains the simplest and quickest way to to replace the faulty batteries on the back of the Uniden home phone!

---



### PARTS:

- [Uniden Replacement Battery](#) (1)
-

## Step 1 — Battery




- Locate the battery compartment on the back of the Uniden home phone.
- Place your finger on the groove, and pull directly back on the cover to access to the battery.

## Step 2



- Remove the white battery pack from the battery compartment.

### Step 3

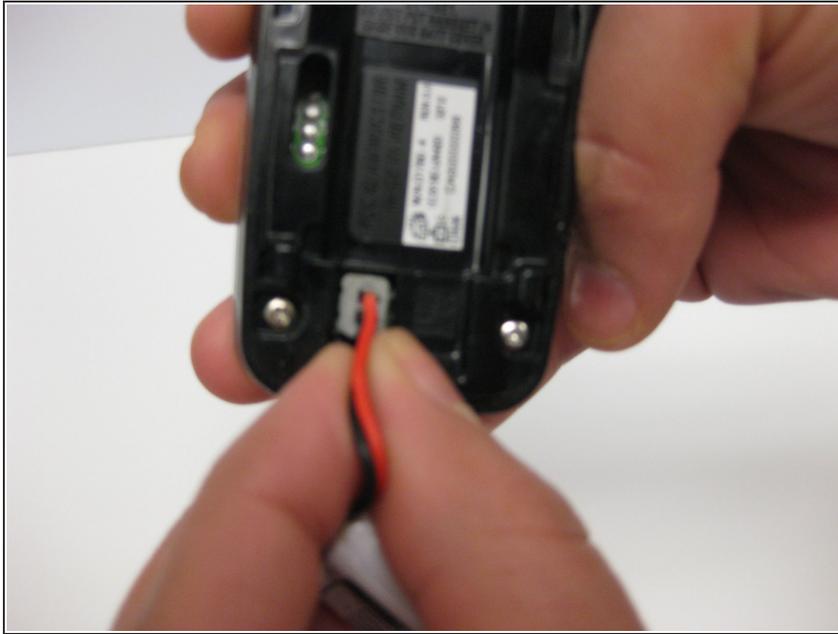

- Remove the red-and-black-wired port from the plug directly under the battery compartment.

To reassemble your device, follow these instructions in reverse order.