




Nokia X Display Assembly Replacement

By following this guide, you will learn how to open up the device and unhook the screen from the motherboard.

Written By: Avery Dorsey

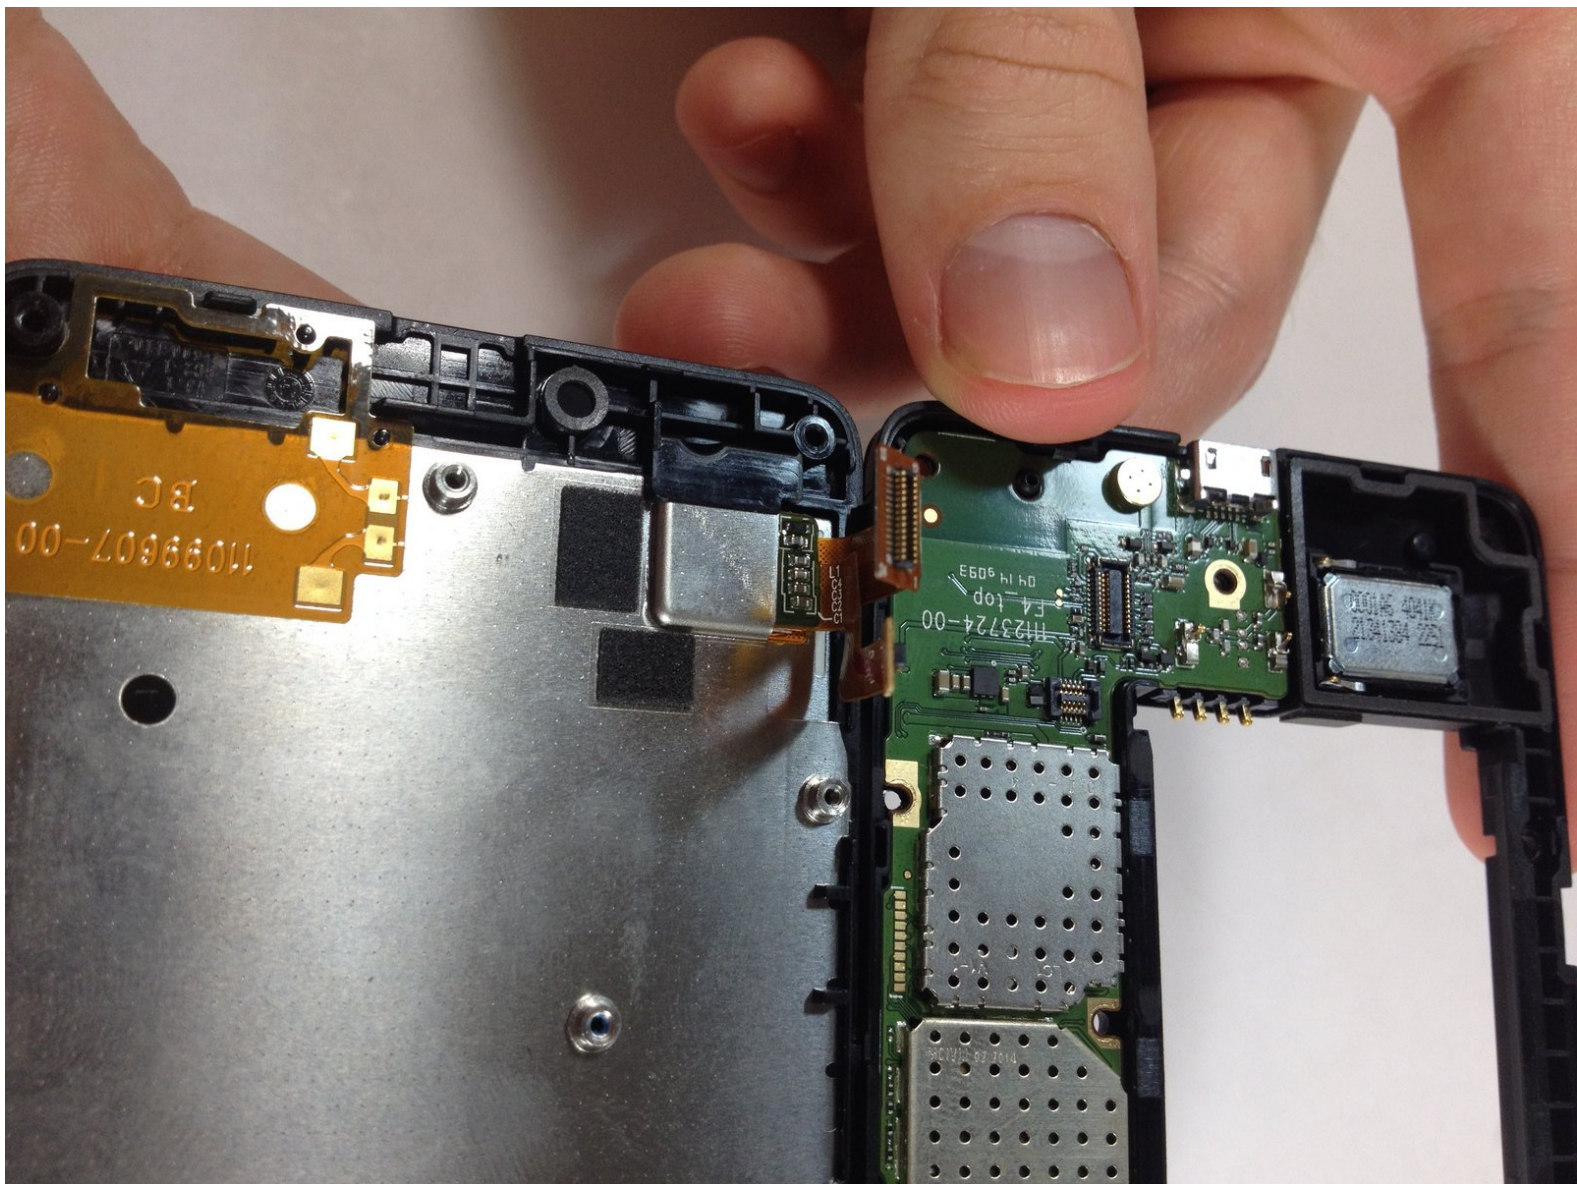

INTRODUCTION

Use this guide to replace the entire display assembly on your Nokia X.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery



- The first step is to remove the back cover off of the phone. To do this, place both your thumbs on the two top corners of the device and simply pop it off.

Step 2




- To remove the battery, simply use your finger to pry the battery out of its slot.

Step 3



- Inserting a new battery is as simple as lining up the gold connectors and sliding the battery in text-side down.

Step 4 — Display Assembly

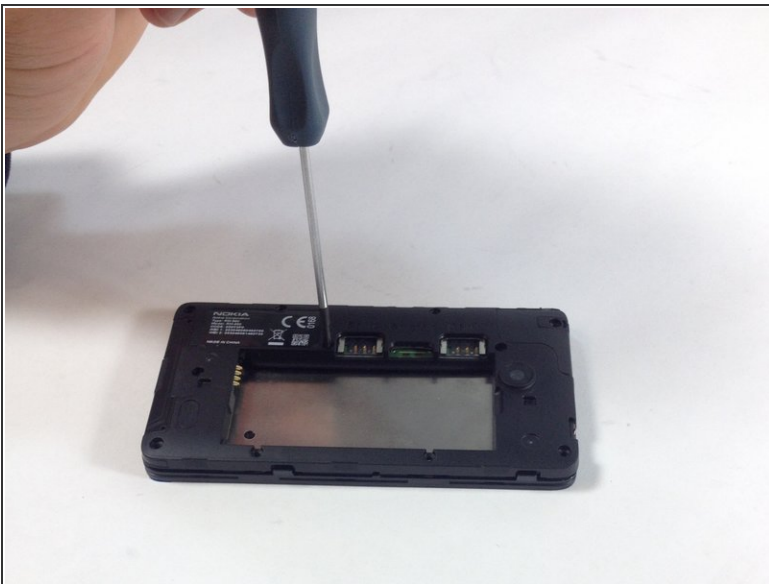


- Remove the four 5.33mm T5 Torx screws which are located in the corners of the phone.
- Remove the seven 4.00mm T5 Torx screws that line the phone between the corners.

Step 5



- To remove the screen from the motherboard, you will need to apply some force until you feel it snap off. If the connectors unhook themselves, don't worry.

Step 6

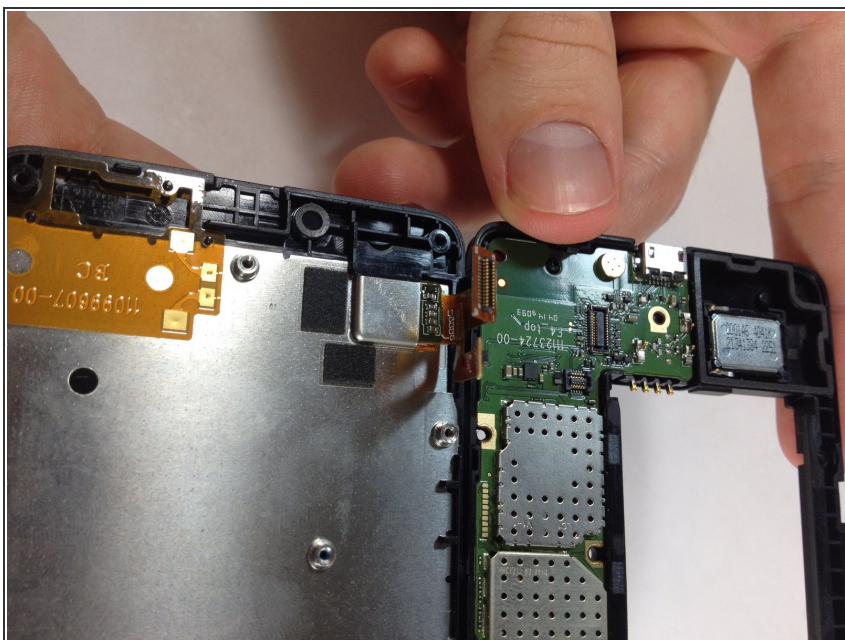

- If the connectors are still attached, simply unhook them by lifting the top of the connector with your finger.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-28 04:09:54 AM (MST).

