

HP ZBook 15 Screen Replacement

Is the screen on your laptop malfunctioning?...

Written By: Grant Terris



INTRODUCTION

Is the screen on your laptop malfunctioning? <u>Here</u> are some possible problems with your screen. If you determine that the screen needs to be replaced, follow this replacement guide!



Phillips #0 Screwdriver (1) Tweezers (1)


Step 1 — Battery





- Flip the laptop over.
- Slide the lever with the battery symbol beside it firmly until the battery pops out.
- Remove the battery from the laptop.

Step 2 — Screen

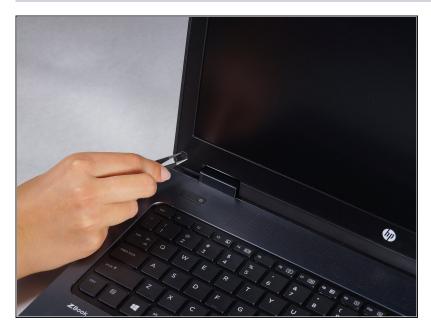

- Orient the laptop keyboardside up.
- Use <u>tweezers</u> to remove the adhesive covers for the screws.

Step 3



 Remove the two 6mm screws with a Phillips #0 screwdriver.

Step 4





• Pull the bezel away from the screen.

⚠ Be sure to go one edge at a time! Do not pull hard on the corners as it may crack the bezel.

Step 5



- Remove the four 3mm screws with a Phillips #0 screwdriver near the corners of the screen to remove the display.
- i Be careful not to confuse any screws. They are close together and you may remove the back cover instead of the display.

Step 6



- ⚠ Do not peel the tape from the side closest to the bottom of the screen panel! This may rip out the connector's wires.
- Gently lower the screen and lay it face down on the keyboard.
- Lift the corners of the tape closest to the top of the screen and peel toward the center carefully.
- Slowly pull the tape away from the sides.
- Lift the tape and disconnect the screen connector.
- ② You can leave the tape stuck to the cable connector and still be able to remove it.

To reassemble your device, follow these instructions in reverse order.