


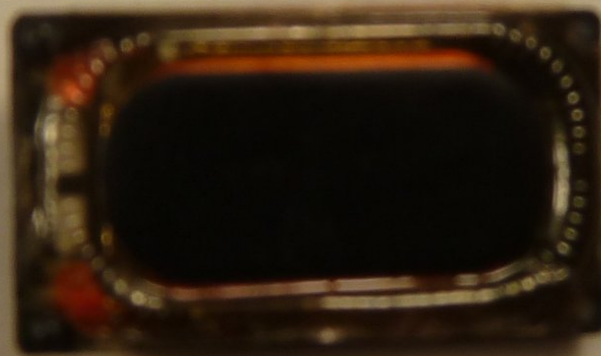

# HTC One V Loudspeaker Replacement

This guide will provide the steps to install a new back loudspeaker in your HTC One V.

Written By: abebe alemu



# INTRODUCTION

If your speaker sounds distorted or muffled, or completely does not work, a broken loudspeaker might be the problem. A new one can be installed using this guide.



## TOOLS:


- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)



## PARTS:

- [HTC ONE V LoudSpeaker](#) (1)

## Step 1 — Disassembling HTC ONE V Bottom Assembly

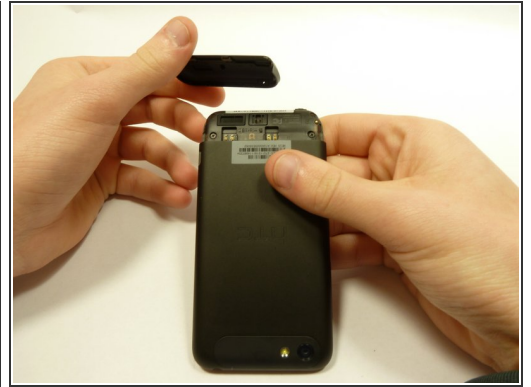



- Power off your device.
- Remove the bottom cover by sliding it off.

## Step 2




- Remove the SIM card.
- Remove the four screws securing the bottom casing.
  - Two 3.0 mm Phillips #0 screws in the top left and right corners.
  - Two 2.0 mm Phillips #0 screws in the bottom left and right corners.

### Step 3

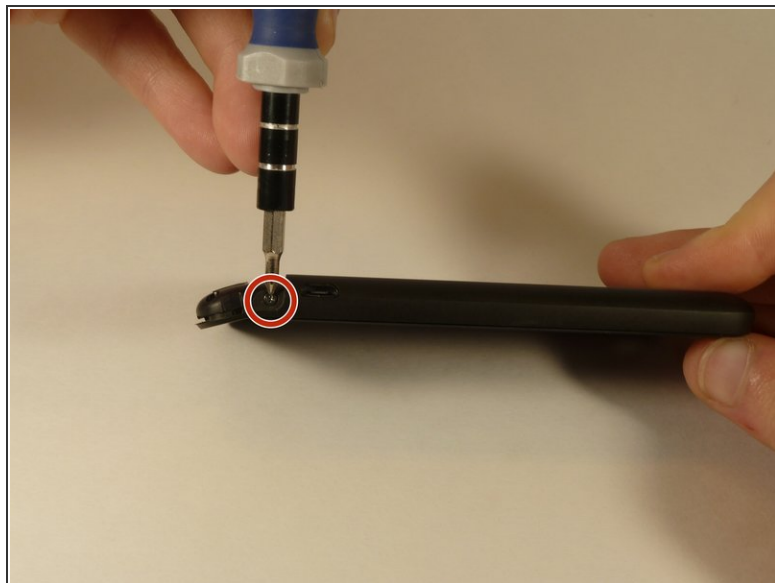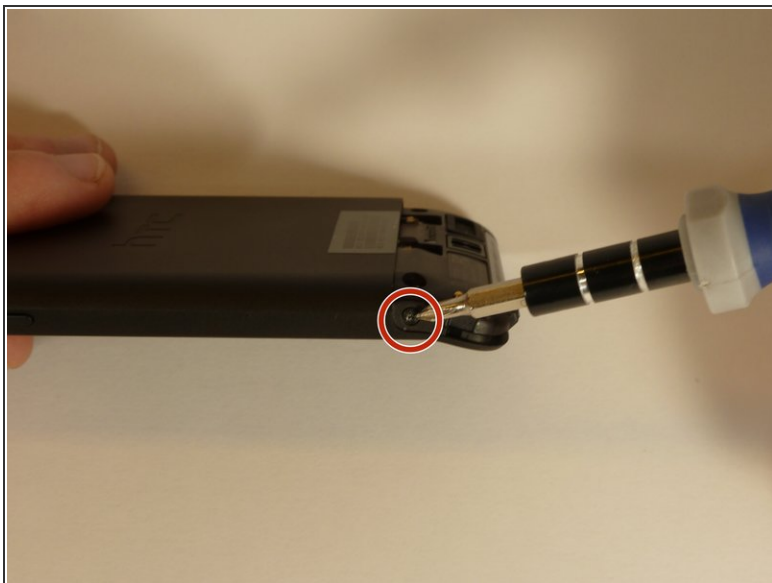

- Remove the 2.0 mm Phillips #0 screws on either side of the phone.



### Step 4

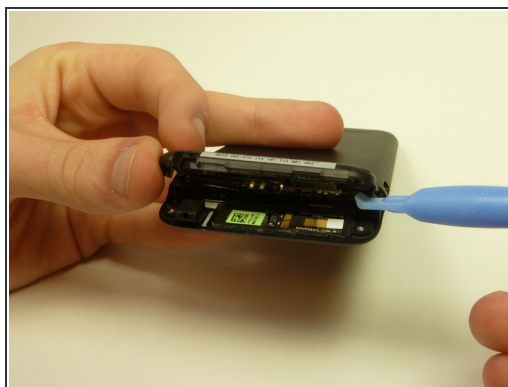

- Use a plastic opening tool to pry open the bottom casing.
- Remove the bottom casing by pulling it towards you.




## Step 5 — Loudspeaker

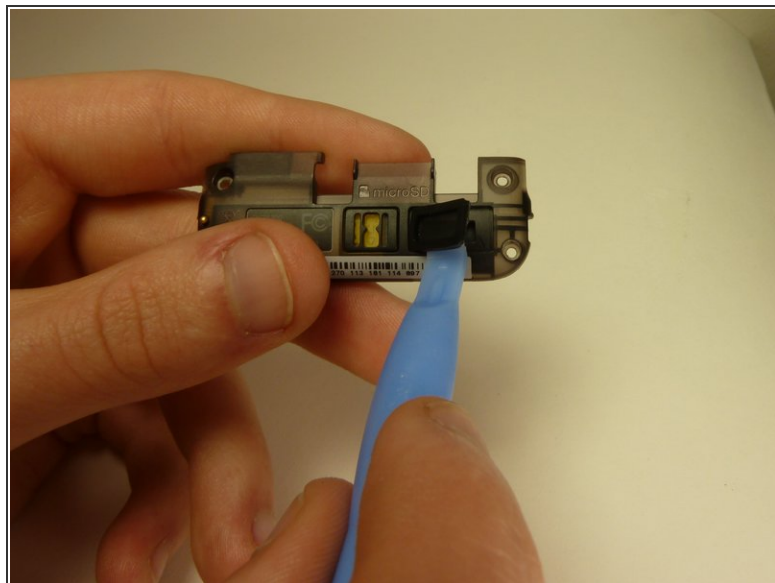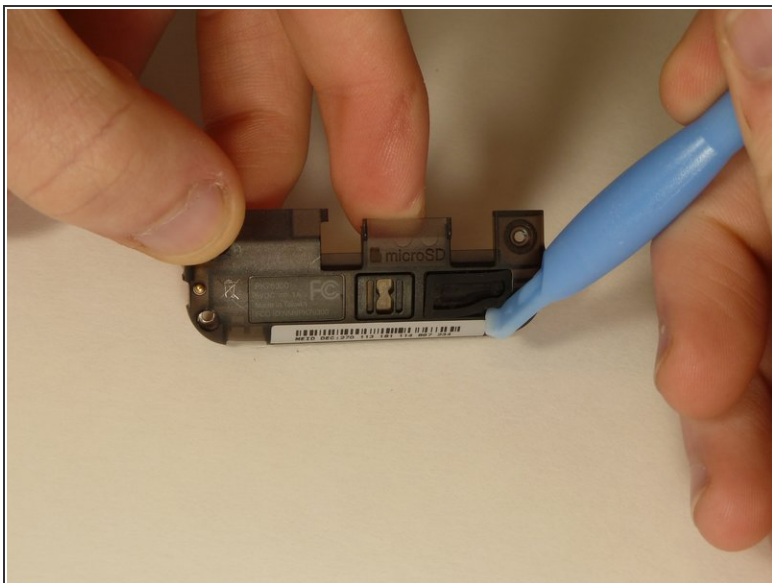

- Using a plastic opening tool, peel off the speaker cover.

## Step 6

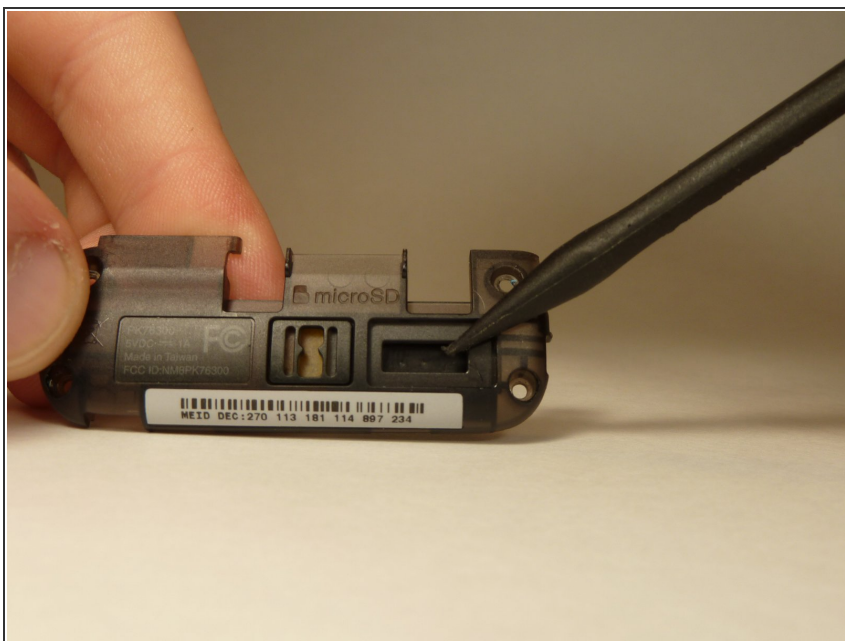

- Use the spudger to push the speaker out of its casing.

To reassemble your device, follow these instructions in reverse order.