



Dell Venue 7 Battery Replacement

This guide will explain how to replace the battery.

Written By: chavez



INTRODUCTION

Before starting, make sure to purchase a [replacement battery](#) that works with the Dell Venue 7.



TOOLS:

- [Spudger](#) (1)
 - [Tweezers](#) (1)
-


Step 1 — Rear Case



- Use a spudger or your fingers to pry off the back case.

⚠ If your case is badly damaged, use caution because the fragments may be sharp.

Step 2 — Battery

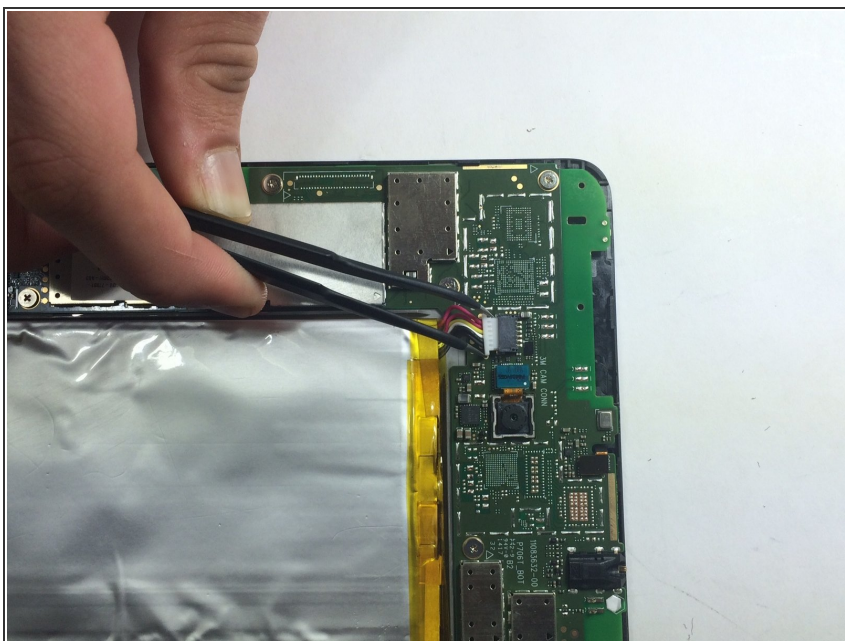

- Gently disconnect the battery from the motherboard using your fingers or a pair of tweezers.

Step 3



- Remove the battery by pulling it from the edges and carefully peeling it off of the base.
- ⓘ There is adhesive keeping the battery in place, so don't be afraid to use a little extra force.
- ⚠ Do not bend or warp the battery in any way as it can be a fire hazard.

To reassemble your device, follow these instructions in reverse order.