




HP ZBook 15 Hard Drive Replacement

This guide will show you how to remove the hard drive from your laptop.

Written By: Grant Terris

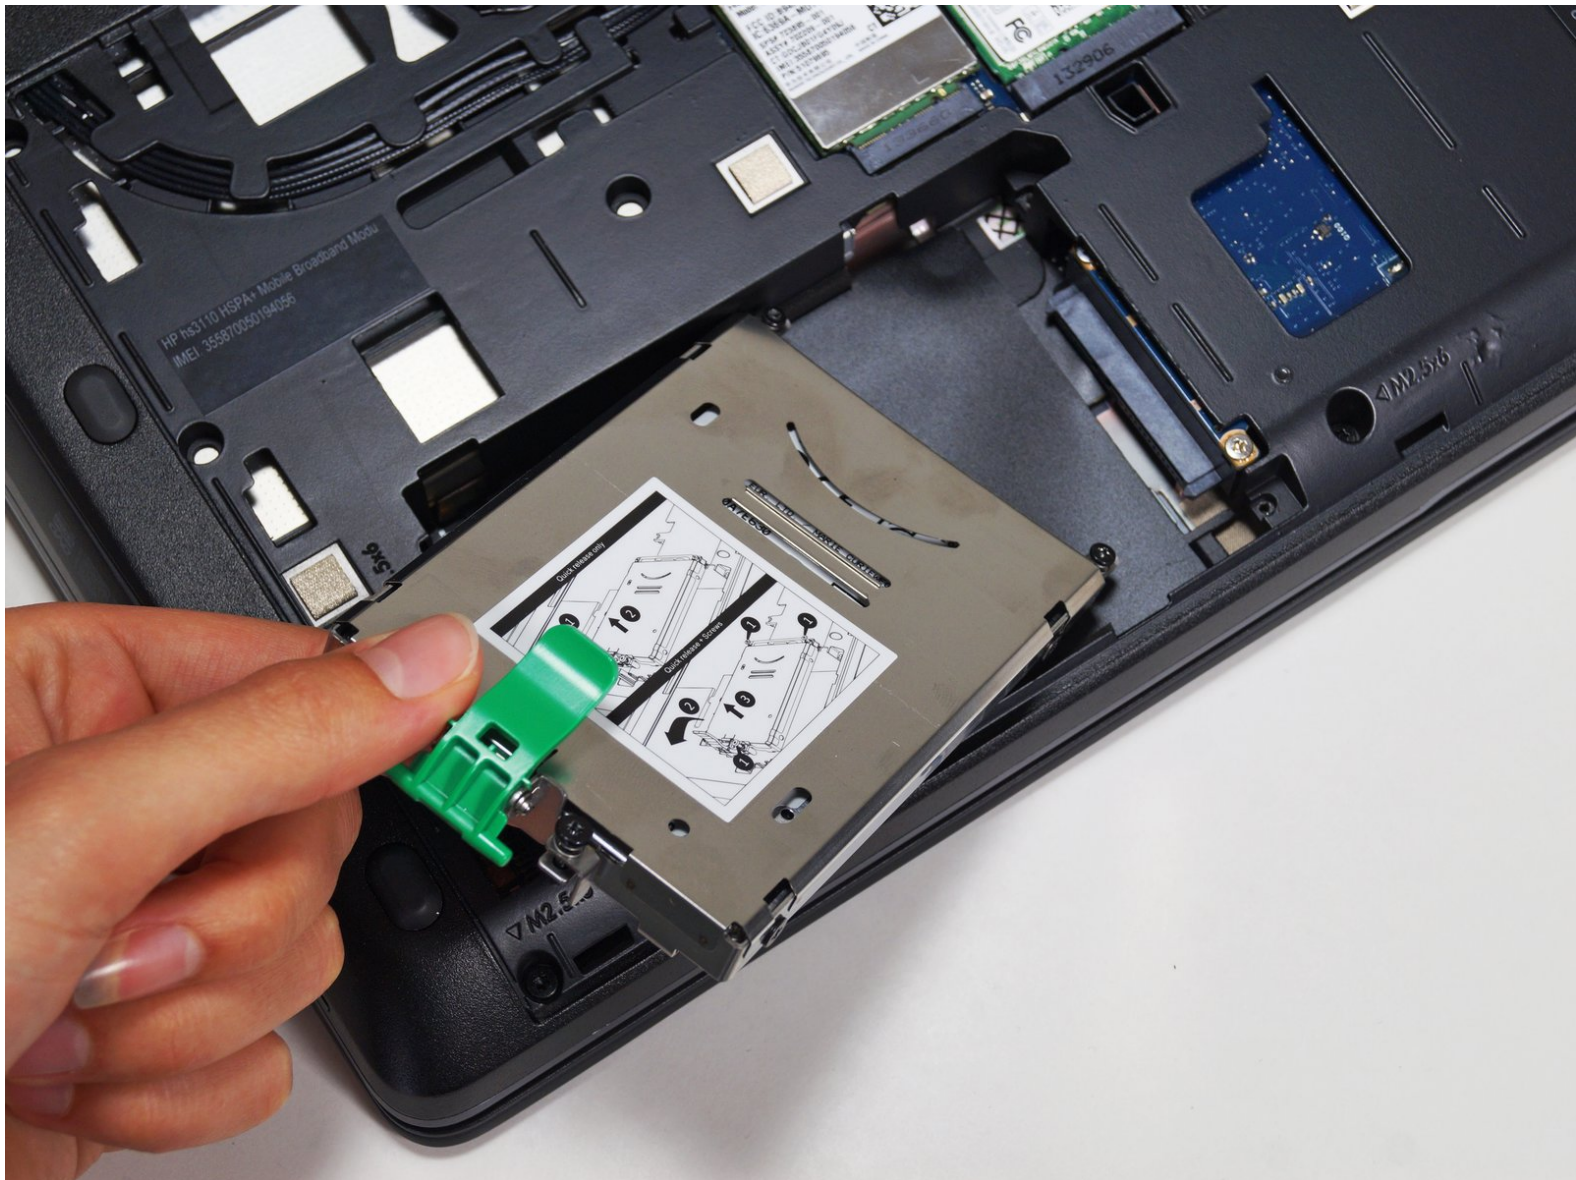

INTRODUCTION

[Here](#) is some information about what to do if your computer gives you a message saying "Low Disk Space." If you turn on your computer and it won't boot properly, read [this troubleshooting guide](#). If you determine that you need to replace or upgrade your hard drive, follow this replacement guide!



TOOLS:

- [Phillips #0 Screwdriver](#) (1)



PARTS:

- [1 TB SSD / Upgrade Bundle](#) (1)
- [250 GB SSD / Upgrade Bundle](#) (1)
- [500 GB SSD / Upgrade Bundle](#) (1)
- [2 TB SSD](#) (1)

Step 1 — Battery



- Flip the laptop over.
- Slide the lever with the battery symbol beside it firmly until the battery pops out.
- Remove the battery from the laptop.

Step 2 — Back Cover




- Slide the right lever firmly to the right.
- Slide the cover towards yourself to remove it.

Step 3 — HP ZBook 15 Hard Drive Disassembly




- Unscrew the three captive screws holding the drive in place with a Phillips #0 screwdriver.
- ❗ The screws will remain inside the springs of the hard drive caddy cover.

Step 4

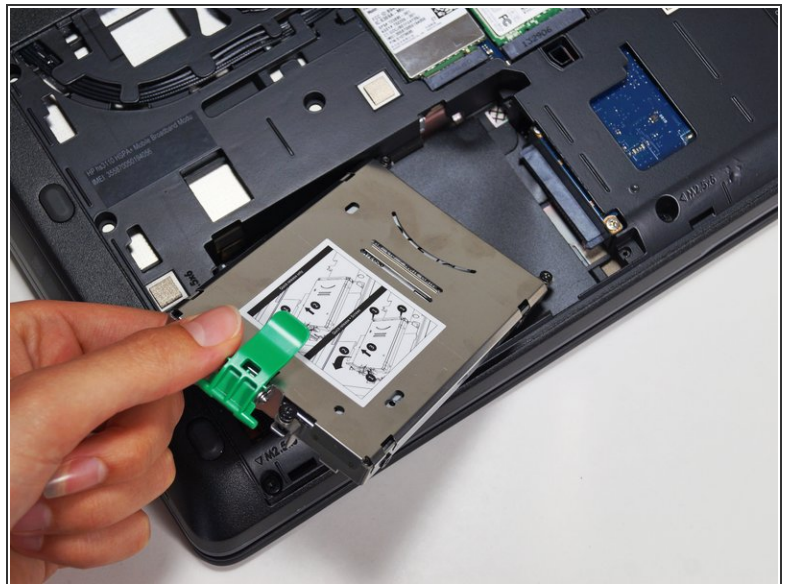

- Pull the green tab away from the metal casing and lift the drive out.

Step 5 — Hard Drive

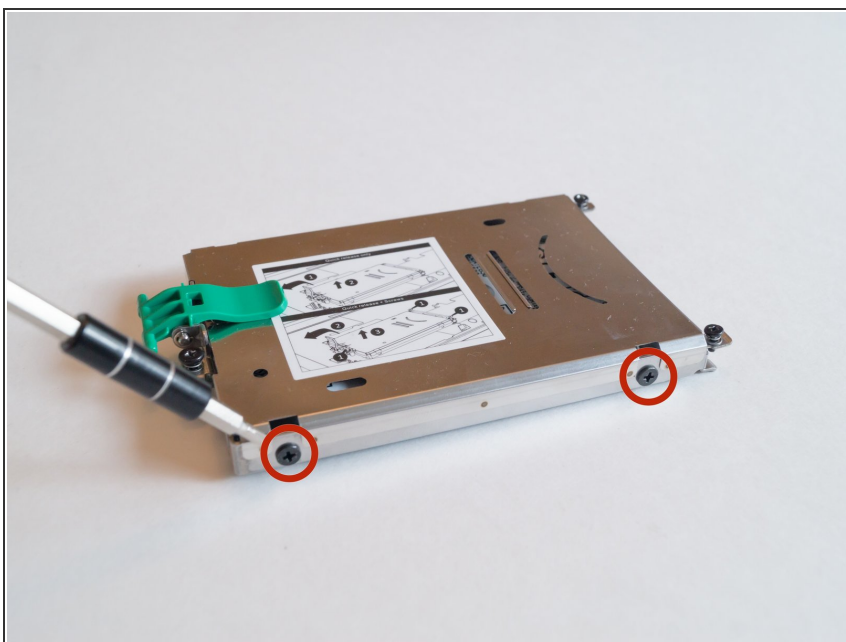

- Remove the two 3mm screws on either side of the device with a Phillips #0 screwdriver to remove the drive caddy.

To reassemble your device, follow these instructions in reverse order.