


# How to rewire a Nostalgia Electrics PCM805

Guide for stripping and rewiring the electrical wires to the motor and heating element.


Written By: Carlton



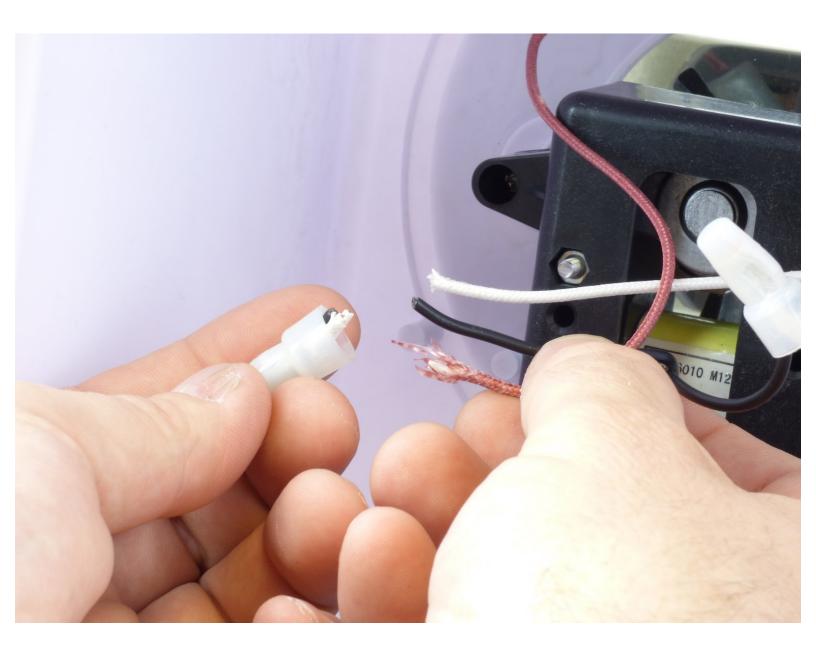




### Step 1 — Nostalgia Electrics PCM805 Wiring Teardown

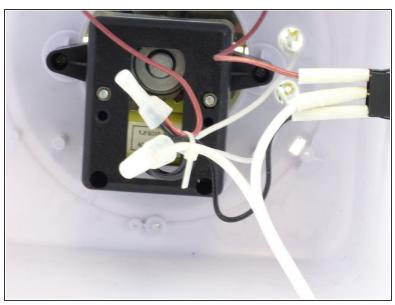



- Locate the tie strap holding the wires and cut with a pair of scissors.
- (i) Use care not to snip the wires.

## Step 2

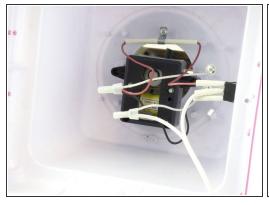







- Make note of the wiring arrangement of each bundle before this step.
- Using wire cutters, cut each wire as close to the wire connector as possible.
- Cut the wires in both bundles.
- To reassemble the cotton candy maker after cutting the wires, follow our rewiring guide.

### Step 3 — How to rewire a Nostalgia Electrics PCM805

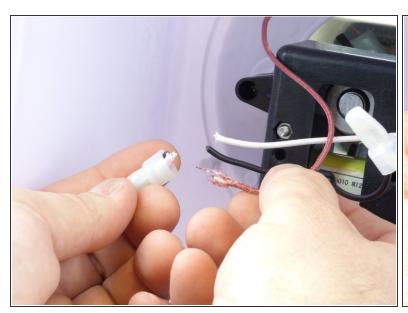

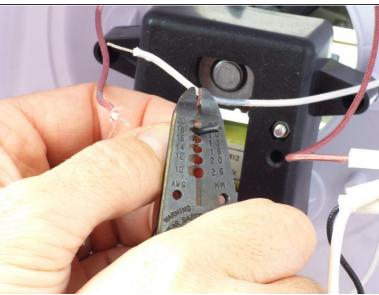

• Using the wire stripper, remove 1/2 inch of the wire insulation at the end of each wire to expose the bare wire for re-connection.

## Step 4







- Twist the exposed ends of the wires so that they stay together.
- Push the wire cap onto the exposed ends while holding the wires and twist in a clock-wise direction until it is tight.
- Repeat this process for both bundles of wires.

↑ Do not attempt to power on the device without the wire caps on or mix wires between the bundles.