




Azpen A720 Back Cover Replacement

How to replace an Azpen A720 back cover.

Written By: Ben

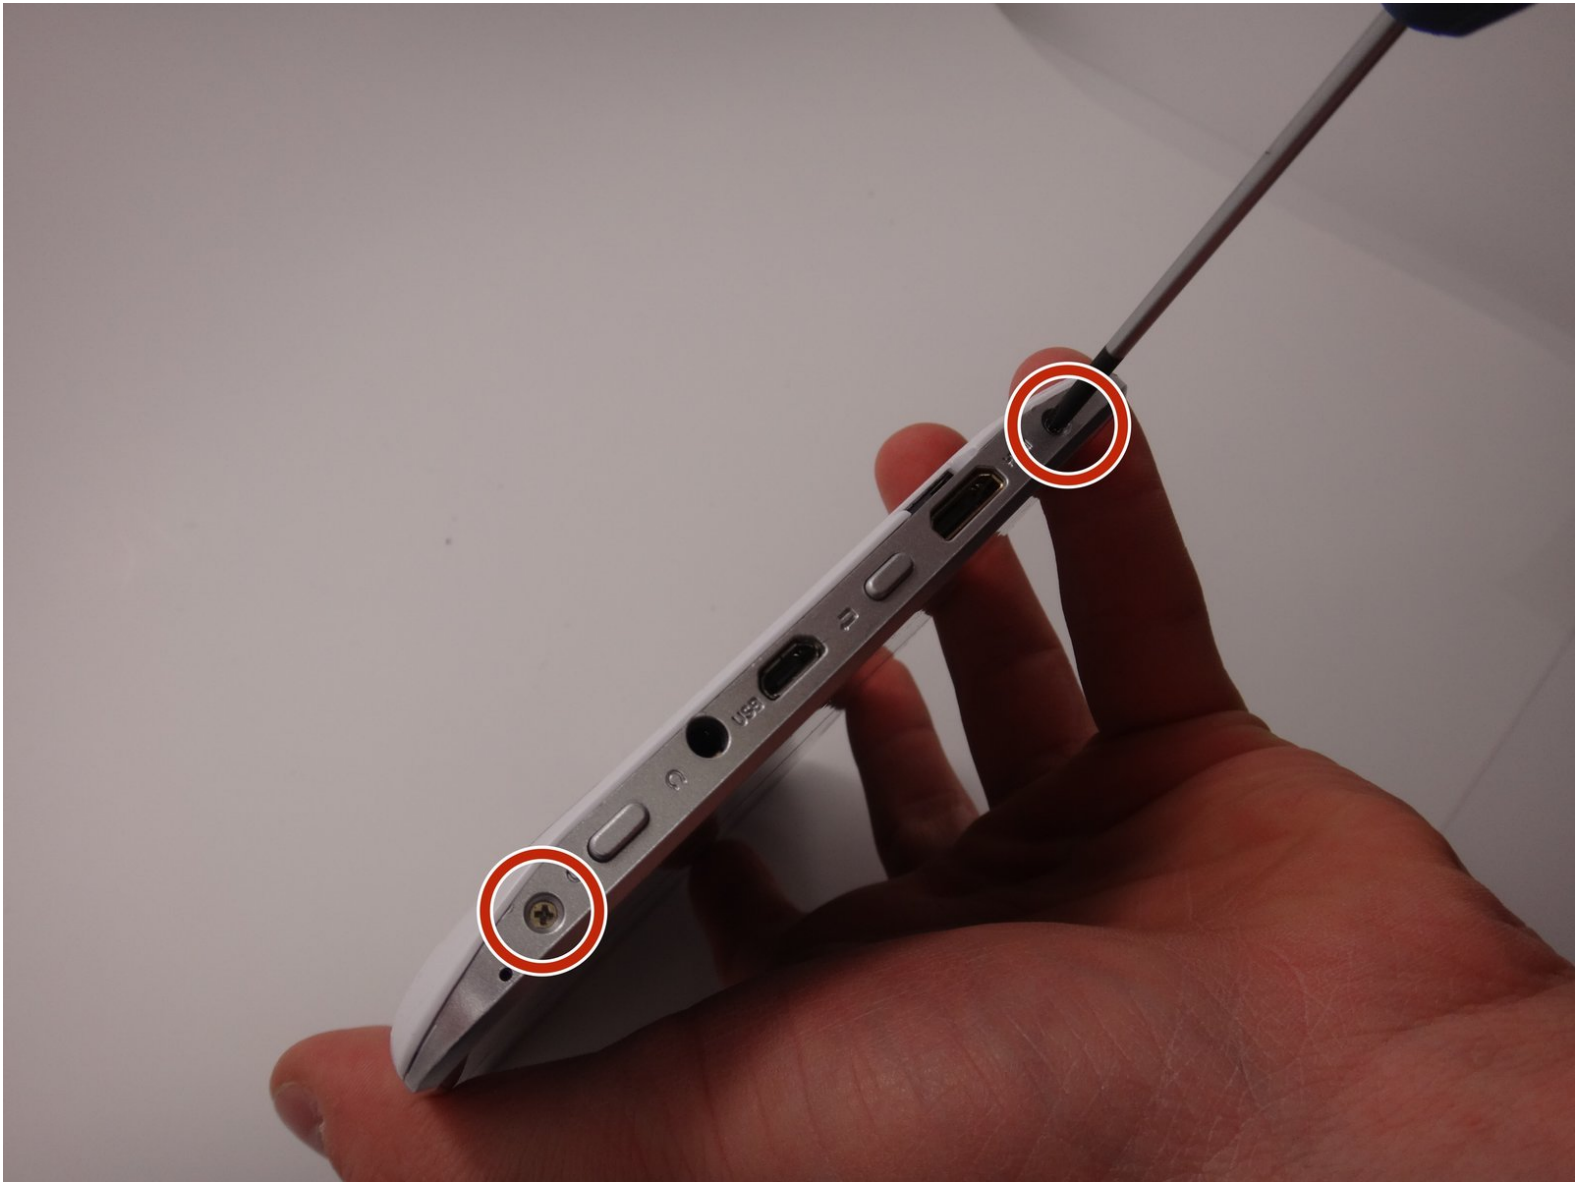

INTRODUCTION


All of the key components that could fail are accessed by removing the Azpen A720 back cover. The process will include removing a couple of screws and then utilizing the plastic opening tool to pry the cover apart from the body of the device.



TOOLS:



- [Phillips #00 Screwdriver](#) (1)
 - [Magnetic Project Mat](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Back Cover

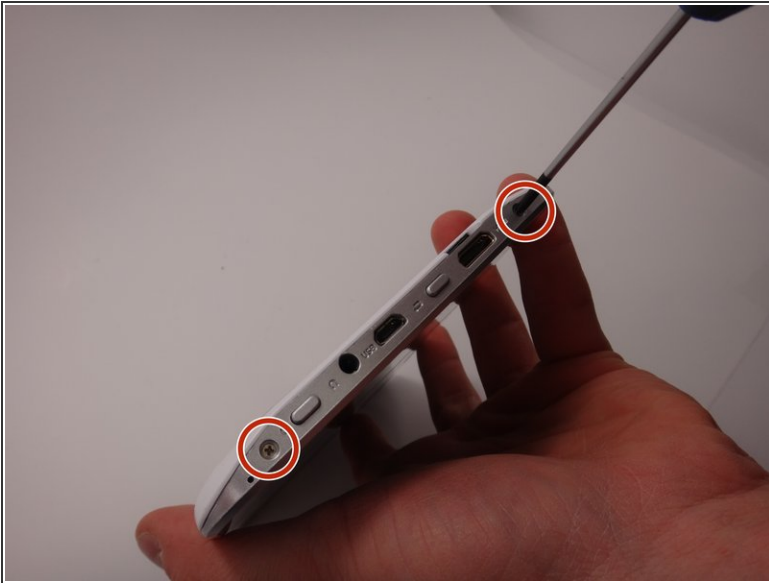

- Use a Phillips #00 screwdriver to remove the two 4mm screws found on the top edge of the tablet near the power button.

Step 2

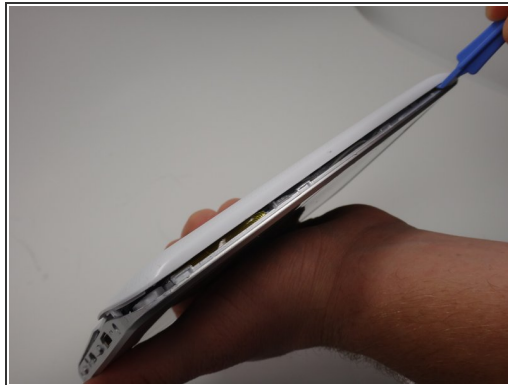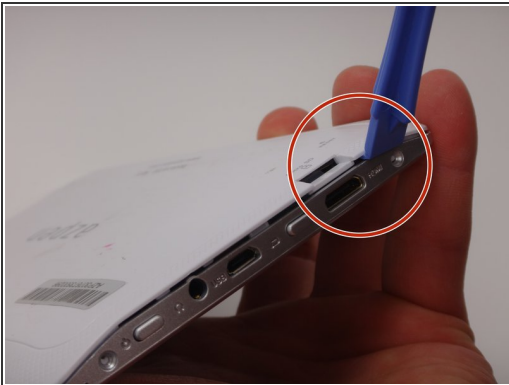

- Use the plastic opening tool to pry the white back from the silver frame. Start near the micro SD slot.
- ⓘ Slide the plastic opening tool around the perimeter of the casing until the back is disconnected.

Step 3



- Remove the rear casing.

To reassemble your device, follow these instructions in reverse order.