


Panasonic KX-E603 Printwheel Replacement

This guide will demonstrate how to replace the printwheel in your Panasonic KX-E603 Electronic Typewriter.

Written By: Lindsay Stratis

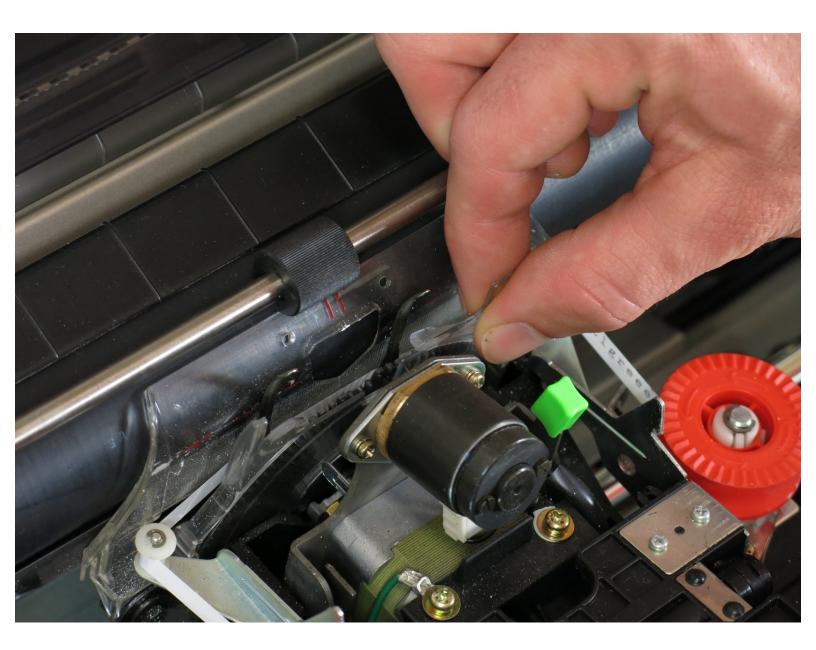

INTRODUCTION

This guide will demonstrate how to replace the printwheel on your typewriter, step-by-step.

Step 1 — Ink Cartridge





Open the lid of the typewriter.

Step 2





To release the green locking lever, pull it towards you.

Step 3





Gently lift to remove the old ink cartridge.

Step 4 — Printwheel





- Firmly grasp either one, or both of the plastic printwheel ends protruding from the carriage as seen.
- Gently lift the printwheel while slightly pushing forward to remove the printwheel from its housing.

To reassemble your device, follow these steps in reverse using your new printwheel.