



4Sight 9 Cover Replacement

Prerequisite Guide-Only. This guide will demonstrate how to remove the cover of the tablet.

Written By: Hali Ramirez



INTRODUCTION

To remove the cover of the tablet you will need a plastic prying tool and 1mm Phillips Screwdriver. Be sure to allot roughly 2-3 minutes for the process. If you don't have a plastic prying tool, your fingers should suffice.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tool](#) (1)
-

Step 1 — Cover




- Place the tablet on its side so that the two screws are facing upward.
- Remove two 1 mm screws from the left side of the tablet using a Phillips #00 screwdriver.

Step 2



- Pry the case away from the device slowly by sliding a plastic opening tool along the device.
- Once loosened, use your hands to separate the case from the device.

Step 3

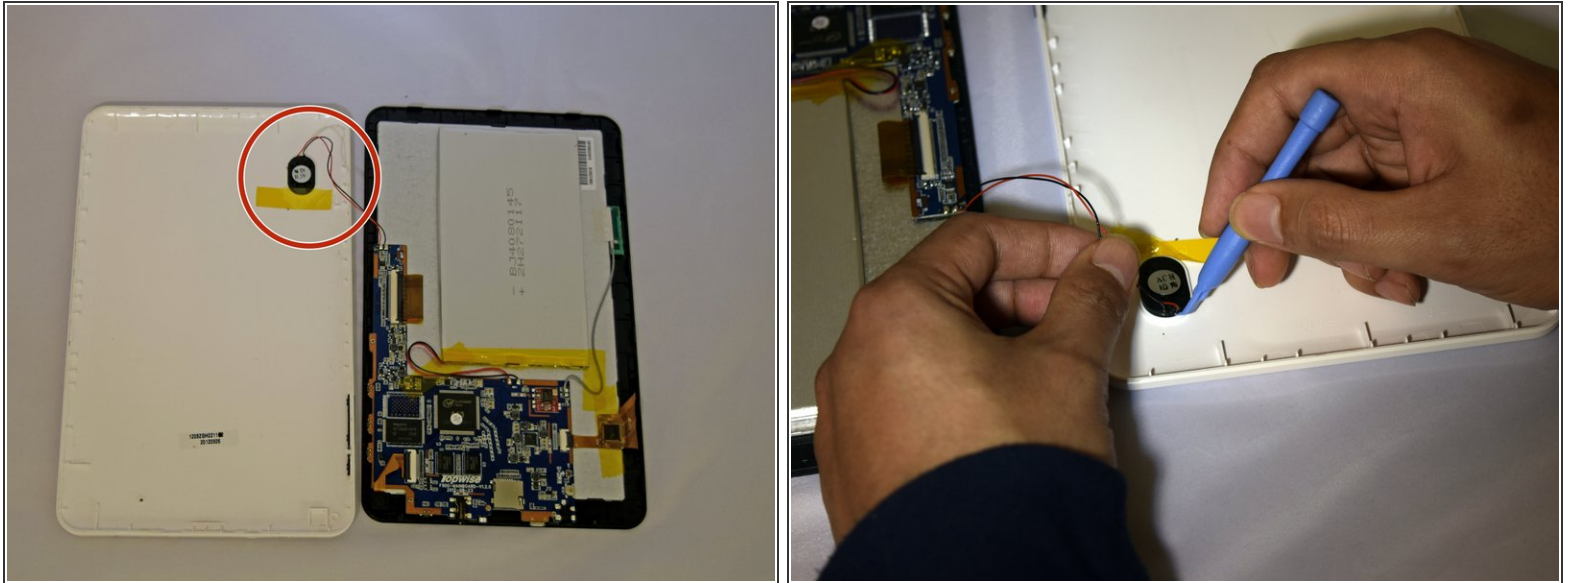

- Hold the positive and negative wires as close as possible to the speaker.
- Use an opening tool and fingers to simultaneously lift the speaker from the cover.

To reassemble your device, follow these instructions in reverse order.