

Sony Xperia M4 Aqua Rear Camera Replacement

This is the step-by-step guide for replacing the Sony Xperia M4 Aqua rear camera.

Written By: Sarah Wetzler



INTRODUCTION

This is the step-by-step guide for replacing the Sony Xperia M4 Aqua rear camera.



TOOLS:

- Heat Gun (1)
- iFixit Opening Tools (1)
- Tweezers (1)
- Suction Handle (1)
- iFixit Opening Picks set of 6 (1)
- Spudger (1)
- Phillips #00 Screwdriver (1)

Step 1 — Back Cover



 Place the phone face-down, and use a heat gun or hair dryer to evenly heat the back surface until to soften the adhesive.

Step 2



 Attach a suction cup to the back of the M4 Aqua by carefully pushing down on it near the top of the phone.

Step 3






While Pulling on the suction cup, slide a thin plastic spacer (guitar picks work well) between the back cover and the phone. Slide it around the edges to break the adhesive seal. Be careful, but don't be afraid to use some force. You should hear a sticky breaking sound.

Step 4



 Remove the back cover by pulling it from the chassis. it is flexible and can be bent, be careful.

Step 5 — Battery

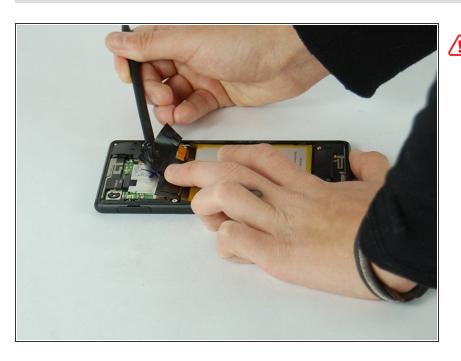

Remove copper plated tape and any other securing adhesive with a nylon spudger. Remove carefully, as it has the potential or tear if too much force is used.

Step 6



 Unhook the battery connector carefully. It is possible to damage the battery if too much force is used.

Step 7



Pry the battery from the phone with the nylon spudger. There is a small amount of adhesive underneath the battery, so a bit of force is required. The battery is malleable, so it is possible to dent the battery if too much force is applied in one spot.

Step 8



 Remove the battery once all of the adhesive is broken, and the connector is unplugged.

Step 9 — Rear Camera



 Remove the four hex head 3mm screws at each corner of the motherboard with a screwdriver.

Step 10





Remove three pieces of the securing bracket using tweezers

Step 11





- Detach the rear camera connector from the front of the motherboard.
- Remove the rear camera with your fingers or tweezers.

To reassemble your device, follow these instructions in reverse order.